



- 1 OPENING OF THE FREEZE/FIRE STATUS WILL REQUIRE MANUAL RESET.
- 2 WHEN CONNECTING INTERLOCKS AND FREEZE/FIRE STATUS YOU MUST REMOVE THE FACTORY JUMPER WIRES BETWEEN TERMINALS 26 AND 29 (FUNCTION LOSS) AND 26 AND 30 (ENABLE).
- 3 WHEN IN "AUTO MODE" 0-10VDC SPEED REFERENCE WILL COME FROM TERMINAL 1. IN "MANUAL MODE" SPEED REFERENCE WILL COME FROM WIRE TO ANALOG IN 1 TERMINALS 17-18 AND CHANGE BIT 0 OF PARAMETER 320 ("ANALOG IN CONFIG") TO 0 (CURRENT). ADJUST SCALED PARAMETERS 322 AND 323 AS REQUIRED.

--- CONNECTIONS SUPPLIED BY CUSTOMER

REV. I	DATE	BY	ECN/CR. NO.
A	2/26/07	REH	
Rockwell Automation			
DR. BY JRF/ACI	CHK. BY JFH/ACI	ENG.	
DATE 1/28/05	DATE 1/28/05	DATE	
THIS DRAWING IS THE PROPERTY OF ROCKWELL AUTOMATION, INC. OR ITS SUBSIDIARIES AND MAY NOT BE COPIED, USED OR DISCLOSED FOR ANY PURPOSE EXCEPT AS AUTHORIZED IN WRITING BY ROCKWELL AUTOMATION, INC.			
TITLE	DWG. NO.	97D01247-	
60-200P @ 60VAC & 575VAC			
60-200P @ 460VAC & 60-150P @ 575VAC			
NEXT SH.	1	SH.	1