



(1) IF THE "DRIVE/BYPASS ENABLE" RELAY (CR) IS USED, RED JUMPERS "J1" AND "J2" MUST BE REMOVED FROM RELAY (CR).

(2) IF HUMAN INTERFACE MODULE OR COMMUNICATION MODULE WILL BE USED FOR START/STOP LOGIC, JUMPER BETWEEN TERMINALS 18 AND 19 MUST BE MOVED TO 19 AND 20.

REV. I	DATE	BY	ENR/CR. ND.
A	1/28/05	JRF	
B	5/20/07	REH	

DR. BY	JRF/ACI	CHK. BY	JFH/ACI	ENG.		DWG. NO.	98D01217-	NEXT SH.	1	SH. NO.	1
DATE	1/20/05	DATE	1/20/05	DATE							

THIS DRAWING IS THE PROPERTY OF ROCKWELL AUTOMATION, INC. OR ITS SUBSIDIARIES AND MAY NOT BE COPIED, USED OR DISCLOSED FOR ANY PURPOSE EXCEPT AS AUTHORIZED IN WRITING BY ROCKWELL AUTOMATION, INC.

TITLE: **PLANT DRAWING PF 700 - STYLE C, BASIC BYPASS**

SIZE: **1/8" x 11" @ 450VAC**