




Busbar For Bulletin 1492-SP and 1492-FB
(Cat 1492-A_...)




WARNING

To prevent electrical shock, disconnect from power source before installing or servicing.

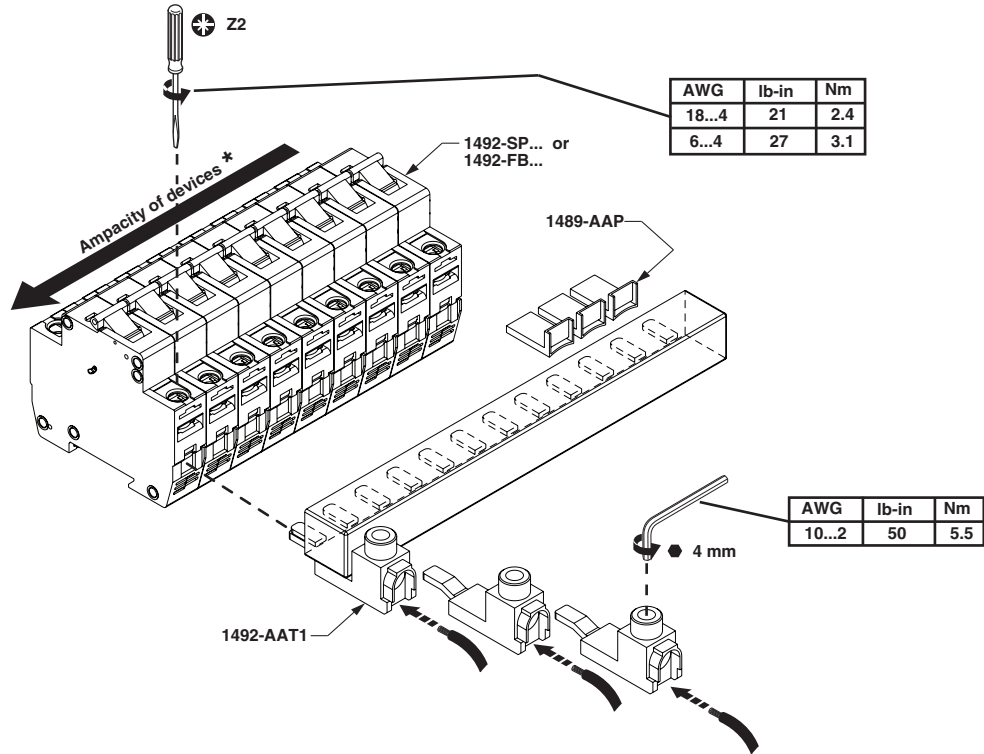

* **NOTICE** Position high current drawing devices nearer to the Feed Terminal, 1492-AAT1.

Temperature-Current Characteristic for Bulletin 1492-A_...

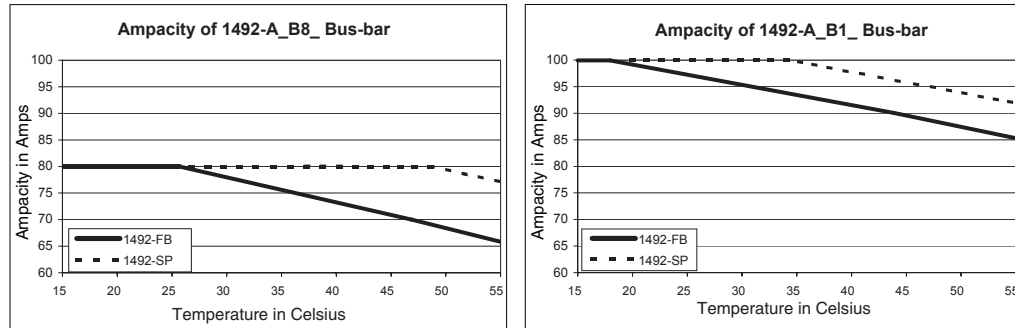

10000049753 (Version 00)

Rockwell Automation

ONE SIDE PRINTED BODY STOCK WHITE BODY INK BLACK	148 mm W x 210 mm H (A5)	Size to Suit
	FLAT	FOLD
MATERIAL	SIZE	

Rockwell Automation		CONFIDENTIAL AND PROPRIETARY INFORMATION. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION OF ROCKWELL AUTOMATION, INC. AND MAY NOT BE USED, COPIED OR DISCLOSED TO OTHERS, EXCEPT WITH THE AUTHORIZED WRITTEN PERMISSION OF ROCKWELL AUTOMATION, INC.		
		INSTALLATION INSTRUCTION SHEET FOR BUSBARS USED WITH 1492-SP AND 1492-FB DEVICES		
Dr. G. FILLUS		Date 04-13-09	Sheet 1 Of 1	Ver 00
			Size B	10000049753