ϵ




- Receptacle of the I/O modules
- Connection of the intrinsically safe field circuit
- Clamp terminals
- Mounting by clipping onto standard 35 mm rail to DIN EN 50022
- Direct wall-mounting option


Notes

- A module carrier is needed for each I/O module. The module carriers RS-TB-Ex.SC and RS-TB-Ex.SP can be combined with each other.
- The terminals 34 and 50 as well as the terminals 35 and 51 are internally connected, they serve for loopingthrough of the voltage supply to the neighboured module carriers.

Dimensions

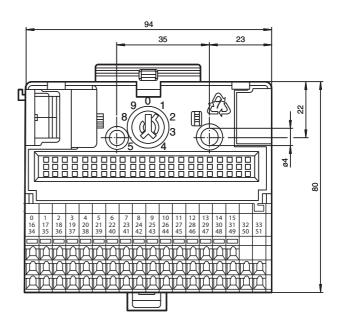

Composition

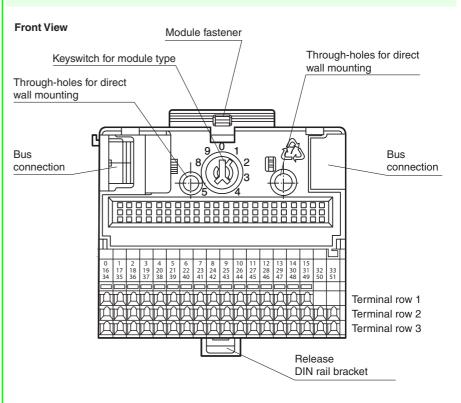

Supplementary information

Technical data

EC-Type Examination Certificate, Statement of Conformity, Declaration of Conformity and instructions have to be observed. For information see www.pepperl-fuchs.com.