
# Inductive proximity switches


Comfort series 2 mm embeddable

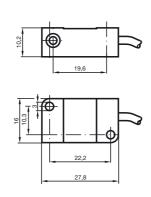

## **€ 0102**

 General specifications	
Switching element function	NAMUR NC
Rated operating distance sn	2 mm
Installation	embeddable
Assured operating distance sa	0 1.62 mm
Reduction factor r <sub>Al</sub>	0.25
Reduction factor r <sub>Cu</sub>	0.2
Reduction factor rV2A	0.7
Nominal ratings	
Nominal voltage U <sub>o</sub>	8 V
Switching frequency f	0 1000 Hz
Hysteresis H	typ. %
Current consumption	
Measuring plate not detected	≥ 3 mA
Measuring plate detected	≤ 1 mA
Standard conformity	
EMC in accordance with	IEC / EN 60947-5-2:2004
Standards	DIN EN 60947-5-6 (NAMUR)
Ambient conditions	
Ambient temperature	-25 100 °C (248 373 K)
Mechanical specifications	
Connection type	16 m, PVC cable , screened
Core cross-section	0.14 mm <sup>2</sup>
Housing material	PBT
Sensing face	PBT
Protection degree	IP67
General information	
Use in the hazardous area	see instruction manuals
Category	2G

### Connection type:



Copyright Pepperl+Fuchs, Printed in Germany

**PEPPERL+FUCHS GmbH** 

## Inductive proximity switches

### ATEX 2G

Instruction

#### Device category 2G Directive conformity Standard conformity

CE symbol

Ex-identification

EC-Type Examination Certificate Appropriate type Effective internal capacitance C<sub>i</sub> Effective internal inductance L<sub>i</sub> General

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

[Fett]Special conditions Protection from mechanical danger

#### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG EN 50014:1997, EN 50020:1994 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions  $C \in 0.102$ 

⟨€x⟩ II 2G EEx ia IIC T6

PTB 00 ATEX 2032 X NJ 2-V3-N ...  $\leq$  40 nF ; a cable length of 10 m is considered.

 $\leq$  50  $\mu H$  ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EU prototype test certificate must be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EU prototype test certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20°C the sensor should be protected from knocks by the provision of an additional housing.

2006-01-26 - 106409\_ENG.xm