
Dimensions CE 0102 cUL us FM **Model Number** NJ20+U4+N Technical Data Features • 20 mm non-flush Connection 1+ Ŀ Accessories MHW 01 Modular mounting bracket MH 04-2681F Mounting aid for VariKont, +U1+ and +U9* MH 04-2057B Mounting aid for VariKont and +U1+

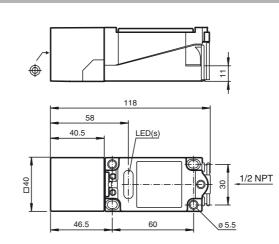

Technical Data		
General specifications		
Switching element function		NAMUR, NC
Rated operating distance	s _n	20 mm
Installation		non-flush
Output polarity		NAMUR
Assured operating distance	sa	0 16.2 mm
Reduction factor r _{Al}		0.4
Reduction factor r _{Cu}		0.3
Reduction factor r ₃₀₄		0.85
Nominal ratings		
Nominal voltage	Uo	8.2 V (R _i approx. 1 kΩ)
Switching frequency	f	0 150 Hz
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤ 1 mA
Ambient conditions		
Ambient temperature		-25 100 °C (-13 212 °F)
Mechanical specifications		
Connection type		screw terminals
Core cross-section		$\leq 2.5 \text{ mm}^2$
Housing material		PBT/metal
Sensing face		PBT
Protection degree		IP68
General information		
Use in the hazardous area		see instruction manuals
Category		1G; 2G; 1D
Compliance with standards and directly and d	rectives	3
Standard conformity		
NAMUR		EN 60947-5-6:2000
-		IEC 60947-5-6:1999
Standards		EN 60947-5-2:2007
		IEC 60947-5-2:2007
Approvals and certificates		
FM approval		
Control drawing		116-0165F
0		
UL approval		cULus Listed, General Purpose
CSA approval		cCSAus Listed, General Purpose
CCC approval		Products with a maximum operating voltage of \leq 36 V do not bear a CCC marking because they do not require approval.

Subject to modifications without notice Pepperl+Fuchs Group

www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



ATEX 1G	
Instruction	Manual electrical apparatus for hazardous areas
Device category 1G	
	for use in hazardous areas with gas, vapour and mist
Directive conformity	94/9/EG
Standard conformity	EN 60079-0:2009, EN 60079-11:2007, EN 60079-26:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
CE marking	€ € 0102
Ex-identification	⟨Ŀ⟩ II 1G Ex ia IIC T6 Ga
EC-Type Examination Certificate	PTB 00 ATEX 2032 X
Appropriate type	NJ20+U.+N
Effective internal capacitance C _i	\leq 150 nF ; a cable length of 10 m is considered.
Effective internal inductance Li	\leq 130 μH ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!
Highest permissible ambient temperature	The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate. Note: Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127-1:2007 has already been accounted for in the temperature table for category 1.
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety. The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Specific conditions	
Protection from mechanical danger	When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.
Electrostatic charging	When used in group IIC non-permissible electrostatic charges should be avoided on the plastic housing parts. Electrostatic charges must be avoided on the mecha- nical bausing components. Description electrostatic charges must be avoided on the mecha-

nical housing components. Dangerous electrostatic charges in the mechanical housing components can be avoided by incorporating these in the equipotential bonding.



USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

ATEX 2G

Instruction

Device category 2G Directive conformity Standard conformity

CE marking

Ex-identification EC-Type Examination Certificate Appropriate type Effective internal capacitance C_i Effective internal inductance L_i General

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

Specific conditions

Protection from mechanical danger

Electrostatic charging

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG EN 60079-0:2009, EN 60079-11:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions $C \in 0102$

 \leq 150 nF ; a cable length of 10 m is considered. \leq 130 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20 $^\circ C$ the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.



Instruction

Device category 1D Directive conformity Standard conformity

CE marking

Ex-identification

EC-Type Examination Certificate Appropriate type Effective internal capacitance C_i Effective internal inductance L_i General

Maximum housing surface temperature

Installation, Comissioning

Maintenance

Specific conditions Electrostatic charging Manual electrical apparatus for hazardous areas

for use in hazardous areas with combustible dust 94/9/EG IEC 61241-11:2002: draft; prEN61241-0:2002 type of protection intrinsic safety "iD" Use is restricted to the following stated conditions $C \in 0102$

(Ex) II 1D Ex iaD 20 T 108 °C (226.4 °F)

ZELM 03 ATEX 0128 X NJ20+U.+N..

 \leq 150 nF ; a cable length of 10 m is considered.

 \leq 130 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual.

The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The maximum surface temperature of the housing is given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy at least the requirements of category ia IIB or iaD. Because of the possibility of the danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation in the power supply and signal circuits is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met. The intrinsically safe circuit has to be protected against influences due to lightning.

When used in the isolating wall between Zone 20 and Zone 21 or Zone 21 und Zone 22 the sensor must not be exposed to any mechanical danger and must be sealed in such a way, that the protective function of the isolating wall is not impaired. The applicable directives and standards must be observed.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

Electrostatic charging due to the flow of media during operation must be excluded. This can be achieved by limiting the surface area of the plastic housing exposed to the electrostatic charging to less than 100 cm^2 .

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

USA: +1 330 486 0001 Ge fa-info@us.pepperl-fuchs.com fa-

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

