
Inductive proximity switches


Comfort series 2 mm slot width

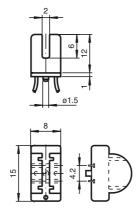

(€ 0102

| • • | |
|--------------------------------|---|
| General specifications | |
| Switching element function | NAMUR NO |
| Slot width | 2 mm |
| Depth of immersion (lateral) | 5 7 typ. 6 mm |
| Installation | |
| Nominal ratings | |
| Mounting conditions | |
| 0 | 0 mm |
| Р | 5 mm |
| Nominal voltage U _o | 8 V |
| Switching frequency f | 0 5000 Hz |
| Hysteresis H | 0 0,2 typ. % |
| Current consumption | |
| Measuring plate not detected | ≤ 1 mA |
| Measuring plate detected | ≥ 3 mA |
| Constant magnetic field B | 50 mT |
| Alternating magnetic field B | 80 mT |
| Standard conformity | |
| EMC in accordance with | EN 60947-5-2 |
| Standards | VDE 0660 Part 209 |
| Ambient conditions | |
| Ambient temperature | -25 100 °C (248 373 K) |
| Mechanical specifications | |
| Connection type | 0.5 m, flexible lead LIFYW |
| Core cross-section | 0.06 mm ² |
| Housing material | PBT |
| Protection degree | IP67 |
| Note | only for non-ferrous metal Adjustable stop |
| General information | |
| Use in the hazardous area | see instruction manuals |
| Category | 2G |
| | |

Connection type:

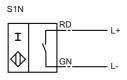

Inductive proximity switches

ATEX 2G

Instruction

Device category 2G

Directive conformity Standard conformity

CE symbol

Ex-identification

EC-Type Examination Certificate Appropriate type

 $\label{eq:continuous_continuous$

General

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

[Fett]Special conditions

Protection from mechanical danger

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist

EN 50014:1997, EN 50020:1994 Ignition protection "Intrinsic safety"

Use is restricted to the following stated conditions

€0102

⟨Ex⟩ II 2G EEx ia IIC T6

PTB 00 ATEX 2049 X

SJ2-S1N...

 \leq 30 nF ; a cable length of 10 m is considered. \leq 100 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EU prototype test certificate must be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EU prototype test certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

The sensor must not be mechanically damaged.