






Model Number

SLVA-4Kplus 230VAC-RI


Features

- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Evaluation device for safety thrubeam sensors SLA, for safety light grids SLP and for 2 channel safety devices (emergency off)
- Operating mode can be selected by means of DIP switches
- Start/Restart disable
- Relay monitor
- Pre-fault indication
- · Clearly visible LED functional display
- 7-segment diagnostic display
- Safety outputs OSSD, external status displays OSSD

Dimensions

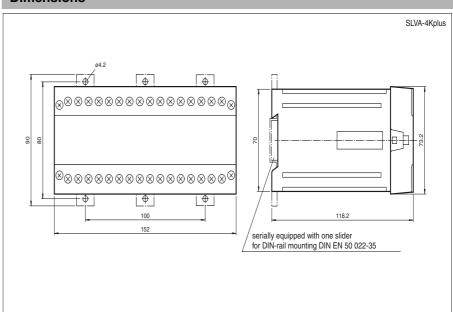

Electrical connection

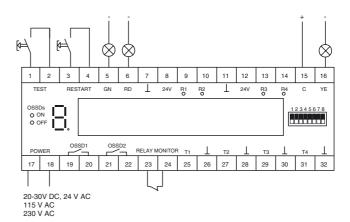

www.pepperl-fuchs.com

Technical data

General specifications

Approvals	TÜV; cNRTLus
Tests	IEC/EN 61496
Safety type according to IEC/EN 61496	5 4
Marking	CE
Operating mode	Startup/restart disable, emergency off
Functional safety related parameters	
Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Category	Cat. 4
Mission Time (T _M)	20 a
PFH _d	1.97 E-9
Indicators/operating means	
Diagnostics display	7-segment display
Function display	LED red: OSSD off LED green: OSSD on LED yellow 4x: Indicator lamp channel 14
Pre-fault indication	LED yellow flashing: Indicator lamp channel 1 4
Controls	8 DIP-switches for selection of operating modes
Electrical specifications	
Operating voltage U _B	230 V AC +10/-15 %
No-load supply current I ₀	50 mA
Power consumption P ₀	13 VA
Input	
Activation current	approx. 1 mA
Activation time	0.03 1 s
Test input	Reset-input for system test
Function input	Start release
Output	
Safety output	2 relay outputs, force-guided NO-contact
Signal output	Direct output for LEDs for displaying the switching state of the OSSDs
Switching voltage	20 230 V AC/DC
Switching current	AC: 0.01 2 A DC see diagram of limit load curve
Response time	40 ms
Ambient conditions	
Ambient temperature	0 50 °C (32 122 °F)
Storage temperature	-20 75 °C (-4 167 °F)
Mechanical specifications	
Protection degree	IP20
Connection	Connection terminals, max. conductor cross-sectional area 1.5 mm ²
Material	

Operating modes

Housing

Mass

The mode of operation is adjusted according to the description of the item when the unit leaves the factory. The user can change the mode of operation. After changing the mode of operation, before the system is enabled, a test of the effectiveness of the selected setting must always take place.

You can adjust the modes of operation of the SLVA-4Kplus with the DIP switches. The DIP switches are accessible by removing the transparent covering on the upper side of the analyser unit.

Two switches should each be moved into the same position.

Switch	Position	Mode of operation
1 + 5	OFF	Without startup/restart disable (restart)
	ON	With startup/restart disable (restart)
2 + 6	OFF	Without relay monitor (EDM)
	ON	With relay monitor (EDM)
3 + 7	OFF	Optical barriers on channels 3 and 4
	ON	Emergency off on channels 3 and 4
4 + 8	OFF	Emergency off static
	ON	Emergency off pulsed

Polycarbonate/V-0

900 g

If the DIP switches are turned on during operation, the analyser unit switches into secure state (outputs turned off) and the 7-segment displays shows a P. In addition, output 15/16 flashes (ready for startup).


Indicator lamps and 7-segment diagnostic display

The positions of the indicator lamps of the analyser units are illustrated schematically below. The numeric display indicates the operating and error states of the BWS. In the error state, the decimal point of the 7-segment display flashes. The R1-R4 indicator lamps (yellow) display the receiver status of the light barriers or emergency off circuit that are connected. The OSSDs indicator lamp (ON = green, OFF = red) displays the status of the safety outputs.

LED	Red	OSSD outputs turned off
	Green	OSSD outputs turned on
	Yellow	Indicator lamps for channels (1-4)
		On = lightbeam free or emergency off circuit on
		Flashing = light beam free, minimum function reserve not met
		Off = light beam interrupted or emergency off circuit turned off
7-segment display	E	Protective field free, OSSD on (running light)
		Protective field interrupted
	\Box	Protective field free, OSSD off, ready for startup
	Ε	System error
	\exists	DIP switch setting incorrect
		Short circuit in transmitter connection
	Ε	Error in simultaneity condition for emergency off channel
	Ε	Error in an external relay
	Ξ	DIP switches are turned on

Diagrams

Load limit curve of relay OSSD for DC-current

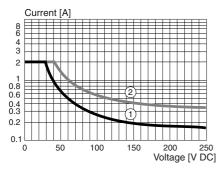

- 1) inductive load, L/R = 40 ms
- 2) ohmic load

fa-info@us.pepperl-fuchs.com