



Dimension Diagram BGT 21 E

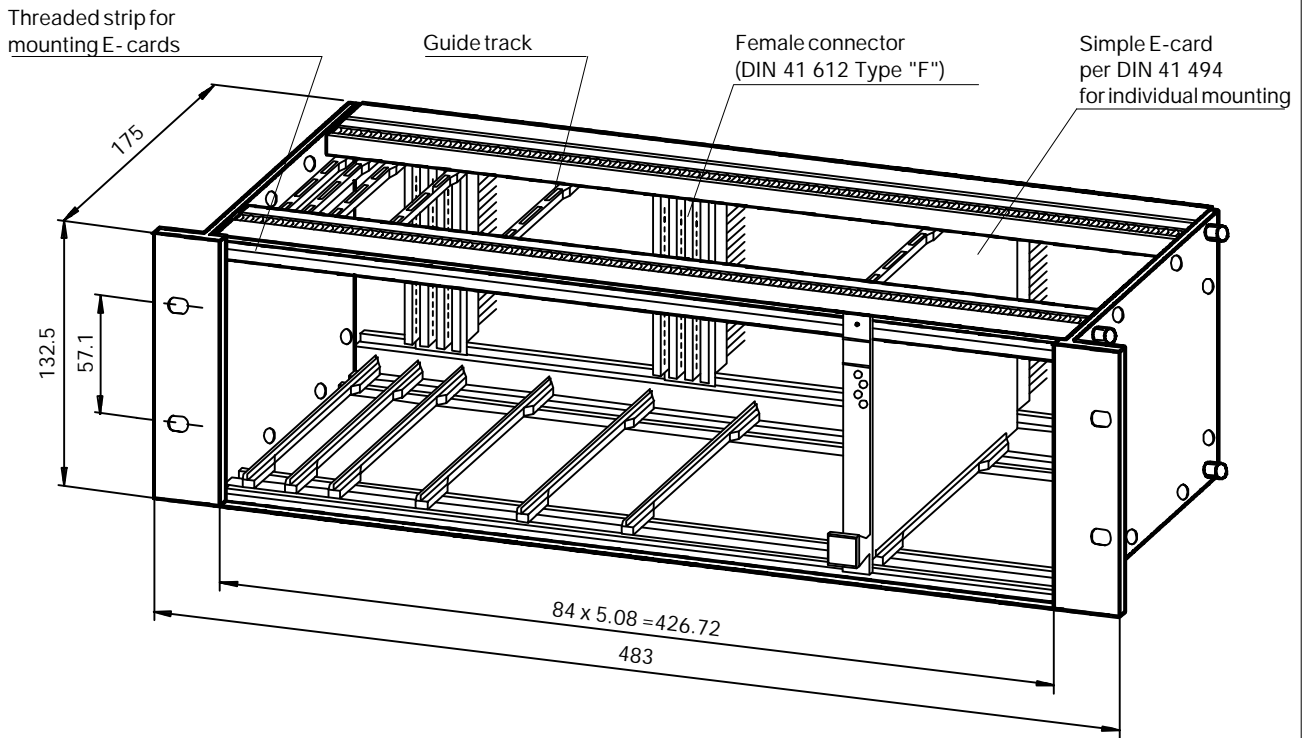

Use the following key to place a technically clear order for module racks with the desired female connector: BGT 21 E/

+

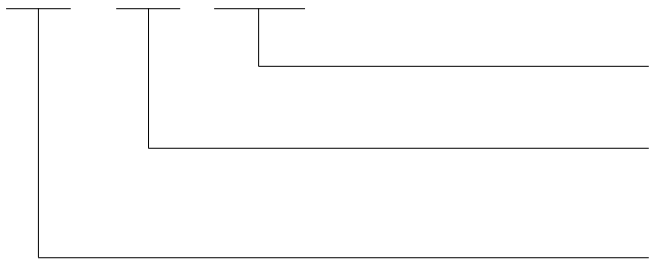

Contact Series:

z+d = Standard 32-pin

Number of contacts

32 = 32-pin connectors

48 = 48-pin connectors

Wiring Technique

HL = Hand soldering technique

WW = Wire Wrap technique (1 mm x 1 mm)

ST = Standard Termipoint technique (1.6 mm x 0.8 mm)

MT = Maxi Termipoint technique (2.4 mm x 0.8 mm)

CSI = Crimp-on Snap-in technique