


Model Number

NCN3-F25-N4-0,14

Features


- For installation in housing
- Direct mounting on standard actuators
- Satisfies machinery directive
- EC-Type Examination Certificate TÜV99 ATEX 1479X

Connection

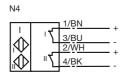

Accessories

BT32 Activator for F25 series BT32XS Activator for F25 series BT32XAS Activator for F25 series BT33 Activator for F25 series BT34 Activator for F25 series **Dimensions**

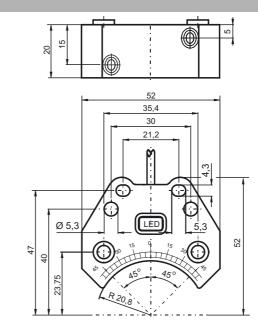

Technical Data

recinical Data		
General specifications		
Switching element function		DC Dual NC
Rated operating distance	s _n	3 mm
Installation		embeddable mountable
Output polarity		NAMUR
Assured operating distance	sa	0 2.43 mm
Reduction factor r _{Al}		0.5
Reduction factor r _{Cu}		0.4
Reduction factor r ₃₀₃		1
Reduction factor r _{St37}		1.1
Nominal ratings		
Nominal voltage	Uo	8.2 V (R _i approx. 1 kΩ)
Switching frequency	f	0 1500 Hz
Hysteresis	Н	typ. 5 %
Reverse polarity protected		reverse polarity protected
Short-circuit protection		yes
Suitable for 2:1 technology		yes, Reverse polarity protection diode not required
Current consumption		≥ 3 mA
Measuring plate not detected		≥ 3 mA ≤ 1 mA
Measuring plate detected		
Indication of the switching state Ambient conditions		LED, yellow
Ambient temperature		-25 100 °C (-13 212 °F)
Storage temperature		-40 100 °C (-40 212 °F)
Mechanical specifications		
Connection type		cable PVC , 180 mm
Core cross-section		0.14 mm ² PBT
Housing material Sensing face		РВТ
Protection degree		IP67
Tightening torque, fastening screw	c	M5 x 25 : 2.7 Nm
Note	3	Installation in housing
General information		Inclanation in nodoling
Use in the hazardous area		see instruction manuals
Category		1G; 2G; 3G; 3D
Compliance with standards and di	reathra	
•	rectives	\$
Standard conformity		
NAMUR		EN 60947-5-6:2000
		IEC 60947-5-6:1999
Electromagnetic compatibility		NE 21:2007
Standards		EN 60947-5-2:2007
		IEC 60947-5-2:2007
Approvals and certificates		
FM approval		
Control drawing		116-0165F
U		
UL approval		cULus Listed, General Purpose
CSA approval		cCSAus Listed, General Purpose
CCC approval		Products with a maximum operating voltage of \leq 36 V do not bear a CCC marking because they do not require approval.

Subject to modifications without notice

Pepperl+Fuchs Group USA www.pepperl-fuchs.com fa-info@

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com



ATEX 1G	
Instruction	Manual electrical apparatus for hazardous areas
Device category 1G	for use in hazardous areas with gas, vapour and mist
Directive conformity	94/9/EG
Standard conformity	EN 60079-0:2006, EN 60079-11:2007, EN 60079-26:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
CE symbol	€ € 0102
Ex-identification	🐼 II 1G Ex ia IIC T6
EC-Type Examination Certificate	TÜV 99 ATEX 1479 X
Appropriate type	NCN3-F25N4
Effective internal capacitance C _i	\leq 100 nF A cable length of 10 m is considered. The value is applicable for the sensor circuit.
Effective internal inductance L _i	\leq 100 μH A cable length of 10 m is considered. The value is applicable for the sensor circuit.
Cable length	Dangerous electrostatic charges on the fixed connection cable must be taken into account for lengths equal to and exceeding the following values:
Explosion group IIC	11 cm
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to! Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.
Highest permissible ambient temperature	The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate. Note: Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127-1:2007 has already been accounted for in the temperature table for category 1.
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety. The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	
Protection from mechanical danger	When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.
Electrostatic charging	When used in group IIC non-permissible electrostatic charges should be avoided on the plastic housing parts.

Germany: +49 621 776-4411 m fa-info@pepperl-fuchs.com



ATEX 2G	
Instruction	Manual electrical apparatus for hazardous areas
Device category 2G	for use in hazardous areas with gas, vapour and mist
Directive conformity	94/9/EG
Standard conformity	EN 60079-0:2006, EN 60079-11:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
CE symbol	CE0102
Ex-identification	⟨ы⟩ II 1G Ex ia IIC T6
EC-Type Examination Certificate	TÜV 99 ATEX 1479 X
Appropriate type	NCN3-F25N4
Effective internal capacitance C _i	\leq 100 nF ; a cable length of 10 m is considered. The value is applicable for the sensor circuit.
Effective internal inductance L _i	\leq 100 μH ; a cable length of 10 m is considered. The value is applicable for the sensor circuit.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to! Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.
Highest permissible ambient temperature	The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	

When used in the temperature range below -20 $^\circ\rm C$ the sensor should be protected from knocks by the provision of an additional housing.

Protection from mechanical danger

 Subject to modifications without notice

 Pepperl+Fuchs Group
 US

 www.pepperl-fuchs.com
 fa-info

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com



ATEX 3D	
Note	This instruction is only valid for products according to EN 50281-1-1, valid until 30-September-2008 Note the ex-marking on the sensor or on the enclosed adhesive label
Instruction	Manual electrical apparatus for hazardous areas
Device category 3D	for use in hazardous areas with non-conducting combustible dust
Directive conformity	94/9/EG
Standard conformity	EN 50281-1-1 Protection via housing Use is restricted to the following stated conditions
CE symbol	
Ex-identification	⟨ඣ 3D IP67 T 111 °C (231.8 °F) X
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction! The special conditions must be adhered to!
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. Each sensor circuit van be operated with the stated maximum values.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	
Minimum series resistance R_{V}	A minimum series resistance RV is to be provided between the power supply voltage and the proximity switch in accordance with the following list. This can also be assured by using a switch amplifier.
Maximum operating voltage U _{Bmax}	The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Tolerances are not permitted.
Maximum heating (Temperature rise)	Values can be obtained from the following list, depending on the max. operating voltage Ub max and the minimum series resistance Rv.
at U _{Bmax} =9 V, R _V =562 Ω	11 K
using an amplifier in accordance with EN 60947-5-6	11 K
Protection from mechanical danger	The sensor must not be mechanically damaged.
Protection of the connection cable	The connection cable must be prevented from being subjected to tension and torsional loading.



ATEX 3D (tD)	
Note	This instruction is only valid for products according to EN 61241-0:2006 and EN 61241-1:2004 Note the ex-marking on the sensor or on the enclosed adhesive label
Instruction	Manual electrical apparatus for hazardous areas
Device category 3D	for use in hazardous areas with non-conducting combustible dust
Directive conformity	94/9/EG
Standard conformity	EN 61241-0:2006, EN 61241-1:2004 Protection via housing "tD" Use is restricted to the following stated conditions
CE symbol	
Ex-identification	⟨ⓑ⟩ II 3D Ex tD A22 IP67 T80°C X
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The maximum surface temperature has been determined in accordance with method A without a dust layer on the equip- ment.
	The data stated in the data sheet are restricted by this operating instruction! The special conditions must be adhered to!
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. Each sensor circuit van be operated with the stated maximum values.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	
Minimum series resistance R_{V}	A minimum series resistance RV is to be provided between the power supply voltage and the proximity switch in accordance with the following list. This can also be assured by using a switch amplifier.
Maximum operating voltage U _{Bmax}	The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Tolerances are not permitted.
Maximum permissible ambient tempera- ture T _{Umax}	Values can be obtained from the following list, depending on the max. operating voltage Ub max and the minimum series resistance Rv.
at $U_{Bmax}=9$ V, $R_{V}=562 \Omega$	59 °C (138.2 °F)
using an amplifier in accordance with EN 60947-5-6	59 °C (138.2 °F)
Protection from mechanical danger	The sensor must not be exposed to ANY FORM of mechanical danger.
Protection from UV light	The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor is used in internal areas.
Protection of the connection cable	The connection cable must be prevented from being subjected to tension and torsional loading.

 Subject to modifications without notice

 Pepperl+Fuchs Group
 US

 www.pepperl-fuchs.com
 fa-info

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



5

ATEX 3G (nL) Instruction

Device category 3G (nL) Directive conformity Standard conformity

CE symbol

Ex-identification Effective internal capacitance C_i

Effective internal inductance Li

General

Installation, Comissioning

Maintenance

Special conditions

Maximum permissible ambient temperature T_{Umax} at Ui = 20 V for Pi=34 mW, Ii=25 mA, T6 for Pi=34 mW, Ii=25 mA, T5 for Pi=34 mW, Ii=25 mA, T4-T1 for Pi=64 mW, Ii=25 mA, T6 for Pi=64 mW, Ii=25 mA, T5 for Pi=64 mW, Ii=25 mA, T5 for Pi=169 mW, Ii=52 mA, T6 for Pi=169 mW, Ii=52 mA, T5 for Pi=169 mW, Ii=52 mA, T4-T1 Protection from mechanical danger

Protection from UV light

Protection of the connection cable

Connection parts

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG EN 60079-15:2005 Ignition protection category "n" Use is restricted to the following stated conditions $C\in$ 0102

(E) II 3G Ex nL IIC T6 X

 \leq 100 nF ; A cable length of 10 m is considered. The value is applicable for the sensor circuit.

 \leq 100 μH ; A cable length of 10 m is considered.

The value is applicable for the sensor circuit.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction!

The special conditions must be observed!

Directive 94/9EG is generally applicable only to the use of electrical apparatus operating at atmospheric conditions.

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The sensor must only be operated with an energy-limited circuit, which satisfies the requirements of IEC 60079-15. The explosion group complies with the connected, supplying, power limiting circuit.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

Each sensor circuit van be operated with the stated maximum values.

64 °C (147.2 °F)
64 °C (147.2 °F)
64 °C (147.2 °F)
59 °C (138.2 °F)
59 °C (138.2 °F)
59 °C (138.2 °F)
41 °C (105.8 °F)
41 °C (105.8 °F)
41 °C (105.8 °F)

The sensor must not be exposed to **ANY FORM** of mechanical danger. When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor is used in internal areas.

The connection cable must be prevented from being subjected to tension and torsional loading.

The connection parts are to be installed, such that a minimum protection class of IP20 is achieved, in accordance with IEC 60529.



ATEX 3G (ic)

Instruction

Device category 3G (ic) Directive conformity Standard conformity

CE symbol

Ex-identification Effective internal capacitance C_i

Effective internal inductance Li

General

Installation, Comissioning

Maintenance

Special conditions

Maximum permissible ambient temperature T_{Umax} at Ui = 20 V for Pi=34 mW, Ii=25 mA, T6 for Pi=34 mW, Ii=25 mA, T5 for Pi=34 mW, Ii=25 mA, T4-T1 for Pi=64 mW, Ii=25 mA, T6 for Pi=64 mW, Ii=25 mA, T5 for Pi=64 mW, Ii=52 mA, T4-T1 for Pi=169 mW, Ii=52 mA, T6 for Pi=169 mW, Ii=52 mA, T5 for Pi=169 mW, Ii=52 mA, T5 for Pi=169 mW, Ii=52 mA, T4-T1 Protection from mechanical danger

Connection parts

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG EN 60079-11:2007 Ignition protection category "ic" Use is restricted to the following stated conditions

⟨ II 3G Ex ic IIC T6 X

 \leq 100 nF ; a cable length of 10 m is considered. The value is applicable for the sensor circuit.

 \leq 100 μH ; A cable length of 10 m is considered. The value is applicable for the sensor circuit.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction! The special conditions must be observed!

The special advised of the second sec

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The sensor must only be operated with energy-limited circuits, which satisfy the requirements of IEC 60079-11. The explosion group depends on the connected and energy-limited supply circuit.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

Each sensor circuit van be operated with the stated maximum values. 64 °C (147.2 °F)

64 °C (147.2 °F) 64 °C (147.2 °F) 59 °C (138.2 °F) 59 °C (138.2 °F) 59 °C (138.2 °F) 41 °C (105.8 °F) 41 °C (105.8 °F) 41 °C (105.8 °F)

The sensor must not be mechanically damaged. When used in the temperature range below -20 $^\circ C$ the sensor should be protected from knocks by the provision of an additional housing.

The connection parts are to be installed, such that a minimum protection class of IP20 is achieved, in accordance with IEC 60529.

Pepperl+Fuchs Group USA: +1 3 www.pepperl-fuchs.com fa-info@us.pe

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

