








Model Number

NJ10-22-N-G-5M


Features

- Comfort series
- 10 mm non-flush
- Usable up to SIL2 acc. to IEC 61508

Connection



Dimensions

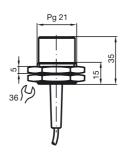

Technical Data

General specifications				
Switching element function		NAMUR, NC		
Rated operating distance	s _n	10 mm		
Installation		non-flush		
Output polarity		NAMUR		
Assured operating distance	sa	0 8.1 mm		
Reduction factor r _{Al}		0.4		
Reduction factor r _{Cu}		0.3		
Reduction factor rand		0.85		

rioddonorridotoricu		0.0
Reduction factor r ₃₀₄		0.85
Nominal ratings		
Nominal voltage	U _o	8 V
Switching frequency	f	0 2000 Hz
Hysteresis	Н	typ. 3 %
Current consumption		

Measuring plate not detected ≥ 3 mA
Measuring plate detected ≤ 1 mA

Functional safety related parameters

 MTTF_d
 4560 a

 Mission Time (T_M)
 20 a

 Diagnostic Coverage (DC)
 0 %

 Ambient conditions

Ambient temperature -25 ... 100 °C (-13 ... 212 °F)

 Mechanical specifications

 Connection type
 cable PVC , 5 m

 Core cross-section
 0.75 mm²

Core cross-section 0.75 mm⁻¹
Housing material Stainless steel 1.4305 / AISI 303
Sensing face PBT
Protection degree IP68

General information
Use in the hazardous area see instruction manuals
Category 2G; 1D

Category

Compliance with standards and directives

 Standard conformity
 EN 60947-5-6:2000

 IEC 60947-5-6:1999
 IEC 60947-5-6:1999

Standards EN 60947-5-2:2007 IEC 60947-5-2:2007

Approvals and certificates

UL approval cULus Listed, General Purpose
CSA approval cCSAus Listed, General Purpose
CCC approval Products with a maximum operating voltage of ≤36 V do not bear a CCC marking because they do not require approval.

www.pepperl-fuchs.com

ATEX 2G

Instruction

Device category 2G

Directive conformity Standard conformity

CE marking

General

Ex-identification

EC-Type Examination Certificate Appropriate type Effective internal capacitance $\,C_i$ Effective internal inductance $\,L_i$

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

Specific conditions

Protection from mechanical danger

Electrostatic charging

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG

EN 60079-0:2009, EN 60079-11:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions **C €** 0102

⟨ II 2G Ex ia IIC T6 Gb

PTB 00 ATEX 2048 X

NJ 10-22-N...

 \leq 130 nF; a cable length of 10 m is considered.

 \leq 100 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions.

The use in ambient temperatures of > 60 $^{\circ}$ C was tested with regard to hot surfaces by the mentioned certification authority.

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20 $^{\circ}\text{C}$ the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

Instruction

Device category 1D

Directive conformity Standard conformity

CE marking

Ex-identification

EC-Type Examination Certificate
Appropriate type

Effective internal capacitance $\,C_{i}\,$ Effective internal inductance $\,L_{i}\,$

General

Maximum housing surface temperature

Installation, Comissioning

Maintenance

Specific conditions

Electrostatic charging

Manual electrical apparatus for hazardous areas

for use in hazardous areas with combustible dust 94/9/EG

IEC 61241-11:2002: draft; prEN61241-0:2002 type of protection intrinsic safety "iD" Use is restricted to the following stated conditions **C €**0102

⟨ы⟩ II 1D Ex iaD 20 T 85 °C (185 °F)

7FI M 03 ATEX 0128 X

NJ 10-22-N...

 \leq 130 nF; a cable length of 10 m is considered.

 \leq 100 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual.

The EC-Type Examination Certificate has to be observed.

The special conditions must be adhered to!

The maximum surface temperature of the housing is given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy at least the requirements of category ia IIB or iaD. Because of the possibility of the danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation in the power supply and signal circuits is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.

The intrinsically safe circuit has to be protected against influences due to lightning. When used in the isolating wall between Zone 20 and Zone 21 or Zone 21 und Zone 22 the sensor must not be exposed to any mechanical danger and must be sealed in such a way, that the protective function of the isolating wall is not impaired. The applicable directives and standards must be observed.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

The connection cables are to be laid in accordance with EN 50281-1-2 and must not normally be subjected to chaffing during use.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

Pepperl+Fuchs Group

www.pepperl-fuchs.com