










# **Model Number**

NJ2-11-SN-G

# **Features**

- 2 mm flush
- Usable up to SIL 3 acc. to IEC 61508

## Connection



# **Application**




# Danger!

In safety-related applications the sensor must be operated with a qualified fail safe interface from

Pepperl+Fuchs, such as KFD2-SH-EX1. Consider the "exida Functional Safety Assessment" document which is available on www.pepperl-fuchs.com as an integral part of this product's documentation.

## **Dimensions**

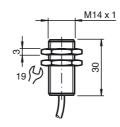

# **Technical Data**

General specifications		
Switching element function		NAMUR, NC
Rated operating distance	s <sub>n</sub>	2 mm
Installation		flush
Output polarity		Safety Function
Assured operating distance	sa	0 1.62 mm
Reduction factor r <sub>Al</sub>		0.4
Reduction factor r <sub>Cu</sub>		0.3
Reduction factor r <sub>304</sub>		0.85
Nominal ratings		
Nominal voltage	U <sub>o</sub>	8 V DC
Operating voltage	UB	5 25 V

Switching frequency 0 ... 3000 Hz Suitable for 2:1 technology

yes , with reverse polarity protection diode Current consumption

Measuring plate not detected ≥ 3 mA ≤ 1 mA

Measuring plate detected

Measuring plate detected

Functional safety related parameters 7660 a

MTTF<sub>d</sub> Mission Time (T<sub>M</sub>) 20 a Diagnostic Coverage (DC) 0 %

**Ambient conditions** -40 ... 100 °C (-40 ... 212 °F) Ambient temperature

Mechanical specifications Connection type Core cross-section cable silicon, 2 m

0.34 mm<sup>2</sup> Housing material Stainless steel 1.4305 / AISI 303

Sensing face Protection degree **PVDF** IP68

General information Use in the hazardous area see instruction manuals

Category 1G; 2G; 1D Compliance with standards and directives

Standard conformity

NAMUR EN 60947-5-6:2000 IEC 60947-5-6:1999 EN 60947-5-2:2007 Standards IEC 60947-5-2:2007

Approvals and certificates	
FM approval	
Control drawing	116-0165F
UL approval	cULus Listed, General Purpose
CSA approval	cCSAus Listed, General Purpose
CCC approval	Products with a maximum operating voltage of ≤36 V do not bear a

CCC marking because they do not require approval.

www.pepperl-fuchs.com

### ATEX 1G

Instruction

Device category 1G

Directive conformity Standard conformity

CE marking

Ex-identification

EC-Type Examination Certificate

Appropriate type

Effective internal capacitance Ci

Effective internal inductance L

Cable length

Explosion group IIA

Explosion group IIB Explosion group IIC

General

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

### Specific conditions

Protection from mechanical danger

Electrostatic charging

#### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist

94/9/EG

EN 60079-0:2009, EN 60079-11:2007, EN 60079-26:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions

**C**€0102

⟨ II 1G Ex ia IIC T6 Ga PTB 00 ATEX 2049 X

NJ 2-11-SN-G...

≤ 50 nF; a cable length of 10 m is considered.

 $\leq$  150  $\mu H$  ; a cable length of 10 m is considered.

Dangerous electrostatic charges on the fixed connection cable must be taken into account for lengths equal to and exceeding the following values:

96 cm 48 cm

7 cm

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate. Note: Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127-1:2007 has already been accounted for in the temperature table for category 1.

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20  $^{\circ}\text{C}$  the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

FPEPPERL+FUCHS

## ATEX 2G

Instruction

## Device category 2G

Directive conformity Standard conformity

CE marking

Ex-identification

EC-Type Examination Certificate
Appropriate type

Effective internal capacitance C<sub>i</sub>

Effective internal inductance Li

General

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

### Specific conditions

Protection from mechanical danger

Electrostatic charging

### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG

EN 60079-0:2009, EN 60079-11:2007
Ignition protection "Intrinsic safety"
Use is restricted to the following stated conditions

C € 0102

⟨Ex⟩ II 1G Ex ia IIC T6 Ga

PTB 00 ATEX 2049 X

NJ 2-11-SN-G...

≤ 50 nF; a cable length of 10 m is considered.

 $\leq$  150  $\mu H$  ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20  $^{\circ}$ C the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

Pepperl+Fuchs Group

www.pepperl-fuchs.com

### ATEX 1D

Instruction

### Device category 1D

Directive conformity Standard conformity

CE marking

Ex-identification

EC-Type Examination Certificate Appropriate type Effective internal capacitance Ci Effective internal inductance L

General

Maximum housing surface temperature

Installation, Comissioning

Maintenance

## Specific conditions

Electrostatic charging

## Manual electrical apparatus for hazardous areas

for use in hazardous areas with combustible dust 94/9/FG

IEC 61241-11:2002: draft; prEN61241-0:2002 type of protection intrinsic safety "iD" Use is restricted to the following stated conditions

**C** € 0102

⟨Ex⟩ II 1D Ex iaD 20 T 108 °C (226.4 °F)

The Ex-significant identification is on the enclosed adhesive label

ZELM 03 ATEX 0128 X

NJ 2-11-SN-G...

≤ 50 nF; a cable length of 10 m is considered.

 $\leq$  150  $\mu H$  ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual.

The EC-Type Examination Certificate has to be observed.

The special conditions must be adhered to!

The maximum surface temperature of the housing is given in the EC-Type Exami-

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy at least the requirements of category ia IIB or iaD. Because of the possibility of the danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation in the power supply and signal circuits is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.

The intrinsically safe circuit has to be protected against influences due to lightning. When used in the isolating wall between Zone 20 and Zone 21 or Zone 21 und Zone 22 the sensor must not be exposed to any mechanical danger and must be sealed in such a way, that the protective function of the isolating wall is not impaired. The applicable directives and standards must be observed.

The adhesive label provided must be affixed in the immediate vicinity of the sensor! The surface to which the label is applied must be clean, flat and free from grease! The affixed adhesive label must be readable and durable, taking account of the possibility of chemical corrosion!

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible

The connection cables are to be laid in accordance with EN 50281-1-2 and must not

normally be subjected to chaffing during use. Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

Pepperl+Fuchs Group

www.pepperl-fuchs.com