


Model Number

NJ6S1+U1+N1

Features


- 6 mm flush in ST37 / 1.0037
- Usable up to SIL 3 acc. to IEC 61508

Connection



Accessories

MHW 01 Modular mounting bracket MH 04-2681F Mounting aid for VariKont, +U1+ and +U9* MH 04-2057B Mounting aid for VariKont and +U1+

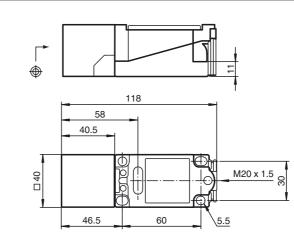

Technical Data

Dimensions

General specifications		
Switching element function		NAMUR, NO
Rated operating distance	s _n	6 mm
Installation		flush
Output polarity		Safety Function
Assured operating distance	sa	0 4.86 mm
Reduction factor r _{Al}		1
Reduction factor r _{Cu}		1
Reduction factor r ₃₀₄		0
Nominal ratings		0.0)///D (1.0)
Nominal voltage	U _o	8.2 V (R _i approx. 1 kΩ) 0 100 Hz
Switching frequency Current consumption	1	0 100 HZ
Measuring plate not detected		< 1 mA
Measuring plate detected		≥3 mA
Functional safety related paramete	re	2011A
• •	13	9190 a
MTTF _d Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		0%
Ambient conditions		0 /0
Ambient temperature		-25 100 °C (-13 212 °F)
Mechanical specifications		-25 100 'C (-13 212 F)
•		screw terminals
Connection type Core cross-section		up to 2.5 mm ²
Housing material		PBT
Sensing face		PBT
Protection degree		1968
Note		only for non-ferrous metal
General information		
Use in the hazardous area		see instruction manuals
Category		1G; 2G; 1D
Compliance with standards and dir	rectives	li di contra di
Standard conformity		
Standards		EN 60947-5-2:2007
		IEC 60947-5-2:2007
Approvals and certificates		
FM approval		
Control drawing		116-0165F
UL approval		cULus Listed, General Purpose
CSA approval		cCSAus Listed, General Purpose
CCC approval		Products with a maximum operating voltage of \leq 36 V do not bear a
		CCC marking because they do not require approval.

Subject to modifications without notice Pepperl+Fuchs Group

www.pepperl-fuchs.com fa-info

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



ATEX 1G

Instruction

Device category 1G

Directive conformity Standard conformity

CE marking

Ex-identification EC-Type Examination Certificate Appropriate type Effective internal capacitance C_i Effective internal inductance L_i General

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

Specific conditions

Protection from mechanical danger

Electrostatic charging

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG EN 60079-0:2009, EN 60079-11:2007, EN 60079-26:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions $\xi \in 0.002$

 \leq 150 μ H ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate. Note: Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127-1:2007 has already been accounted for in the temperature table for category 1.

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20 $^\circ C$ the sensor should be protected from knocks by the provision of an additional housing.

When used in group IIC non-permissible electrostatic charges should be avoided on the plastic housing parts.

Subject to modifications without notice



ATEX 2G

Instruction

Device category 2G Directive conformity Standard conformity

CE marking

Ex-identification

EC-Type Examination Certificate Appropriate type Effective internal capacitance C_i Effective internal inductance L_i General

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

Specific conditions

Protection from mechanical danger

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG EN 60079-0:2009, EN 60079-11:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions $C \in 0102$

PTB 00 ATEX 2049 X

NJ6S1+U.+N...

 \leq 180 nF ; a cable length of 10 m is considered.

 \leq 150 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20 $^\circ C$ the sensor should be protected from knocks by the provision of an additional housing.



Instruction

Device category 1D Directive conformity Standard conformity

CE marking

Ex-identification

EC-Type Examination Certificate Appropriate type Effective internal capacitance C_i Effective internal inductance L General

Maximum housing surface temperature

Installation, Comissioning

Maintenance

Specific conditions Electrostatic charging Manual electrical apparatus for hazardous areas

for use in hazardous areas with combustible dust 94/9/EG IEC 61241-11:2002: draft; prEN61241-0:2002 type of protection intrinsic safety "iD" Use is restricted to the following stated conditions €0102

(Ex) II 1D Ex iaD 20 T 108 °C (226.4 °F)

ZELM 03 ATEX 0128 X

NJ6S1+U.+N... \leq 180 nF ; a cable length of 10 m is considered.

 \leq 150 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual.

NJ6S1+U1+N1

The EC-Type Examination Certificate has to be observed.

The special conditions must be adhered to!

The maximum surface temperature of the housing is given in the EC-Type Examination Certificate

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy at least the requirements of category ia IIB or iaD. Because of the possibility of the danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation in the power supply and signal circuits is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.

The intrinsically safe circuit has to be protected against influences due to lightning. When used in the isolating wall between Zone 20 and Zone 21 or Zone 21 und Zone 22 the sensor must not be exposed to any mechanical danger and must be sealed in such a way, that the protective function of the isolating wall is not impaired. The applicable directives and standards must be observed.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

Electrostatic charging due to the flow of media during operation must be excluded. This can be achieved by limiting the surface area of the plastic housing exposed to the electrostatic charging to less than 100 cm^2 .

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Subject to modifications without notice