

# **Instrumentation Products**

Schneider DirectMount Systems



#### Introduction

#### Introduction

#### **Natural Gas Measurement - Best Practices**

Field research and testing conducted by Southwest Research in San Antonio, Texas and the Pipeline Gas Compressor Research Council (PCRC) confirmed that pulsation created by compressors, flow control valves, regulators and some piping configurations may create undesirable levels of Square Root Error (SRE) and/or resulting Gauge Line Error (GLE). Pulsation at the orifice meter is a major source of lost and unaccounted for natural gas. These errors create large economic gains or losses for the buyer and seller along a natural gas pipeline system.

Conclusions determined that Transmitters or Electronic Flow Measurement (EFM) devices should be:

- Close coupled to the orifice taps (within 18 inches [460 mm] "Rule of Thumb")
- Use equal length, large orifice (0.375 inch [9.5 mm] I.D. or greater), constant diameter gauge lines
- Use Multi-Turn Valves to protect electronics from pressure spikes

Minimize or eliminate Gauge Line Error (GLE): Schneider DirectMount Systems (SDMS) are designed for a safe, efficient method of close coupling EFM's and transmitters to the orifice fitting, eliminating or reducing the effects of Gauge Line Error.

SDMS are easy to install and available in both Vertical and Horizontal to Vertical Installations.

- SDMS reduces installation cost No need to manufacture and install tube runs, fittings, and expensive pipe stands
- Reduces potential leak points associated with NPT connections
- Provides a safe compact leak free measurement installation
- Internal porting promotes self draining of condensates and liquids to reduce freezing issues


#### Design Standards meet the Recommendations of:

• American Petroleum Institute (API) • Gas Processors Association (GPA) • American Gas Association (AGA)

Long term Confidence and Commitment: You can rest assured in your decision to purchase AS-Schneider, we are a modern, international family-owned company since 1875. You can rely on our nearly 140 years of manufacturing experience. The AS-Schneider Group with its headquarters in Germany is one of the world's leading manufacturers of Instrumentation Valves and Manifolds. Our USA office and warehouse located in Houston Texas is committed to providing excellent service to our customers in the Americas.

Continuous product development may from time to time necessitate changes in the details contained in this catalogue. AS-Schneider reserves the right to make such changes at their discretion and without prior notice.

All dimensions shown in this catalogue are approximate and subject to change.

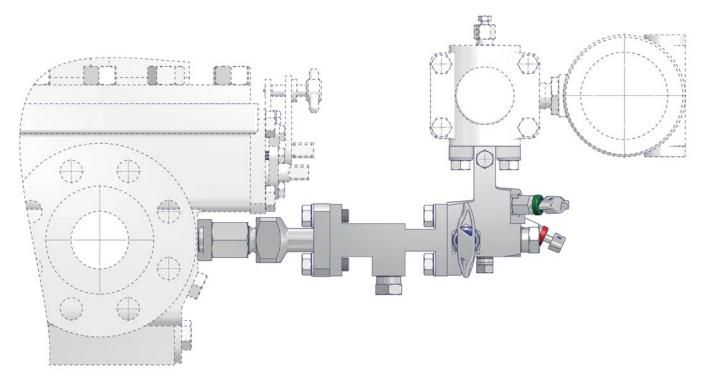

2 Introduction AS-Schneider

## **C**ontents

Introduction	page 2
Contents	page 3
General Features	page 4
Features and Benefits	page 5
Valve Head Unit / Bonnet Options	<b> </b> page 6-7
Stabilized Connectors and Spacers	page 8-9
Spacers and 2 Valve Manifolds	<b> </b> page 10
5 Valve Manifolds	page 11-13
Adapters	page 14-15
Horizontal Installation	<b> </b> page 16-17
Vertical Installation	<b> </b> page 18
Spare Parts	<b> </b> page 19

www.as-schneider.com Contents 3

#### **Body Material Options**

Material Group	AS Material Designation	Material Grade acc. to ASTM	Equivalent UNS-No.	Material No.	Short Name	Stabilized Connectors	Spacers	Manifolds	Adapters
Caulan Starl	Carbon Steel	A105				Standard	Standard	Standard	
Carbon Steel	LF2	LF2							Standard
Austenitic	316 quadruple	316	S 31600	1.4401	X5CrNiMo17-12-2	Standard	Standard	Standard	Standard
Stainless Steel	certified*	316L	S 31603	1.4404	X2CrNiMo17-12-2	Standard	Standard	Standard	Standard
Nickel Based	Alloy 400		N 04400	2.4360	NiCu30Fe	Optional	Optional	Optional	Optional
Alloys	Alloy C-276		N 10276	2.4819	NiMo 16 Cr 15 W	Optional	Optional	Optional	Optional

<sup>\*</sup> Quadruple Certified means 316 / 316L / 1.4401 / 1.4404.

#### **Standard Features**

• Bore Size

- Isolate Valves: 3/8" (9.5 mm)

- Equalize and Vent Valves: 0.138" (3.5 mm)

Soft Seat

Isolate Valves: Cone Design (roddable)Equalize and Vent Valves: Washer Design

- Soft Seats are field replaceable

• Double O-Ring Design as standard

• PTFE Packing is also available for all valve types

 5 Valve Manifolds are supplied with a bug plug in the 1/4 NPT female vent port (fitted)

#### Sour Gas Service:

Wetted Parts according to a. m. material list are supplied as standard according to NACE MR0175/MR0103 and ISO 15156 (latest issue).

#### Pressure Test:

A shell test and a seat leakage test are performed at 1.5 times the maximum working pressure acc. to EN 12266-1 - P10, P11 and P12 respectively MSS-SP61 (and complies also with ASME B31.1 and B31.3) at every standard AS-Schneider Needle Valve / Manifold. 100% Pressure Tested!

#### Certification:

Certified Mill Test Report (CMTR) as Inspection certificate 3.1 acc. to EN 10 204 for valve body material and pressure test available on request.



Packing adjustment may be required during the service life of the valve.



Valves that have not been cycled for a period of time may have a higher initial actuation torque.

#### **Optional Features**

#### Fugitive Emission Application:

For Fugitive Emission Applications please contact the factory.

#### Oxygen Service:

AS-Schneider offers an option cleaned and lubricated for Oxygen Service:

PTFE Packing - Max. 6,092 psi (420 bar)

Pressure-Temperature Rating: max. 6,092 psi @ 140°F

420 bar @ 60°C

max. 392°F @ 1,305 psi 200°C @ 90 bar

Not every Valve Type is available for Oxygen Service!

If you don't find your options in this catalogue, please contact the factory.

# SDMS are manufacturered to the following Codes and Specifications:

• ASME B31.1	Power Piping
• ASME B31.3	Process Piping
• ASME B16.34	Valves - Flanged, Threaded and Welding End
• API 598	Valve Inspection and Testing
• MSS SP-25	Standard Marking Systems for Valves, Fittings and Flange Unions
• MSS SP-61	Pressure Testing of Valves
• MSS SP-99	Instrument Valves
• MSS SP-105	Instrument Valves for Code Applications
• NACE MR0175	Petroleum and Natural Gas Industries - Materials for use in $\rm H_2S$ - Containing environments in oil and gas production

General Features AS-Schneider

#### **Features and Benefits**

Meets the challenge - Soft goods available to meet the toughest dirty gas applications. H<sub>2</sub>S, CO<sub>2</sub>, amines, corrosion inhibitors, methanol, glycol, etc.!

NEW STEM DESIGN
 Reduced operating torque.
 Minimized gap between stem and stem nut for additional operating thread protection.

2. COST SAVINGS
Extended seal and packing life.

REDUCES FREEZING ISSUES
 Flow paths machined to self drain condensates and liquid accumulation.

 PROTECTION AND CONVENIENCE
 1/2 turns to full open & close isolation valves. Protects electronics from pressure spikes.

5. CATHODIC PROTECTION

Dielectric isolators protect expensive electronics.

COMFORTABLE EASY TURN Ergonomic handle design.


#### 7. SAFETY

Ships assembled & pressure tested. No seat and bonnet field assembly required.

#### **FINALLY**

Bug plug standard in 5 valve manifold vent port (not shown).

#### Pressure-Temperature Rating (Soft Seat)

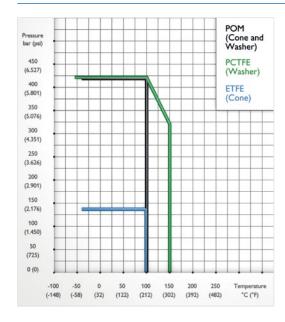

#### Stem Seal Material

Material	Temperature					
	Min.	Max.				
FKM	-13°F (-25°C)	392°F (200°C)				
FKM (RGD resistant)	-35°F (-37°C)	450°F (232°C)				
FEPM	-4°F (-20°C)	392°F (200°C)				
PTFE	-67°F (-55°C)	450°F (232°C)				

Temperature Limit for Body Material:

- Carbon Steel A105: -20°F (-29°C)
- Carbon Steel LF2: -51°F (-46°C)

All other materials are limited by soft goods.

www.as-schneider.com Features and Benefits

#### **Isolate Valves - Head Units**

#### Isolate Valves (Block Valves)

Bore Size 3/8" (9.5 mm) - Stem Seal: O-Ring - Soft Seat: Cone Design

#### **Features**

- Rising Plug Valve Design
- Replaceable Valve Seat ETFE, optional POM
- Stem Seal O-Ring in FKM (optional RGD resistant) or FEPM
- Non-rotating Needle
- External Stem Thread Packing below stem threads. Stem threads are protected from process media (non-wetted).
- 6.5 turns to fully open or close the valve
- Heavy Duty Stem Threads
- Blow-out Proof Stem
- Back Seat Metal to metal secondary stem seal
- Lock Pin Eliminates unauthorized removal of the bonnet
- Color Coded Dust Cap for operating thread protection.
   Minimized gap between stem and stem nut for additional operating thread protection.
- Valve Seat in ETFE 2.000 psi (138 bar) rated POM 6,092 psi (420 bar) rated
- All non-wetted parts are 316 Stainless Steel


#### Isolate Valves (Block Valves)


Bore Size 3/8" (9.5 mm) – Stem Seal: PTFE Packing – Soft Seat: Cone Design

#### **Features**

- Rising Plug Valve Design
- Replaceable Valve Seat ETFE, optional POM
- Stem Seal PTFE Packing
- All other features as above

Components	Carbon Steel	Exoti	Exotic Alloys						
Components		al							
Body	A105 / LF2	316 / 316L	Alloy 400	Alloy C-276					
Bonnet	316 /	316L	Alloy 400	Alloy C-276					
Seat		ETFE or P	MO						
Needle	316 /	316L	Alloy 400	Alloy C-276					
O-Ring	FKM or FEPM								
Packing		PTFE							
Valve Stem		316 / 31	6L						
Gland		316							
Stem Nut		316							
Lock Nut		316							
Set Screw	316								
T Handle	316								
Lock Pin	A4 (316)								

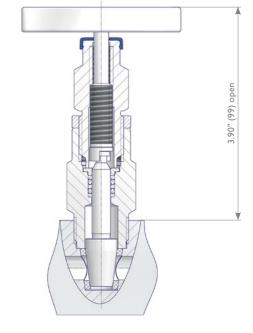

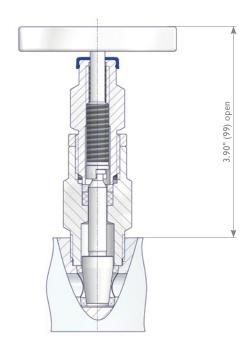

Wetted components listed in bold.

Isolate Valves - Head Units AS-Schneider


## **Equalize and Vent Valves - Head Units**

#### **Equalize and Vent Valves**

Bore Size 0.138" (3.5 mm) - Stem Seal: O-Ring - Soft Seat: Washer Design

#### **Features**

- Replaceable Valve Seat POM, optional PCTFE
- Stem Seal O-Rings in FKM (optional RGD resistant) or FEPM
- External Stem Thread Packing below stem threads. Stem threads are protected from process media (non-wetted).
- 2.5 turns to fully open or close the valve
- Stem with Cold Rolled Threads
- Blow-out Proof Stem
- Back Seat Metal to metal secondary stem seal
- Lock Pin Eliminates unauthorized removal of the bonnet
- Color Coded Dust Cap for operating thread protection. Minimized gap between stem and stem nut for additional operating thread protection.
- Max. Operating Pressure 6,092 psi (420 bar)

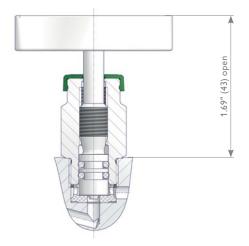


#### **Equalize and Vent Valves**


Bore Size 0.138" (3.5 mm) - Stem Seal: Packing - Soft Seat: Washer Design

#### **Features**

- Replaceable Valve Seat POM, optional PCTFE
- Stem Seal PTFE Packing
- All other features as above

Components	Carbon Steel	Stainless Steel	Exoti	Exotic Alloys							
Components	Material										
Body	A105	316 / 316L	Alloy 400	Alloy C-276							
Bonnet	316 /	316L	Alloy 400	Alloy C-276							
Seat		POM or PO	CTFE								
Valve Stem	316 /	316L	Alloy 400	Alloy C-276							
O-Ring	FKM or FEPM										
Packing		PTFE									
Gland		316									
Stem Nut		316									
Lock Nut		316									
Set Screw	316										
T Handle	316										
Lock Pin	A4 (316)										



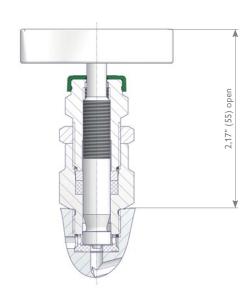

#### **Stabilized Connectors**

#### **Designing your Schneider DirectMount System**

The first item required for SDMS is the Stabilized Connector. The Stabilized Connector provides the foundation for your SDMS.

#### Select the proper model for your installation considering:

- Clearance requirements
- Dielectric isolation
- Orifice tap centers 2 1/8" (54 mm) to 2 1/4" (57 mm)
- Size and weight of the electronic measurement device
- · Environmental site location

The connector's tensioning nut places the NPT threads in tension and transfers radial forces away from the NPT threads. The Short Type is designed to be installed without shoe, the Long Type and the Integral Valve Type are designed to be installed with shoe, providing a very solid and efficient connection.


The Integral Valve Type is provided with a **patent pending** swivel nut connection, enabling the easy positioning of the flange in any position through 360°. Therefore the Integral Valve Type does not require field assembly providing a simple pretested safe assembly to the orifice fitting.

The elongated bolt holes accommodate 2 1/8" (54 mm) to 2 1/4" (57 mm) centers.


Dielectric Isolation Kits are available (see page 19).

# STABILIZED CONNECTOR


#### **Short Type Stabilized Connector**

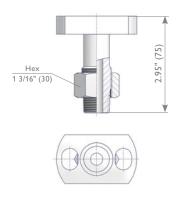


#### **Integral Valve Type Stabilized Connector**

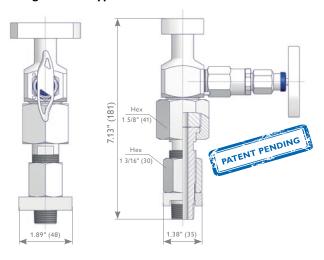

#### Long Type Stabilized Connector

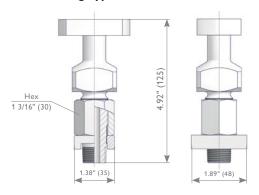


#### **Dielectric Isolation Kit**

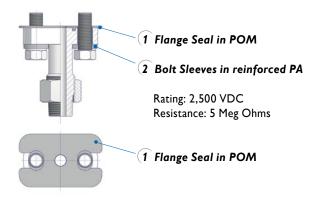

Stabilized Connectors AS-Schneider

## **Stabilized Connectors and Spacers**

#### **Ordering Information - Stabilized Connectors**

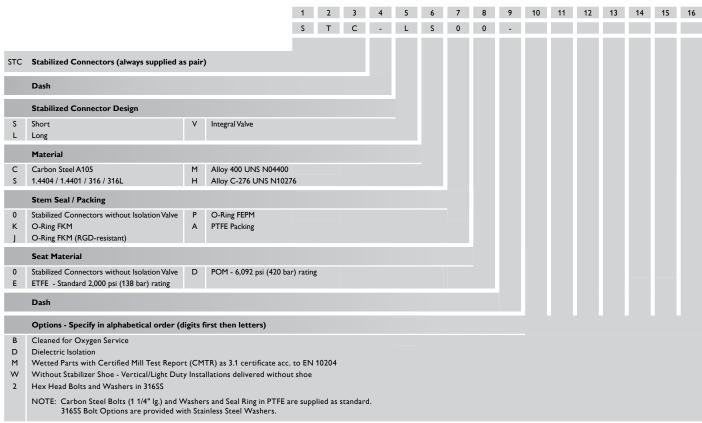

Wetted Parts according to above mentioned material list are supplied according to NACE MR0175/MR0103 and ISO 15156 (latest issue).

#### **Ordering Information - Spacers**

		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
		Н	0	Α	-	S	-	2									
	Spacers																
Н0	Spacer - Flange x Flange																
	Spacer Design																
S	Straight Type																
	Dash																
	Body Material																
C S	Carbon Steel A105 M Alloy 400 UNS N04400 1.4404 / 1.4401 / 316 / 316L H Alloy C-276 UNS N102																
	Dash																
	Options - Specify in alphabetical order (digits first then letters)																
В	Cleaned for Oxygen Service																
	Accessory Kits - For Manifold to Transmitter mounting																
1	FKM O-Ring for Flange Seal																
2	Hex Head Bolts and Washers in 316SS																
	NOTE: Carbon Steel Bolts (1" Ig.) and Washers and Seal Ring in PTFE are s 316SS Bolt Options are provided with Stainless Steel Washers.	upplied	as stan	dard.													

Wetted Parts according to above mentioned material list are supplied according to NACE MR0175/MR0103 and ISO 15156 (latest issue).

## **Spacers and 2 Valve Manifolds**


#### Designing your Schneider DirectMount System

After selecting your stabilized connector consider if an optional Spacer or 2 Valve Manifold is required:

- Consider any clearance requirements, provide additional clearance between the orifice meter and your measurement device.
- 2 Valve Manifolds are recommended to eliminate the need to blow down your meter tube when periodic maintenance is required.

Ordering Information Spacer (Straight Adapter) see page 9.

Ordering Information 2 Valve Manifold see page 13.

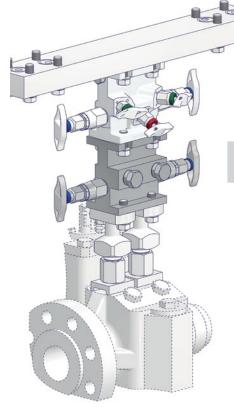


## 2 VALVE MANIFOLDS


**SPACERS AND** 


#### Spacer (Straight Adapter)



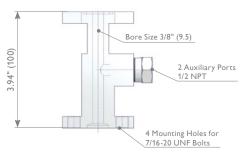

#### 2 Valve Manifold

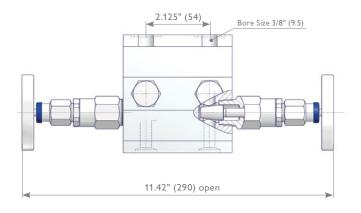

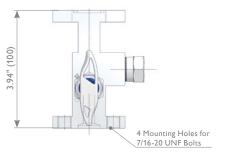



#### **5 Valve Manifolds**

The next step after selecting the stabilized connector and the optional Spacer / 2 Valve Manifold is to select the proper 5 Valve Manifold.

Vertical Installations - Select the Straight Type 5 Valve Manifold.


Horizontal Installations - Select the Angle Type 5 Valve Manifold (orients electronics of the transmitter in vertical position) or the Straight Type 5 Valve Manifold.

The 5 Valve Manifold is used in most custody transfer applications. However if you don't require a 5 Valve Manifold AS-Schneider is also supplying a 3 Valve Manifold. For more details please contact the factory.

When mounting the 5 Valve Manifold to  $\Delta P$  Transmitter, Smart Multivariable or Flow Computer you must consider the mounting bolt lengths.

5 Valve Manifold Vent Port - The 1/4 NPT female Vent Port is supplied with a fitted Bug Plug as standard.

Roddable - Both Straight and Angle Type 5 Valve Manifolds.

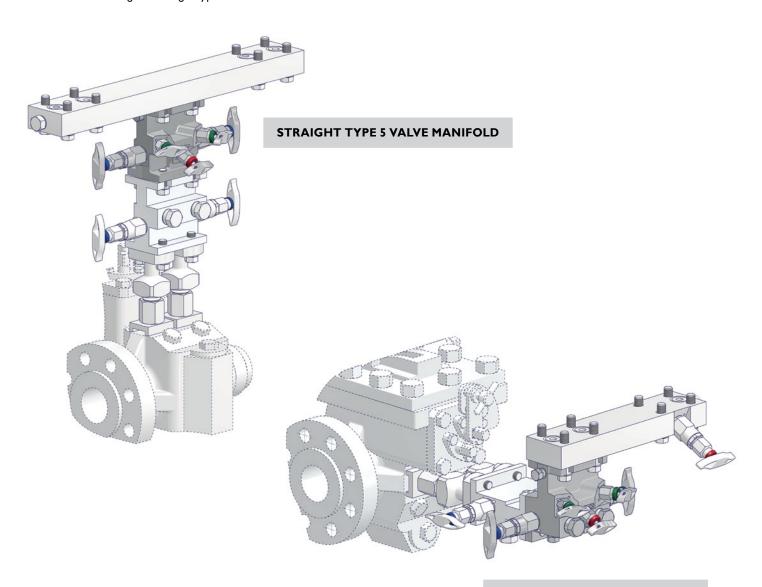


**ANGLE TYPE 5 VALVE MANIFOLD** 


www.as-schneider.com 5 Valve Manifolds 11

## **5 Valve Manifolds**

#### Flow Pattern of Straight Type 5 Valve Manifold

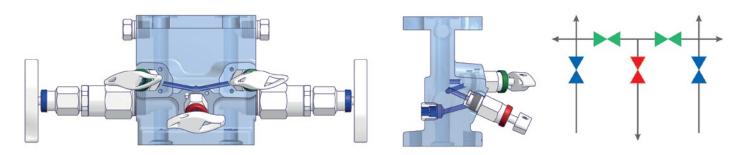


#### Flow Pattern of Angle Type 5 Valve Manifold

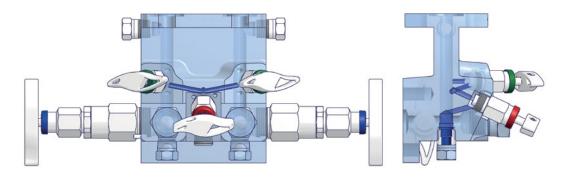


#### **REDUCES FREEZING ISSUES:**

Flow paths machined to self drain condensates and liquid accumulation.

#### Straight Type 5 Valve Manifold

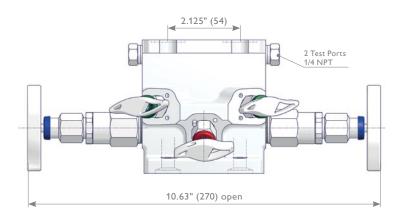


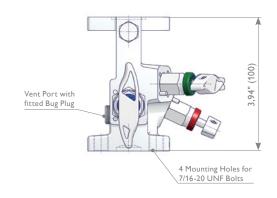


12 5 Valve Manifolds AS-Schneider

### 2 and 5 Valve Manifolds

#### Angle Type 5 Valve Manifold

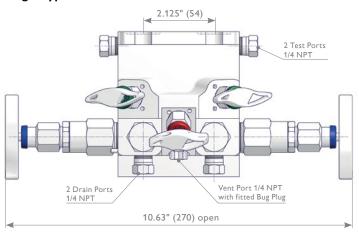

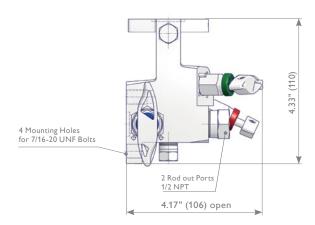

#### **Ordering Information**

				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	5
				Н	5	S	-	S	K	Α	-	2	D						
	Manifolds																		
Н	H-Style Manifolds - Flange x Flange																		
	Quantity Bonnets																		
2	2 Valve Manifold																		
5	5 Valve Manifold																		
	Manifold Design																		
S	Straight Type, 3/8" (9.5 mm) Bore Size on Isolat		s																
L	Angle Type, 3/8" (9.5 mm) Bore Size on Isolate	Valves																	
	Dash																		
	Body Material																		
С	Carbon Steel A105	М	Alloy 400 UNS N04400	)															
S	1.4404 / 1.4401 / 316 / 316L	Н	Alloy C-276 UNS N102	76															
	Stem Seal / Packing																		
K	O-Ring FKM	Р	O-Ring FEPM																
J	O-Ring FKM (RGD-resistant)	Α	PTFE Packing																
	Seat Material - Isolate Valves x Equaliz	e/Ver	nt Valves																
Α	ETFE x POM - Standard 2,000 psi (138 bar) rating	С	ETFE x PCTFE																
В	POM x POM - 6,092 psi (420 bar) rating	D	POM x PCTFE																
	Dash																		
	Dasii																		

#### Options - Specify in alphabetical order (digits first then letters)

- Cleaned and Lubricated for Oxygen Service
- Dielectric Isolation

5

М Wetted Parts with Certified Mill Test Report (CMTR) as 3.1 certificate acc. to EN 10204

#### Accessory Kits - For Manifold to Transmitter mounting

- FKM O-Ring for Flange Seal.
- Hex Head Bolt 7/16-20 UNF x 1" Ig. and Washer in SS To mount Transmitters / Flow Computers with Traditional Flange and ΔP to ΔP Adapters. 2
- Hex Head Bolt 7/16-20 UNF x 2 1/4" Ig. and Washer in CS To mount Transmitters / Flow Computers with Rosemount Coplanar™ Flange respectively 3 ΔP to Static Adapters and Transmitters / Flow Computers with Traditional Flange.

  For this Application the Bolt Length for Manifolds with or without Dielectric Isolation are identical. For 5 Valve Manifolds only. 2 Valve Manifolds supplied with 1" Ig. Bolts.
- Hex Head Bolt 7/16-20 UNF  $\times$  2 1/4" Ig. and Washer in SS To mount Transmitters / Flow Computers with Rosemount Coplanar  $^{\text{TM}}$  Flange respectively  $\Delta P$  to Static Adapters and Transmitters / Flow Computers with Traditional Flange. 4
  - For this Application the Bolt Length for Manifolds with or without Dielectric Isolation are identical. For 5 Valve Manifolds only. 2 Valve Manifolds supplied with 1" Ig. Bolts.
  - Hex Head Bolt 7/16-20 UNF x 3 1/2" Ig. and Washer in CS To mount  $\Delta P$  to Static Adapters and Transmitters / Flow Computers with Rosemount Coplanar<sup>TM</sup> Flange. For 5 Valve Manifolds only. 2 Valve Manifolds supplied with 1" lg. Bolts.
- Hex Head Bolt 7/16-20 UNF x 3 1/2" Ig, and Washer in SS To mount  $\Delta P$  to Static Adapters and Transmitters / Flow Computers with Rosemount Coplanar Flange. For 5 Valve Manifolds only. 2 Valve Manifolds supplied with 1" Ig. Bolts.

NOTE: Carbon Steel Bolts (1" Ig.) and Washers and Seal Ring in PTFE are supplied as standard.
316SS Bolt Options are provided with Stainless Steel Washers. Manifolds with Dielectric Isolation supplied with additional 1/4" to bolt length.

Wetted Parts according to above mentioned material list are supplied according to NACE MR0175/MR0103 and ISO 15156 (latest issue).

2 and 5 Valve Manifolds 13 www.as-schneider.com


## **Adapters**

#### **Adapters**


When mounting both  $\Delta P$  and Static Transmitter a SDMS Adapter is required.  $\Delta P$  to  $\Delta P$  Adapter is also available for Dual Custody and Bi-Directional Installations.

Bolt Selection for these Adapters is located on page 15.

 $\Delta P$  to Static Adapters are full 3/8" Orifice ( $\Delta P$  and Static Side) to reduce or eliminate freezing issues.

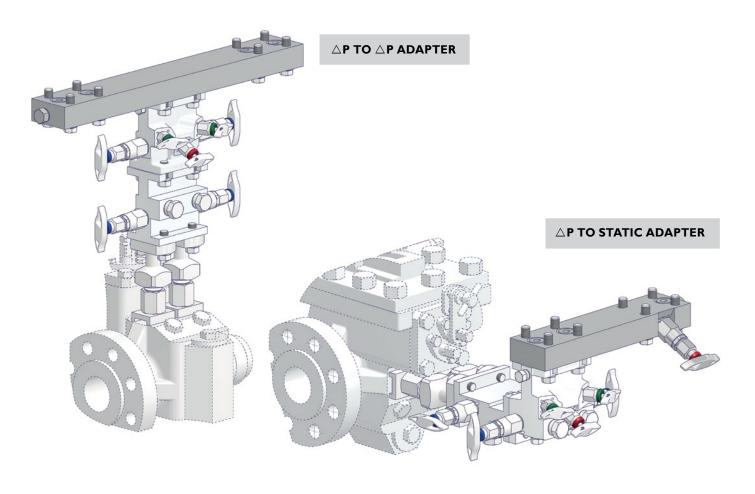



#### $\triangle$ P to $\triangle$ P Adapter - Bore Size 3/8" (9.5 mm)

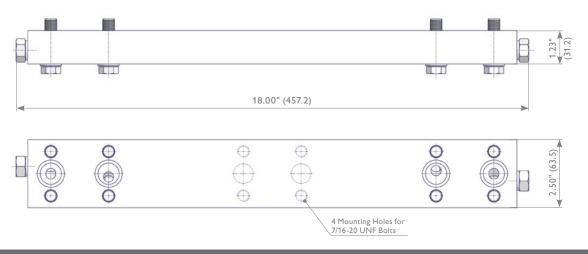

14 Adapters AS-Schneider

#### $\triangle P$ to Static Adapter - Bore Size 3/8" (9.5 mm)

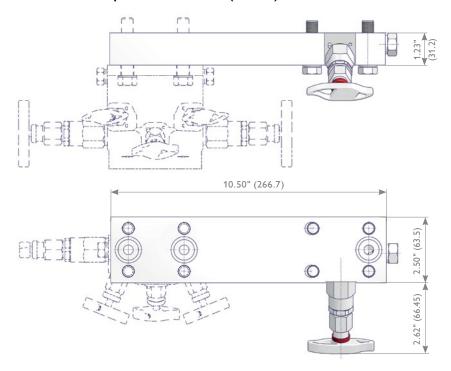

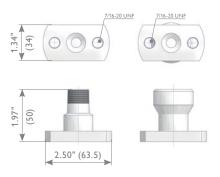

#### **NPT Static Adapters**

NPT Static Adapter		umber Stainless Steel
1/2 NPT Female	AKA-FC	AKA-FS
1/2 NPT Male	AKA-MC	AKA-MS

To be ordered separately.

#### **Ordering Information**


				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
				Α	K	Α	-	S	S	K	В	-	2						
AKA	Adapters																		
	Dash																		
	Adapters Design																		
D S	$\Delta P$ to $\Delta P$ Adapter $\rightarrow$ No Vent Valve $\Delta P$ to Static Adapter $\rightarrow$ 1 Vent Valve - Bore Si	ize 3/8"	(9 5 mm)																
	Body Material	.20 3/ 0	(7.5)																
L S	Carbon Steel LF2 1.4404 / 1.4401 / 316 / 316L	M H	Alloy 400 UNS N0440 Alloy C-276 UNS N102																
	Stem Seal / Packing																		
0 K J	Adapter without Vent Valve O-Ring FKM O-Ring FKM (RGD-resistant)	P A	O-Ring FEPM PTFE Packing																
	Seat Material - Vent Valve																		
0 E	Adapter without Vent Valve ETFE	D	POM																
	Dash																		
	Options - Specify in alphabetical order (o	digits fi	rst then letters)																
	Accessory Kits - To mount the Transmitte	ers to t	the Adapters ( $\Delta$ P to St	atic A	dapter	- Stat	ic Tran	smitte	r Side	only)									
1	FKM O-Ring for Flange Seal																		
2	Hex Head Bolt 7/16-20 UNF x 1 3/4" lg. and	Washe	r in SS - To mount Tradi	itional l	Flange T	ransmit	ters res	pective	ly NPT	Static A	dapters	:							
3	Hex Head Bolt 7/16-20 UNF $\times$ 3 1/4" lg. and	Washe	r in CS - To mount Rose	mount	2051/30	51 Cop	lanar™ F	lange Ti	ransmit	ters									
4	Hex Head Bolt 7/16-20 UNF $\times$ 3 1/4" lg. and	Washe	r in SS - To mount Rose	mount 2	2051/30	51 Copla	anar™ Fl	ange Tr	ansmitt	ers									
5	No Bolts (but supplied with Seal Rings)																		
	NOTE: Carbon Steel Bolts (1 3/4" Ig.) and V 316SS Bolt Options are provided wit $\Delta P$ to Static Adapter is supplied with $\Delta P$ to $\Delta P$ Adapter is supplied with 8	th Stain n 4 Bolts	less Steel Washers. s and 3 Seal Rings (1 for					ransmit	ter).										

Wetted Parts according to above mentioned material list are supplied according to NACE MR0175/MR0103 and ISO 15156 (latest issue).

www.as-schneider.com Adapters 15


# **Horizontal Installation**

Horizontal Installation - Exploded View

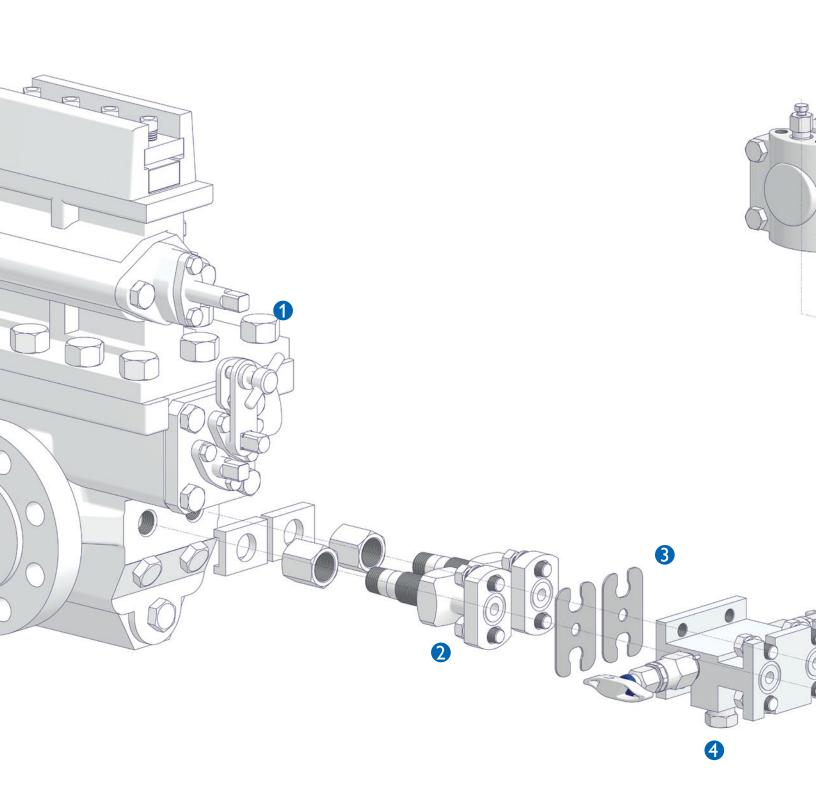

16 Horizontal Installation AS-Schneider

## **Horizontal Installation**

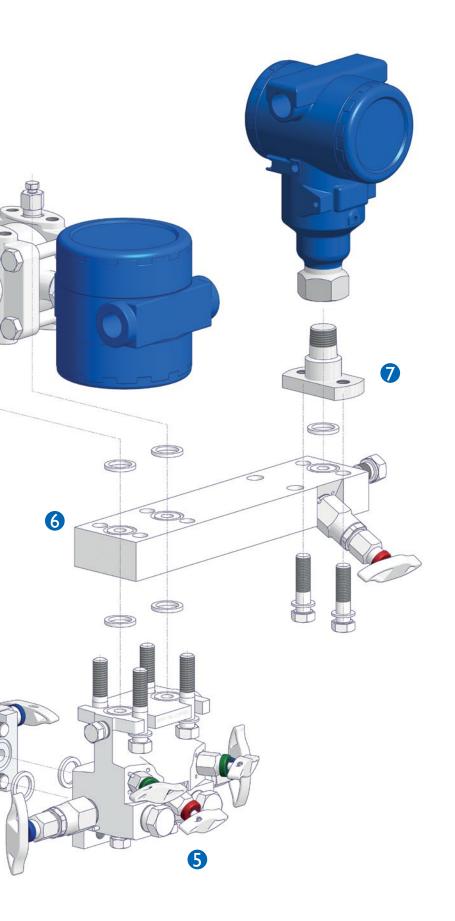


- 1. ORIFICE FITTING
- 2. STABILIZED CONNECTORS
- 3. DIELECTRIC ISOLATION

  To be ordered with stabilized connector
- 4. SPACER OR 2 VALVE MANIFOLD (OPTIONAL) c/w Accessory Kit
- 5. ANGLE TYPE 5 VALVE MANIFOLD c/w Accessory Kits to mount the transmitters, flow computers or adapters
- 6.  $\Delta P$  TO STATIC ADAPTER (OPTIONAL) c/w Accessory Kit for static transmitter side
- 7. NPT STATIC ADAPTER

www.as-schneider.com Horizontal Installation 17

## **Vertical Installation**

#### **Vertical Installation - Exploded View**

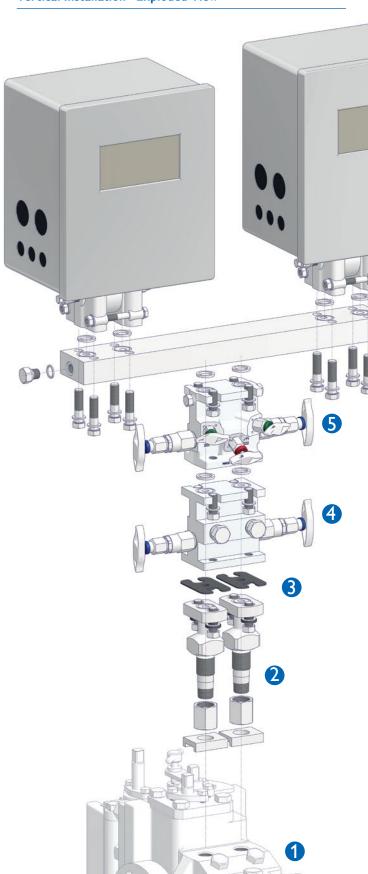


- 1. ORIFICE FITTING
- 2. STABILIZED CONNECTORS
- 3. DIELECTRIC ISOLATION

  To be ordered with stabilized connector
- 4. SPACER OR 2 VALVE MANIFOLD (OPTIONAL) c/w Accessory Kit
- 5. STRAIGHT TYPE 5 VALVE MANIFOLD c/w Accessory Kits to mount the transmitters, flow computers or adapters
- 6.  $\Delta P$  TO  $\Delta P$  ADAPTER (OPTIONAL) c/w Accessory Kits to mount the transmitters/flow computers

18 Vertical Installation AS-Schneider

# **Spare Parts**

#### **Dielectric Isolation Kits**

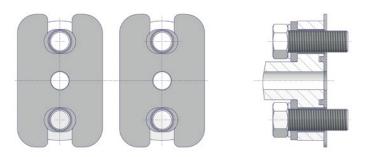

# AS-Schneider is providing the following Dielectric Isolation Kits (always supplied as pair: 2 Dielectric Flange Seals, 4 Bolts, 4 Washers and 4 Bolt Sleeves):

	-
To mount a Stabilized Connector to a Spacer/Manifold:	Part Number
Dielectric Kit w/CS Bolts (1 1/4" lg.) and CS Washers	DEK-01C
Dielectric Kit w/316 SS Bolts (1 1/4" lg.) and 316 SS Washers	DEK-01S
To mount a 5 Valve Manifold to a:	Part Number
Transmitter/Flow Computer with Traditional Flange	
Dielectric Kit w/CS Bolts (1 1/4" lg.) and CS Washers	DEK-02C
Dielectric Kit w/316 SS Bolts (1 1/4" lg.) and 316 SS Washers	DEK-02S
Transmitter/Flow Computer with Rosemount Coplanar™ Flange	
Dielectric Kit w/CS Bolts (2 1/2" lg.) and CS Washers	DEK-03C
Dielectric Kit w/316 SS Bolts (2 1/2" lg.) and 316 SS Washers	DEK-03S
To mount a 5 Valve Manifold with a $\Delta P$ to Static Adapter ( $\Delta P$ to Transmitter Side) to a:	Part Number
Transmitter/Flow Computer with Traditional Flange	
Dielectric Kit w/CS Bolts (2 1/4" lg.) and CS Washers	DEK-12C
Dielectric Kit w/316 SS Bolts (2 1/4" lg.) and 316 SS Washers	DEK-12S
Transmitter/Flow Computer with Rosemount Coplanar™ Flange	
Dielectric Kit w/CS Bolts (3 3/4" lg.) and CS Washers	DEK-13C
Dielectric Kit w/316 SS Bolts (3 3/4" lg.) and 316 SS Washers	DEK-13S

#### Flange Seal Rings and Valve Seats

Components	Material	Part Number				
Flange Seal Ring for Stabilized Connectors	PTFE	S006.23.351.08				
and Manifolds	FKM	531044				
Valve Seats - Isolate Valves (Block Valves)	ETFE	S007.01.350.1105				
- 3/8" (9.5 mm) Bore Size	POM	S007.01.350.1101				
Valve Seats - Equalize and Vent Valves	POM	S007.01.350.0801				
- 0.138" (3.5 mm) Bore Size	PCTFE	S007.01.350.0803				

www.as-schneider.com Spare Parts 19





## Armaturenfabrik Franz Schneider GmbH+Co.KG

Bahnhofplatz 12 I 74226 Nordheim Deutschland/Germany

Tel: +49 71 33 101-0 Fax: +49 71 33 101-148



www.as-schneider.com



AS-Schneider Asia-Pacific Pte. Ltd.

970 Toa Payoh North, #02-12/14/15 Singapore 318992

Tel: +65 62 51 39 00 Fax: +65 62 51 39 90



www.as-schneider.sg



#### Armaturenfabrik Franz Schneider SRL

Sales Office: Str. Basarabilor, Nr. 7 I 100036 Ploiesti Romania

**Tel:** +40 244 384 963 **Fax:** +40 244 384 963

Production Plant:

Str. Mihai Viteazu, Nr. 327i I 507085 Harman

Jud. Brașov I Romania

**Tel:** +40 368 41 40 25 **Fax:** +40 368 41 40 26



www.as-schneider.ro



#### AS-Schneider Middle East FZE

P.O. Box 18749 I Dubai United Arab Emirates



www.as-schneider.ae



AS-Schneider America, Inc.

17421 Village Green Dr I Houston, TX 77040 United States of America

Tel: +1 281 2 58 42 63 Fax: +1 281 5 06 79 35



www.as-schneider.com