Safety light curtain

SLC30-1350/129/151





Model Number

SLC30-1350/129/151

with 2 separate fail-safe semiconductor outputs

Features


- ٠ Sensing range up to 15 m
- Resolution 30 mm (hand protection) ٠
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and • Play
- Protection degree IP67 ٠
- Integrated function display ٠
- Pre-fault indication
- Connection via appliance socket • M12 x b1
- Safety outputs OSSD in potential-se-٠ parated semiconductor version
- Protective field height up to 1800 mm ٠
- Start/Restart disable preset by Opti-• on /129

Accessories


PG SLC-1350 Protective glass panes for SLC series

BA SLC

laser alignment aid for safety light cutrtains series SLC

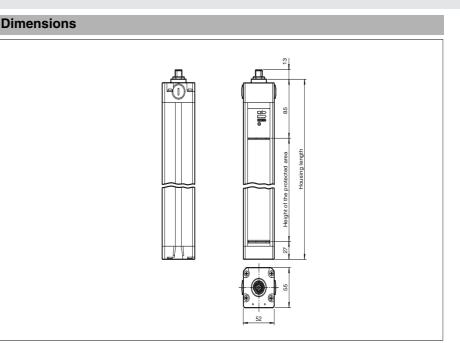

Electrical connection

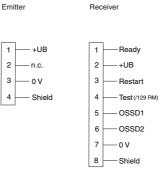


Pinout

1

2

з

4



199756_eng.xml

Subject to modifications without notice Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

SLC30-1350/129/151

Technical data	
General specifications	
Effective detection range	0.2 15 m
Light source	IRED
Light type	modulated infrared light
Approvals	TUV, cULus
Tests	IEC/EN 61496
Safety type according to IEC/EN 61496	4
Marking	CE
Width of protected area	0.2 15 m
Protection field height	1350 mm
Number of beams	72
Operating mode	can be selected with or without start/restart disable
Optical resolution	30 mm
Angle of divergence	< 5 °
Functional safety related parameters	
Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Category	Cat. 4
Mission Time (T _M)	20 a
PFH _d	1.35 E-8
Туре	4
Indicators/operating means	
Operating display	7-segment display in emitter
Diagnostics display	7-segment display in receiver
Function display	in receiver:
	LED red: OSSD off LED green: OSSD on LED yellow: Protected area free, system start-ready
Pre-fault indication	LED orange
Controls	switch for start/restart disable, transmission coding
	Switch for star trestart disuble, it distribution obtains
Electrical specifications	
Operating voltage U _B	24 V DC (-30 %/+25 %)
No-load supply current I ₀	Emitter: ≤ 100 mA receiver: ≤ 150 mA
Protection class	Ш
Input	
Activation current	approx. 10 mA
Activation time	0.03 1 s
Test input	Reset-input for system test (not for option /129)
Function input	Start release
Output	
Safety output	2 separated fail safe semiconductor outputs
Signal output	1 PNP, max. 100 mA for start readiness
Switching voltage	Operating voltage -2 V
Switching current	max. 0.5 A
Response time	24 ms
Ambient conditions	2-1115
Ambient temperature	0 55 °C (32 131 °F)
Storage temperature	-25 70 °C (-13 158 °F)
Relative humidity	max. 95 %, not condensing
Mechanical specifications	
Housing length L	1460 mm
Protection degree	IP67
Connection	Emitter: M12 connector, 4-pin Receiver: M12 connector, 8-pin
Material	
Housing	extruded aluminum profile, RAL 1021 (yellow) coated
Optical face	Plastic pane
Mass	Per 4350 g
General information	
System components	
Emitter	SLC30-1350-T / 92
Receiver	
	SLC30-1350-R / 129 / 151 Startup/restart disable preset
Compliance with standards and directi-	
Ves	
Directive conformity	EN ICO 10040 1.0000 EN 01400 1.0004/41/0000
Machinery Directive 2006/42/EC	EN ISO 13849-1:2008 EN 61496-1:2004/A1:2008
EMC Directive 2004/108/EC	EN 61000-6-4:2007 + A1:2011
Standard conformity	
Standards	IEC 61496-2:2006 EN 50178:1997
Approvals and certificates	
CE conformity	CE
UL approval	cULus Listed
	Products with a maximum operating voltage of <36 V do not bear a CCC marking because they do not require approva
CCC approval	Troducio with a maximum operating voltage of 200 v do not bear a 000 marking because thev do not reduite abbrova
CCC approval TÜV approval	EN 61000-6-4:2007 + A1:2011 IEC 61496-2:2006 EN 50178:1997 CE cULus Listed Products with a maximum operating voltage of ≤36 V do not bear a CCC marking because they do not require approval TÜV

Pepperl+Fuchs Group USA: +1 330 486 0001 www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

0001 Germany: +49 621 776-4411 chs.com fa-info@pepperl-fuchs.com


 Copyright Pepperl+Fuchs


 I11
 Singapore: +65 6779 9091


 vm
 fa-info@sg.pepperl-fuchs.com



Curves/Diagrams

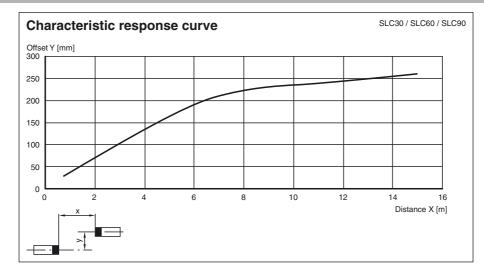

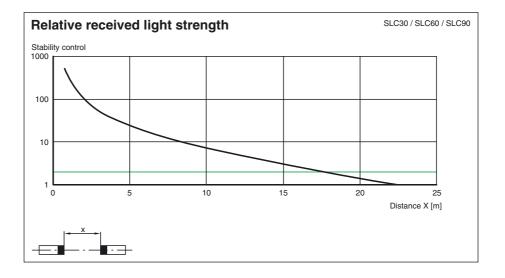

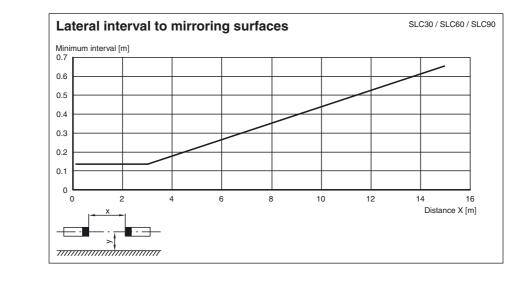

Notes

Master slave mode

Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Master:	SLC (semiconductor)
	or
	SLC/31 (relay)
Slave:	SLCS

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

Installation:

- 1 The end cap should be screwed off for the light curtain (without cable gland).
- 2 The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
- 3 The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light curtain with the printed circuit board.
- 4 After you have screwed on the connection cap, the system is complete.

System accessories

- Mounting set SLC
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- Lateral screwed connection SLC
- Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar Enclosure UC SLP/SLC
- Collision protector Damping UC SLP/SLC

