

# PROFIBUS DPV0

GATEWAYS & ENCODERS

MANUAL / USERS GUIDE



**Leine & Linde AB**

T +46-(0)152-265 00

F +46-(0)152-265 05

[info@leinelinde.com](mailto:info@leinelinde.com)

[www.leinelinde.com](http://www.leinelinde.com)

Publication date: 2012-06-01

**LEINE  LINDE**

# Contents

<b>List of tables</b>	<b>4</b>
<b>List of pictures</b>	<b>5</b>
<b>1 GENERAL INFORMATION</b>	<b>6</b>
1.1 PROFIBUS GATEWAY	6
1.2 ABSOLUTE ENCODERS	6
1.3 PROFIBUS TECHNOLOGY	6
1.4 ABOUT LEINE & LINDE AB	7
1.4.1 Technical and commercial support	7
1.5 REFERENCES	7
1.5.1 Abbreviations	7
<b>2 GATEWAY INSTALLATION</b>	<b>8</b>
2.1 SETTINGS INSIDE THE GATEWAY	8
2.1.1 Node address	8
2.1.2 Bus termination	9
2.2 POWER SUPPLY	9
2.2.1 Power supply	9
2.2.1 BUS lines	10
2.3 SHIELDING PHILOSOPHY	11
2.4 GSD-FILES	11
2.5 LED INDICATION	12
<b>3 RSA/RHA 6X8, ENCODER INSTALLATION</b>	<b>13</b>
3.1 SETTINGS INSIDE THE ENCODER	13
3.1.1 Node address	13
3.1.2 Bus termination	13
3.2 CONNECTING THE ENCODER	14
3.2.1 Power supply	14
3.2.1 BUS lines	15
3.3 SHIELDING PHILOSOPHY	15
3.4 GSD-FILES	16
3.5 LED INDICATION	17
<b>4 PROFILE OVERVIEW</b>	<b>18</b>
4.1 DPV0 ENCODER CLASSES	19
<b>5 ENCODER AND GATEWAY FUNCTIONALITY, DPV0</b>	<b>20</b>
5.1 BASIC FUNCTIONALITY	20
5.2 PROFIBUS DATA TRANSFER PRINCIPLE	20
5.2.1 During configuration (DDL_M_Chk_Cfg mode)	20
5.2.2 During parameterization (DDL_M_Set_Prm mode)	20
5.2.3 Normal operation (DDL_M_Data-Exchange mode)	20
5.3 CONFIGURATION, DPV0	20

5.4	PARAMETERIZATION, DPV0	21
5.4.1	Code sequence	22
5.4.2	Class 2 functionality	22
5.4.3	Commissioning diagnostics	22
5.4.4	Scaling function control	22
5.4.5	Measuring units per revolution	23
5.4.6	Total measuring range (units)	24
5.4.7	Velocity control	25
5.4.8	Velocity calculation	25
5.5	DATA TRANSFER IN NORMAL OPERATION (DDL_M_DATA_EXCHANGE)	26
5.5.1	Data exchange mode	26
5.5.2	Preset function	27
5.6	DIAGNOSTICS	28
5.6.1	Diagnostic header	29
5.6.2	Alarms	29
5.6.3	Operating status	30
5.6.4	Encoder type	31
5.6.5	Singleturn resolution or measuring step	32
5.6.6	Number of distinguishable revolutions	32
5.6.7	Additional alarms	33
5.6.8	Supported alarms	33
5.6.9	Warnings	34
5.6.10	Supported warnings	35
5.6.11	Profile version	35
5.6.12	Software version	36
5.6.13	Operating time	36
5.6.14	Offset value	37
5.6.15	Offset value of the encoder manufacturer	37
5.6.16	Scaling parameters settings	38
5.6.17	Encoder serial number	39

## 6 ENCODER COMMISSIONING EXAMPLE, DPV0 40

## 7 REVISION HISTORY 44

### List of tables

Table 1	Terminating switch settings	9
Table 2	Pinning M12 power supply connector	9
Table 3	Pinning M12 bus in/out – lines	10
Table 4	Available GSD file for DPV0 gateway	11
Table 5	LED indication	12
Table 6	Terminating switch settings	14
Table 7	Pinning M12 power supply	14
Table 8	Pinning M12 bus in/out – lines	15
Table 9	Available GSD file for DPV0 encoders	16
Table 10	LED indication	17
Table 11	Operating parameters in DPV0	21
Table 12	Octet 9, Parameter definition	21
Table 13	Singleturn scaling parameter format	23
Table 14	Multiturn scaling parameter format	23
Table 15	Octet 39 Velocity Control	25
Table 16	Data exchange 32-bits	26
Table 17	Data exchange 16-bits	26

Table 18 Preset value, 32-bit format	27
Table 19 Preset value, 16-bit format	27
Table 20 Diagnostics message, DPV0	28
Table 21 Diagnostic header	29
Table 22 Alarms	29
Table 23 Operating status	30
Table 24 Diagnostics, encoder type	31
Table 25 Diagnostics, singleturn resolution	32
Table 26 Diagnostics, number of distinguishable revolutions	32
Table 27 Diagnostics, additional alarms	33
Table 28 Diagnostics, supported alarms	33
Table 29 Diagnostics, warnings	34
Table 30 Diagnostics, supported warnings	35
Table 31 Diagnostics, profile version	35
Table 32 Diagnostics, software version	36
Table 33 Diagnostics, operating time	36
Table 34 Diagnostics, offset value	37
Table 35 Diagnostics, offset value of the encoder manufacturer	37
Table 36 Diagnostics, scaling parameters setting	38
Table 37 Diagnostics, encoder serial number	39
Table 38 Revision history	44

## List of pictures

Picture 1 Placement of screws	8
Picture 2 PCB-view of a cable gland PROFIBUS gateway	8
Picture 3 Orientation of M12 power supply connector	9
Picture 4 Terminal connections of power supply cables	10
Picture 5 Orientation of M12 bus connectors	10
Picture 6 Terminal connection of bus line cables	10
Picture 7 PCB-view of a cable gland PROFIBUS encoder	13
Picture 8 Orientation of M12 power supply connector	14
Picture 9 Terminal connection of power supply cables	14
Picture 10 Orientation of M12 bus connectors	15
Picture 11 Terminal connection of bus line cables	15
Picture 12 Overview encoder profile and related documents	18
Picture 13 Basic functionality	20
Picture 14 Cyclic Scaling	24
Picture 15 Non-cyclic scaling	24

**Leine&Linde AB claims copyright on this documentation.** This documentation may not be modified, extended or passed onto to a third party and/or copied without written approval from Leine&Linde AB.

Specifications and content in this document are subject to change without prior notice due to our continuous efforts to improve the functionality and performance of our products.

# 1 General information

This manual describes installation and configuration options of Leine&Linde devices with PROFIBUS DPV0 interfaces. The PROFIBUS-DP gateway is the solution for applications with high ambient temperature. Encoders with integral PROFIBUS DP interface are advantageous if a very compact solution is required.

In view of the certification by PNO (PROFIBUS user organization) all products can be used in all PROFIBUS DPV0 systems without restrictions. Among other things this means that all possible baud rates, the complete address range and the device characteristics are supported according to the PROFIBUS device profile for encoders.

## 1.1 PROFIBUS Gateway

The advantages of the gateway concept is that it allows the use of small and very robust EnDat encoders, which make the gateway solution suitable in applications where very high ambient temperature is a limiting factor. The Gateway works with all Leine&Linde EnDat encoders with either M12 or M23 (EML) connectors. The PROFIBUS gateway supports singleturn encoders with up to 31 bit resolution and multiturn encoders with up to 37 bits resolution with the limitations described in this manual.

## 1.2 Absolute encoders

With an absolute encoder each angular position is assigned a coded position value generated by a code disc equipped with several parallel fine graduations tracks which are scanned individually. On singleturn encoders, i.e. an encoder producing absolute positions within one revolution, the absolute position information repeats itself with every revolution. So called multiturn encoders can also distinguish between revolutions. The numbers of unique revolutions is determined by the resolution of the multiturn scanning and repeats itself after the total resolution is reached.

## 1.3 PROFIBUS technology

PROFIBUS is a powerful and versatile 2-wire non-proprietary open fieldbus standard defined by several international standards such as EN 50170, IEC 61158 together with different device profiles. There are 3 different PROFIBUS versions available today, DP, FMS and PA. Leine & Linde products support the DP version. In addition to manufacturer-specific functions, the Leine & Linde products described in this manual supports class 1 and 2 according to the encoder profile 3.062. The encoder device profile describing encoder functionality and additional information about PROFIBUS can be ordered from PROFIBUS User Organization, PNO or directly from Leine&Linde AB.

### PROFIBUS User Organization

Haid-und-Nue Straße 7  
DE-76131 Karlsruhe, Germany

Tel: +49-(0)721-96 58 590

Fax: +49-(0)721-96 58 589

Web: [www.profibus.com](http://www.profibus.com)

## 1.4 About Leine&Linde AB

For more than 40 years, the Swedish based company Leine&Linde has concentrated on one thing – development and manufacturing of advanced encoders that meet the most rigorous demands a user can place on them. That is why a wide assortment of incremental and absolute encoders with obvious concentration on robust products and quality down to the last detail can be offered. Leine & Lindes encoders provide the utmost in reliability year after year, in working conditions where vibration, dirt, cold and other harsh environments are common.

Leine & Linde can meet very specific individual demands. The encoders are easily adopted due to a modular design in the collection exactly to the customer's needs with respect to resolution, electrical connections and interfaces, voltage, casings, etc. That is due to the fact that tomorrow's technology already is used today in Leine&Linde products. Leine & Linde concentrate on advanced development of intelligent encoders with integrated ASICs, new special features and with adaptations to different fieldbus systems. This enables us to meet the need for increasingly effective and dependable machines and automation to an even higher degree.

### 1.4.1 Technical and commercial support

Leine&Linde are represented by subsidiaries in many countries around the world. In addition to the address listed here, there are many services agencies and distributors located worldwide ready to reply to commercial enquires or technical support. For more contact information, please visit our web site or contact Leine&Linde in Strängnäs, Sweden.

#### Leine&Linde AB

Box 8  
SE-645 21 Strängnäs, Sweden  
Tel: +46-(0)152-265 00  
Fax: +46-(0)152-265 05  
E-mail: info@leinelinde.com  
Web: www.leinelinde.com

## 1.5 References

PROFIBUS Encoder profile V1.1, Order No. 3.062


### 1.5.1 Abbreviations

PROFIBUS	<b>Process Field Bus</b>
PI	<b>PROFIBUS International</b>
PNO	<b>PROFIBUS Nutzerorganisation</b> e.V. (PROFIBUS user organization)
GSD	German term " <b>Gerätestammdaten</b> ". A GSD is the device database file, also called "device datasheet".
DP	<b>Decentral Periphery</b>
Input data	Data which the master receives from the encoder
Output data	Data which the encoder receives from the master.
PDU	<b>Protocol Data Unit</b>
DDLML	<b>Direct Data Link Mapper</b> , the interface between PROFIBUS-DP functions and the encoder software
DDLML_Set_Prm	Interface during parameterization
DDLML_Data_Exchange	Interface during data exchange (normal operation)
DDLML_Slave_Diag	Interface during diagnostics data transfer
DDLML_Chk_Cfg	Interface during configuration

## 2 Gateway installation

### 2.1 Settings inside the gateway

The gateway addressing switches and bus termination must be configured during commissioning of the device. This is done by removing the back cover, i.e. screwing off the three screws at the rear of the gateway.

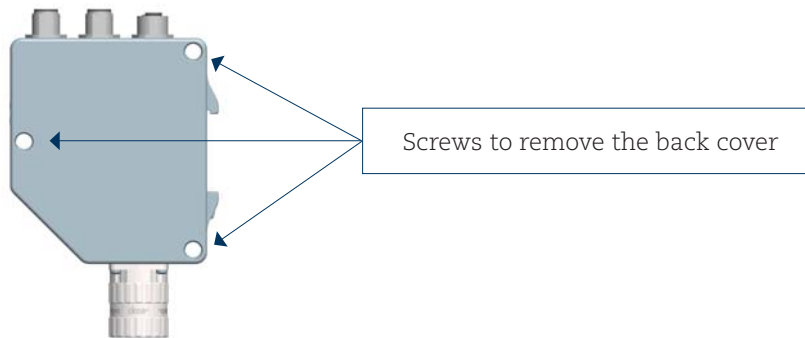


**Picture 1** Placement of screws

#### 2.1.1 Node address

The node address of the gateway can be set via three decimal rotary switches located inside the back cover. The weighting, x100, x10 and x1 are specified on the circuit board besides the switches. Permissible address range is between 0 and 126 but the lower addresses 0 to 2 are usually used by the master and not recommended to be used by the device. Each address used in a PROFIBUS network must be unique and may not be used by other devices.

The device address is only read and adopted when the gateway power supply is switched on. A restart of the gateway is therefore required in order to adopt changes done to the address settings.

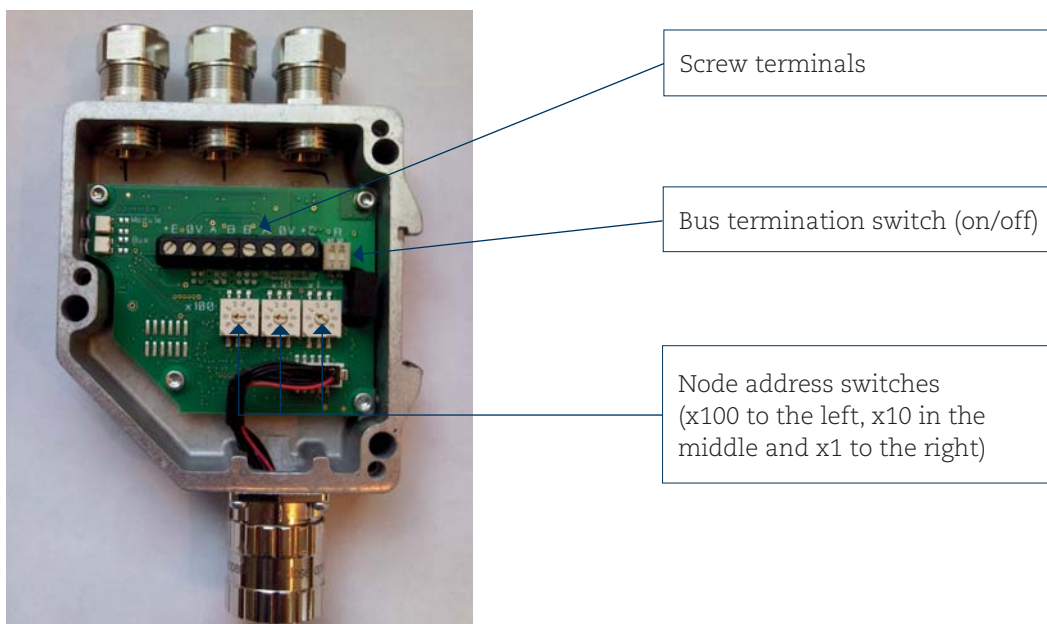

**Picture 2** PCB-view of a cable gland PROFIBUS gateway

**Example:** To set the node address to 115, the switch to the left (x100) shall be set to 1, the switch in the middle(x10) should also be set to 1 and the switch to the right(x1) shall be set to 5.

## 2.1.2 Bus termination

In a PROFIBUS net, all devices are connected in a bus structure. Up to 32 devices (master and/or slaves) can be connected in one segment. When more devices are needed repeaters should be used to amplify the signals between segments. An active termination must be added in the beginning and end of each bus segment in order to ensure error-free operation. In case of the gateway with cable glands such terminators are integrated inside the back cover and can be activated via dip switches as shown in picture 2. If the device is un-powered the A and B lines are internally terminated by a 220Ω resistor.

Bit 1	Bit 2	Effect
ON	ON	There is a 220 ohm resistor between bus-A and bus-B line.
ON	OFF	Not a valid setting.
OFF	ON	Not a valid setting.
OFF	OFF	There is no resistor between bus-A and bus-B line.

**Table 1** Terminating switch settings


When gateways with M12 connectors are used the termination should be done using a terminating resistor plug. The terminating resistor plug is available as an accessory from Leine & Linde.

**Note:** When M12 terminating resistor plugs are used, the internal terminating switch shall not be activated.

## 2.2 Power supply

### 2.2.1 Power supply

The power supply connection of M12 equipped gateways are constituted by a male A-coded 4 pin M12 connector.

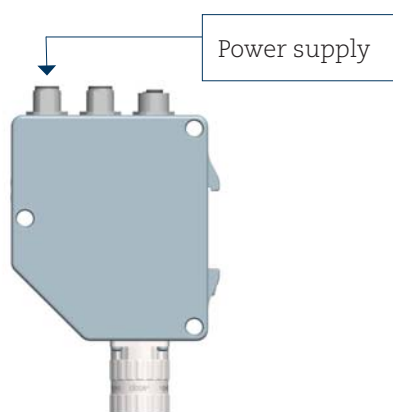

Power supply M12 version	
Function	Pin
+E Volt (9-36Vdc)	1
Not connected	2
0 Volt	3
Not connected	4


**Picture 3** Orientation of M12 power supply connector

**Table 2** Pinning M12 power supply connector

Gateways equipped with cable glands are delivered with a dust protection foil from the factory. The protection foil needs to be removed prior to installing the cables.

Gateways equipped with cable glands should always be equipped with a shielded power supply cable with conductor area between 0,34 mm<sup>2</sup> to 1.5 mm<sup>2</sup>. Permissible outer cable diameter is Ø 6 mm to Ø 8 mm for the power supply cable. The power supply screw terminal is located inside the back cover of the gateway. In the case were the gateway is the last node in the bus-structure and only the cable glands for Supply and Bus-in is in use, the Bus out cable gland should be replaced with a M16 filler plug to ensure proper sealing. The M16 filler plug is available as an accessory from Leine & Linde.

The +E terminal shall be used to connect +E Volt (9-36Vdc).  
The 0V terminal shall be used to connect 0 Volt.

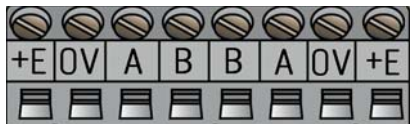


**Picture 4** Terminal connections of power supply cables

**Note:** Tighten all screws in the terminal, even if no cable has been attached.

**Note:** The two +E terminals are internally connected to each other and the two 0V terminals are also connected to each other, i.e. it does not matter to which pair the +E Volt and 0 Volt are connected to.

## 2.2.1 BUS lines

The PROFIBUS bus line connections of the M12 equipped devices are constituted by a male B-coded 5 pin M12 connector (bus in), and a female B-coded 5 pin M12 connector (bus out).

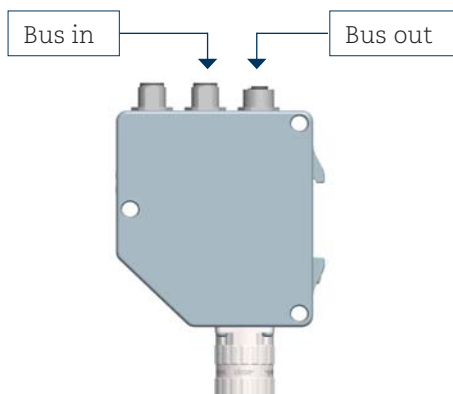


Bus in- lines		Bus out- lines	
Function	Pin	Function	Pin
Not connected	1	VP	1
A	2	A	2
Not connected	3	DGND	3
B	4	B	4
Chassi	5	Chassi	5

**Picture 5** Orientation of M12 bus connectors

**Table 3** Pinning M12 bus in/out – lines

The cable gland gateways shall be equipped with twisted pair shielded cable in accordance with EN 50170 and PROFIBUS guidelines. The guidelines recommend a conductor area higher than 0,34 mm<sup>2</sup>. Permissible outer cable diameter is ø 8 mm to ø 10 mm for the bus lines cables. Located inside the back cover are four screw terminals containing the required bus line terminals marked A and B. Cable glands not used, should be replaced with a M16 filler plug to ensure proper sealing. The M16 filler plug is available as an accessory from Leine&Linde.

The A terminal shall be used to connect the A-line.  
The B terminal shall be used to connect the B-line.

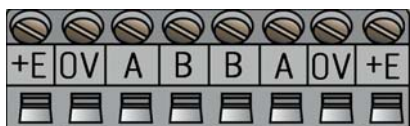

**Picture 6** Terminal connection of bus line cables

**Note:** Tighten all screws in the terminal, even if no cable has been attached.

**Note:** The two A -terminals are internally connected to each other and the two B-terminals are also internally connected to each other so it does not matter to which the bus lines are connected to.

## 2.3 Shielding philosophy

To achieve the highest possible noise immunity and resistance against other EMI related disturbances the bus and power supply cables shall always be shielded. The screen should be connected to ground on both ends of the cable. In certain cases compensation current might flow over the screen. Therefore a potential compensation wire is recommended.

## 2.4 GSD-files

PROFIBUS Gateways can be configured and parameterized corresponding to the requirements of the user. When the system is started, the PROFIBUS devices are set and configured in DDLM\_Set\_Prm mode, i.e. the application class set by means of the GSD file in the configuration tool and the operating parameters are transferred to the respective slave.

Available GSD files can be downloaded from [www.leinelinde.com](http://www.leinelinde.com).

GSD file	
Gateway Functionality	GSD file
Gateway, DPV0	llpb0680.gsd, (ll__0680.gsd)

**Table 4** Available GSD file for DPV0 gateway

**Note:** GSD file ll\_\_0680 is supported only for compatibility with old Leine & Linde Profibus gateway, and is not recommended for new customers.

When configuring the gateways two device classes (Class 1 or Class 2) can be selected as described in chapter 4. Selectable parameters and functionality of the device depend on the selected encoder class. This data, saved in the PROFIBUS master is transferred once to the gateway when the system is powered on. If the gateway has been started with one GSD file and a new GSD file with a different ID-number shall be used, the gateway needs to be restarted before it can use the new GSD file.

After the configuration and parameter data have been received, the gateway enters normal operation with cyclic data transfer i.e. "DDLM\_Data\_Exchange mode".

### Installation of GSD-files:

- 1) Select and save the GSD file for the respective device from our homepage [www.leinelinde.com](http://www.leinelinde.com) and then copy the \*.gsd file into the respective directory of the PROFIBUS configuration tool.
- 2) Select the bitmap file of the respective device and copy the \*.bmp file into the respective directory of the PROFIBUS configuration tool.
- 3) Update the GSD files (SCAN).

## 2.5 LED indication

In order to determine the status of the gateway two LEDs are visible on the front of the gateway. The module LED indicates status of the module itself. The bus LED indicates the status of the bus. The table below defines the diagnostic messages using a bicoloured red/green LED for bus and module.

Bicolour (Bus status)	Bicolour (Module)	Meaning	Cause
Off	Off	No Power	
Red	Green	No connection to another device Criterion: no data exchange	- Bus disconnected - Master not available / switched off
Red 2)	Red 2)	No connection to another device No connection between EnDat encoder and PROFIBUS PCB	- No connection to EnDat encoder at power up
Blinking 1 )	Green	Parameterization or configuration fault	- Configuration received differs from the supported configuration. - Parameter error in the parameterization.
Green	Red	System Failure	- Diagnosis exists, slave in data Exchange mode - Position error
Green	Green	Data exchange Slave and operation ok	

**Table 5** LED indication

- 1) The **blinking** frequency is 0.5 Hz. Minimal indication time is 3 sec.
- 2) Position error is when an alarm occurs in the encoder or if the EnDat encoder is disconnected from the PROFIBUS interface PCB.

## 3 RSA/RHA 6X8, Encoder installation


### 3.1 Settings inside the encoder

The encoder node address and bus termination must be configured during commissioning of the device. This is done by removing the back cover, i.e. screwing off the three screws at the rear of the encoder.

#### 3.1.1 Node address

The node address of the encoder can be set via two decimal rotary switches located inside the back cover. The weighting, x10 or x1 are specified beside the switches. Permissible address range is between 0 and 99 but the lower addresses 0 to 2 are usually used by the master and not recommended to be used by the device. Each address used in a PROFIBUS network must be unique and may not be used by other devices.

The device address is only read and adopted when the encoder power supply is switched on. A restart of the encoder is therefore required in order to adopt changes done to the address settings.

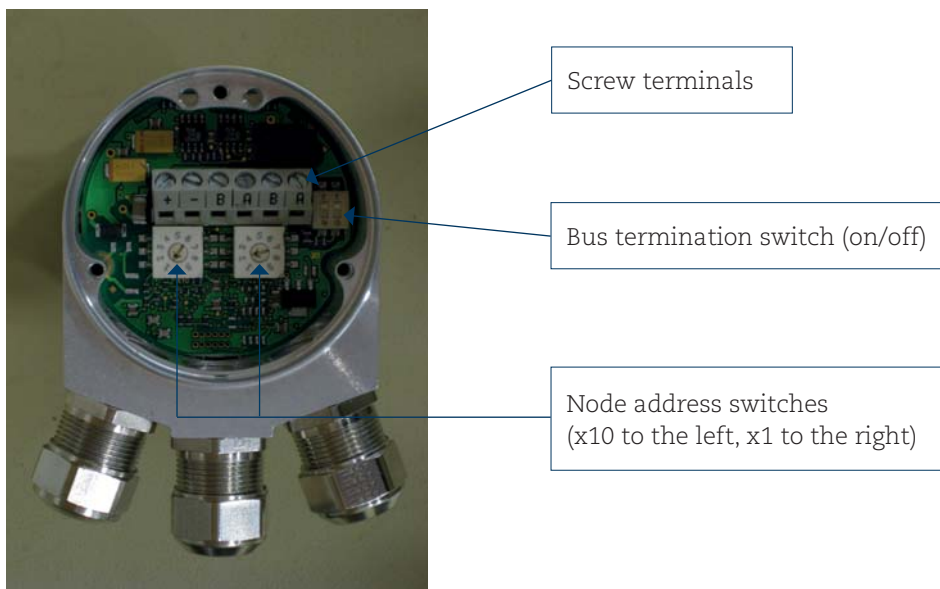

**Picture 7** PCB-view of a cable gland PROFIBUS encoder

**Example:** If the node address shall be set to 85, the left(x10) switch shall be set to 8 and the right(x1) switch shall be set to 5.

#### 3.1.2 Bus termination

In a PROFIBUS net, all devices are connected in a bus structure. Up to 32 devices (master and/or slaves) can be connected in one segment. When more devices are needed repeaters should be used to amplify the signals between segments. An active termination must be added in the beginning and end of each bus segment in order to ensure error-free operation. In case of the encoder with cable glands such terminators are integrated inside the back cover and can be activated via dip switches as shown in picture 7. If the device is un-powered the A and B lines are internally terminated by a 220Ω resistor.

Bit 1	Bit 2	Effect
ON	ON	There is a 220 ohm resistor between bus-A and bus-B line.
ON	OFF	Not a valid setting.
OFF	ON	Not a valid setting.
OFF	OFF	There is no resistor between bus-A and bus-B line.

**Table 6** Terminating switch settings


When encoders with M12 connectors are used the termination should be done using a terminating resistor plug. The terminating resistor plug is available as an accessory from Leine&Linde.

**Note:** When M12 terminating resistor plugs are used, the internal terminating switch shall not be activated.

## 3.2 Connecting the encoder

### 3.2.1 Power supply

The power supply connection of M12 equipped encoders are constituted by a male A-coded 4 pin M12 connector.

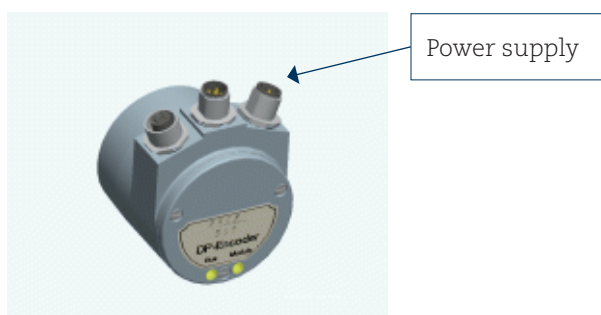

Power supply M12 version	
Function	Pin
+E Volt (9-36Vdc)	1
Not connected	2
0V	3
Not connected	4

**Picture 8** Orientation of M12 power supply connector

**Table 7** Pinning M12 power supply connector

Encoders equipped with cable glands are delivered with a dust protection foil from the factory. The protection foil needs to be removed prior to install the cables. The cable gland encoders should always be equipped with a shielded power supply cable with conductor area between 0,34mm<sup>2</sup> to 1.5mm<sup>2</sup>. Permissible outer cable diameter is ø 6 mm to ø 8 mm for the power supply cable. Located inside the back cover are two screw terminals containing the required power supply terminals marked (+) and (-).

In the case were the encoder is the last node in the bus-structure and only the cable glands for Supply and Bus-in is in use, the Bus out cable gland should be replaced with a M16 filler plug to ensure proper sealing. The M16 filler plug is available as an accessory from Leine & Linde.

The (+) terminal shall be used to connect the +EV-line (9-36Vdc).  
The (-) terminal shall be used to connect the 0V-line.




**Picture 9** Terminal connection of power supply cables

**Note:** Tighten all screws in the terminal, even if no cable has been attached.

### 3.2.1 BUS lines

The PROFIBUS bus line connections of the M12 equipped devices are constituted by a male B-coded 5 pin M12 connector (bus in), and a female B-coded 5 pin M12 connector (bus out).

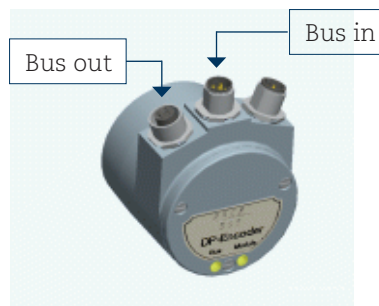

**Picture 10** Orientation of M12 bus connectors

Bus in- lines		Bus out- lines	
Function	Pin	Function	Pin
Not connected	1	VP	1
A	2	A	2
Not connected	3	DGND	3
B	4	B	4
Chassi	5	Chassi	5

**Table 8** Pinning M12 bus in/out – lines

The cable gland encoders shall be equipped with twisted pair shielded cable in accordance with EN 50170 and PROFIBUS guidelines. The guidelines recommend a conductor area higher than 0,34mm<sup>2</sup>. Permissible outer cable diameter is Ø 8 mm to Ø 10 mm for the bus line cables. Located inside the back cover are four screw terminals containing the required bus line terminals marked (A) and (B). Cable glands not used should be replaced with a M16 filler plug to ensure proper sealing. The M16 filler plug is available as an accessory from Leine & Linde.

The (A) terminal shall be used to connect the A-line.

The (B) terminal shall be used to connect the B-line.



**Picture 11** Terminal connection of bus line cables

**Note:** Tighten all screws in the terminal, even if no cable has been attached.

**Note:** The two A-terminals are internally connected to each other and the two B-terminals are also internally connected to each other so it does not matter to which terminal the bus lines are connected to.

## 3.3 Shielding philosophy

To achieve the highest possible noise immunity and resistance against other EMI related disturbances the bus and power supply cables shall always be shielded. The screen should be connected to ground on both ends of the cable. In certain cases compensation current might flow over the screen. Therefore a potential compensation wire is recommended.

## 3.4 GSD-files

Absolute encoders with PROFIBUS can be configured and parameterized corresponding to the requirements of the user. When the system is started, the PROFIBUS devices are set and configured in DDLM\_Set\_Prm mode, i.e. the encoder class set by means of the GSD file in the configuration tool and the operating parameters are transferred to the respective slave.

Available GSD files can be downloaded from [www.leinelinde.com](http://www.leinelinde.com)

GSD file	
Encoder functionality	GSD file
Integrated encoder, DPV0	enc_a401.gsd (llpba401.gsd)

**Table 9** Available GSD file for DPV0 encoders

When configuring the encoders various encoder classes can be selected as described in chapter 4. Selectable parameters and functionality of the device depend on the selected encoder class. This data, saved in the PROFIBUS master is transferred once to the encoder when the system is powered on. If the encoder has been started with the GSD file for DPV0 functionality and a GSD file with a different ID-number shall be used, the encoder needs to be restarted before it can use the new GSD file.

After the configuration and parameter data have been received the encoder enters normal operation with cyclic data transfer i.e. "DDLM\_Data\_Exchange mode".

### Installation of GSD-files:

- 1) Select and save the GSD file for the respective device from our homepage [www.leinelinde.com](http://www.leinelinde.com) and then copy the \*.gsd file into the respective directory of the PROFIBUS configuration tool.
- 2) Select the bitmap file of the respective device on the floppy disk and copy the \*.bmp file into the respective directory of the PROFIBUS configuration tool.
- 3) Update the GSD files (SCAN).

## 3.5 LED indication

In order to determine the status of the encoder two LEDs are visible from the rear end of the encoder. The module LED indicates status of the module itself. The bus LED indicates the status of the bus. The table below defines the diagnostic messages using a red (BUS) and a bicolor, Red/Green, LED (MODULE).

Bus	Module	Meaning	Cause
Off	Off	No Power	
Red	Green	No connection to another device Criterion: no data exchange	- Bus disconnected - Master not available / switched off
Red 2)	Red 2)	No connection to another device No connection between EnDat encoder and PROFIBUS PCB	- No connection to EnDat Encoder at power up
Blinking Red 1 )	Green	Parameterization or configuration fault	- Configuration received differs from the supported configuration. - Parameter error in the parameterization.
Green	Red	System Failure	- Diagnosis exists, slave in data Exchange mode - Position error
Green	Green	Data exchange Slave and operation ok	

**Table 10** LED indication


- 1) The **blinking** frequency is 0.5 Hz. Minimal indication time is 3 sec.
- 2) Position error is when an alarm occurs in the encoder or if the EnDat encoder is disconnected from the PROFIBUS interface PCB.

## 4 Profile overview

### Encoder Profile for DPV0, version 1.1, Order no 3.062.

The operating functions in this profile are divided into two device classes named Class 1 and Class 2. Class 1 encoders offer basic functions that all PROFIBUS-DP encoders must support. An encoder of class 1 can optionally support selected functions of class 2 but these functions must be implemented according to the profile. To support early PROFIBUS-DP implementations the size of the protocol data units (PDU) is limited to 16 bytes. Encoders of class 2 must support all functions of class 1 as well as the additional functionality of class 2. In addition to the two classes, parameters and diagnostic ranges are reserved for manufacturer-specific functions.

For further information regarding the encoder functionality refer to the device profile. The profile and PROFIBUS technical information can be ordered at PNO in Karlsruhe, Germany ([www.profibus.com](http://www.profibus.com)).

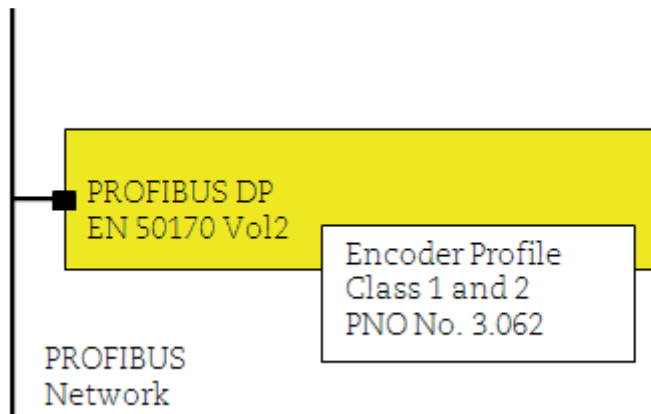

**Picture 12** Overview encoder profile and related documents

## 4.1 DPV0 encoder classes

The device can be configured as a class 1 or class 2 PROFIBUS slave device. Class 2 configuration is extended to optionally access velocity information from the encoder.

**CLASS 1** In the CLASS 1 configuration, only input data are assigned. Depending on the encoder resolution, this is one input data word (16 bits) or two (32 bits).

The following functions can be performed:

- Changed direction of counting (Code sequence)
- Diagnostic data up to octet 16

Configuration data:

**Singleturn** Class 1 – 16 Bit: D0hex, 1 input data word, data consistency

**Multiturn** Class 1 – 32 Bit: D1hex, 2 input data words, data consistency

**CLASS 2** In the CLASS 2 configuration output data values and input data words are transferred. Depending on the encoder resolution, this is one input data word (16 bits) and one output data word (16 bits) or two input data words (32 bits) and two output data words (32 bits).

The following functions are available in addition to the class 1 functions:

- Scaling function
- Preset Value Function
- Velocity read-out
- Extended diagnostic data

Configuration data:

**Singleturn** Class 2 – 16 bits: F0hex, 1 input data word, 1 output data word for preset value, data consistency

**Multiturn** Class 2 – 32 bits: F1hex, 2 input data word, 2 output data words for preset value, data consistency


**Position + Velocity** Class 2 – 32+16 bits: F1+D0hex, 3 input data word, 2 output velocity data words for preset value, data consistency

The selection of class depends on the demands required by the application but for enabling full functionality of the device it is recommended to choose: Encoder class 2 32 bit + velocity.

## 5 Encoder and Gateway functionality, DPV0

### 5.1 Basic functionality

The picture below gives an overview of the basic encoder and gateway functions and how the functionality is conducted within the device.

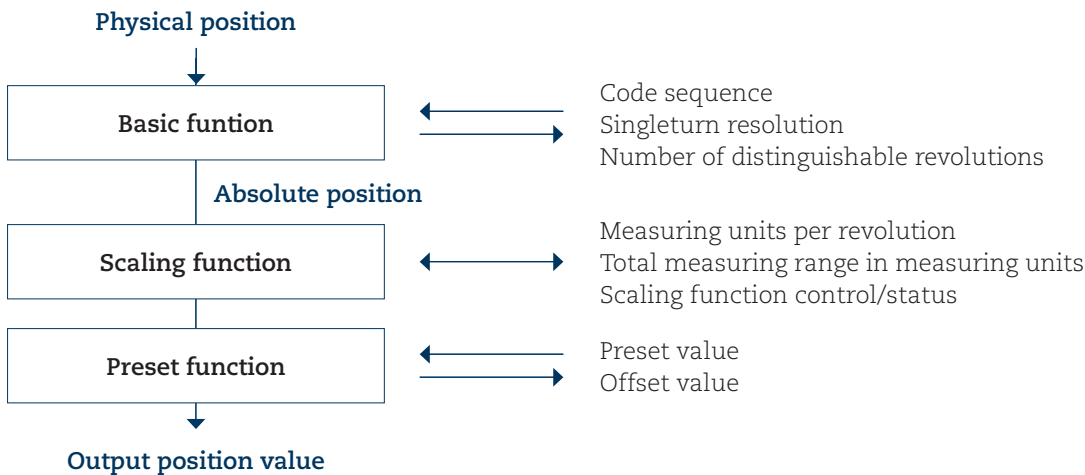

**Picture 13** Basic functionality

### 5.2 PROFIBUS data transfer principle

The PROFIBUS-DP devices can be configured and parameters can be set according to the user's needs. In this context it is useful to know that with PROFIBUS there are different types of data transmission.

#### 5.2.1 During Configuration (DDL\_M\_Chk\_Cfg mode)

The configuration function allows the DP-Master to send the configuration data to the DP-device for checking. The main purpose is to define the number of bytes used for the Data\_Exchange function.

#### 5.2.2 During parameterization (DDL\_M\_Set\_Prm mode)

When the system is started, the PROFIBUS devices are parameterized (DDL\_M\_Set\_Prm mode), i.e. the encoder class set by means of the GSD file in the configuration tool (see chapter 4) and the set operating parameters (see chapter 5.4) are transferred to the respective slave.

#### 5.2.3 Normal operation (DDL\_M\_Data-Exchange mode)

In the normal mode (DDL\_M\_Data-Exchange mode), data are exchanged between master and slaves. The preset function can be carried out only in this operating mode. The data exchange is described in chapter 5.5.

### 5.3 Configuration, DPV0

The configuration of a DPV0 device is conducted by choosing encoder class, i.e. setting the input/output data structure. The configuration options are 16-bit, 32-bit or 32-bit + 16-bit velocity input data, for explanation view chapter 4.1.

## 5.4 Parameterization, DPV0

The PROFIBUS-DPV0 device is parameterized by means of the operating parameters. The values selected in the configuration tool are saved in the DP master and are transferred to the PROFIBUS-DP slave each time the network is started.

The following table lists all available parameters:

Parameters	Data type	Parameter octet number	Device class
Code sequence	Bit	9	1
Class 2 functionality	Bit	9	2
Commissioning diagnostics	Bit	9	Optional
Scaling function control	Bit	9	2
Measuring units per revolution	Unsigned 32 bits	10 – 13	2
Total measuring range in measuring units	Unsigned 32 bits	14 – 17	2
Manufacturer specific functions	Bit	26 – 28	Optional
Velocity control	2 bit	39	2 ext.

**Table 11** Operating parameters in DPV0

The parameters described in octet 9 are defined bit by bit as follows:

Octet	9		
Bits	7 – 0		
Data	$2^7 - 2^0$		
	Operating parameters		

Bits	Definition	= 0	= 1
0	Code sequence	Clockwise (CW) Increasing position values when rotated clockwise (seen from flange side)	Counter clockwise (CCW) Increasing position values when rotated counter clockwise (seen from flange side)
1	Class 2 functionality	Disable	Enable
2	Commissioning diagnostics	No	Yes
3	Scaling function control	Disable scaling	Enable scaling., Scaling parameters are taken into octets 10 to 17.
4	Reserved for future applications		
...			
7			

**Table 12** Octet 9, Parameter definition

### 5.4.1 Code sequence

The code sequence defines whether the absolute position value should increase during clockwise or counter clockwise rotation of the encoder shaft seen from flange side. The code sequence is by default set to increase the absolute position value when the shaft is turned clockwise (0).

**Note:** The position value will be affected when the code sequence is changed during operation. It might be necessary to perform a preset after the code sequence has been changed.

### 5.4.2 Class 2 functionality

This bit enables or disables class 2 functionality. The Class 2 functionality bit for PROFIBUS-DP devices is by default disabled (0). This means that this control bit must be activated during parameterization in order to support the class 2 functions.

**Note:** If a class 1 device uses some optional class 2 functions, the class 2 control bit must be set.

### 5.4.3 Commissioning diagnostics

The commissioning diagnostics function makes enable the device to perform internal diagnostic test of the encoder components responsible for position detection during a standstill of the encoder (i.e. light unit, photovoltaic cells etc.). In conjunction with the position alarms, it enables thorough checking of whether the position values provided by the absolute encoder are correct. The commissioning diagnostics function is started by the commissioning bit in the operating parameters. If an error is found within the absolute encoder, this is indicated in the diagnostic function by the commissioning diagnostics alarm bit (see chapter 5.6.2).

The commissioning diagnostics function is an option. To find out whether the device supports commissioning diagnostics, the "operating status" should be read by the diagnostic function and the commissioning diagnostics bit should be checked.

### 5.4.4 Scaling function control

The scaling function converts the encoder's physical absolute position value by means of software in order to change the resolution of the encoder. Class 2 functionality must be enabled in order to use the scaling function.

The parameters "Measuring units per revolution" and "Total measuring range in measuring steps" are the scaling parameters set by the parameter function in octet 10 to 17. Scaling is active only if the control bit for the scaling function is set. When the scaling function control bit is set to 0, the scaling function is disabled.

Singleturn encoders up to 31 bit and multiturn encoders up to 37 bits resolution are supported by the PROFIBUS gateway. When using encoders with higher resolution than 31 bits, the singleturn resolution of the encoder will automatically be reduced as much as needed to fit into the 32 bit structure.

For example, if a 37 bit encoder with a 25 bit singleturn and 12 bit multiturn resolution is used, the singleturn resolution will be reduced from 25 to 19 bit, and the multiturn resolution will still be 12 bit. (19 bit singleturn +12 bit multiturn = 31 bit total resolution).

**Note:** After downloading new scaling parameters the Preset function must be used to set the encoder starting point to absolute position 0 or to any required starting position within the scaled operating range.

## 5.4.5 Measuring units per revolution

The total measuring range is calculated by multiplying the singleturn resolution with the number of distinguishable revolutions.

The default settings for multiturn encoders RXA 607 are:

Measuring units per revolution =  $8192_{10} (2^{13})$

Total measuring range in measuring units =  $8192_{10} (2^{13} \times 2^0)$

The default settings for multiturn encoders RXA 608 are:

Measuring units per revolution =  $8192_{10} (2^{13})$

Total measuring range in measuring units =  $3355443210 (2^{13} \times 2^{12})$

Format of the scaling parameters:

Octet	10	11	12	13
Bits	31 – 24	23 – 16	15 – 8	7 – 0
Data	$2^{31} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
Measuring units per revolution				

**Table 13** Singleturn scaling parameter format

Octet	10	11	12	13
Bits	31 – 24	23 – 16	15 – 8	7 – 0
Data	$2^{31} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
Measuring units per revolution				

**Table 14** Multiturn scaling parameter format

The data format for both scaling parameters is 32 bits without sign, with a value range from  $2^0$  to  $2^{31}$ . The permissible value range is limited by the resolution of the encoder. For a 25-bit encoder with a singleturn resolution of 13 bits the permissible value range for “Measuring units per revolution” is between  $2^0$  and  $2^{13}$  (8192) and for the “Total measuring range in measuring steps” the permissible value range is between  $2^0$  and  $2^{25}$  (33 554 432). The scaling parameters are securely stored in the PROFIBUS-DP master and are reloaded into the encoder at each power-up. Both parameters are output data in 32-bit format.

### Example of scaling and entry:

If the user wants to scale the encoder to a single turn resolution of 4000 unique positions per revolution and a total number of turn count equal to 3200 revolutions shall the configuration be as:

Measuring units per revolution =  $4000_{10}$  steps

Total measuring range in measuring units

= 4000 steps x 3200 revolutions

=  $12\,800\,000_{10}$

Entry in the master configuration software:

Measuring units per revolution = 4000

Total measuring range (steps) = 12800000

## 5.4.6 Total measuring range (units)

The total measuring range is defined by the parameter "Total measuring range in measuring units." The device has two different operating modes, depending on the specified measuring range. When the device receives a parameter message, it checks the scaling parameters if a binary scaling can be used. If binary scaling can be used, the device selects operating mode A (see following explanation). If not, operating mode B is selected.


### A. CYCLIC OPERATION (binary scaling)

Cyclic operation is used when operating with  $2^x$  number of turns (2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048 and 4096 number of turns). If the desired measuring range is equal to the specified singleturn resolution \*  $2^x$  (where  $x \leq 12$ ) the encoder operates in endless cyclic operation (0 – max – 0 – max...). For example: If the position value increases above the maximum value by rotating the encoder shaft, the encoder continues from 0.

#### Example of a cyclic scaling:

Measuring units per revolution = 1000

Total measuring range = 32 000 ( $2^5$  = number of revolutions 32)

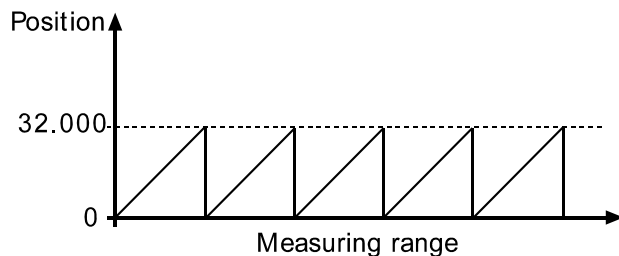

Picture 14 Cyclic Scaling


### B. NON-CYCLIC OPERATION

If the measuring range is used to limit the encoder value range to a value not equal to the specified singleturn resolution \*  $2^x$ , the output position value is limited within the operating range. If the position value increases or decreases outside the measuring range by rotating the encoder shaft beyond the maximum value or below 0, the device outputs the total measuring range value.

#### Example of non-cyclic scaling:

Measuring units per revolution = 100

Total measuring range = 5000 (number of revolutions 50)

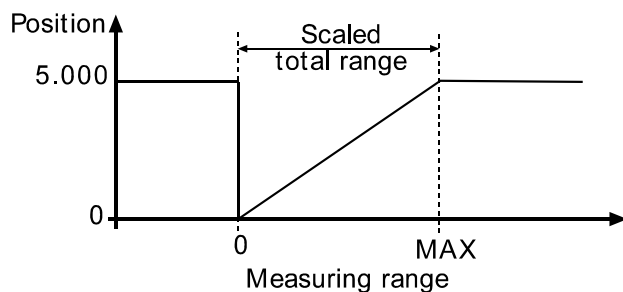

Picture 15 Non-cyclic scaling

## 5.4.7 Velocity control

The velocity data can be accessed if class 2 32-bit + velocity configuration is used. In this case the input data consists of 32-position data plus 16-bit signed velocity data. The input velocity value is negative in CCW direction if code sequence is set to CW. If the measured velocity is higher then what is possible to present with the selected velocity unit the value is set to 0x7FFF(32768) or 0x8000 (-32768) depending on direction of shaft rotation.

**Note:** If the velocity control function is used and scaling is set to the device the velocity calculation is based on the scaled position value. Consequently the accuracy of the velocity value is dependent of the scaling set to the device.

## 5.4.8 Velocity calculation

The velocity calculations are made with a maximum of 19 bits resolution. If the resolution is higher than  $2^{19}$ , the value used for velocity calculations is automatically reduced to  $2^{19}$ . For a multiturn encoder with  $2^{12}$  multiturn resolution, the maximum singleturn value will be  $2^{19}$  and the velocity will be calculated on the same resolution as presented in the diagnostic structure. For a singleturn encoder the resolution can be up to 31 bit, but the velocity calculations will be made on maximum 19 bits. This means that in the diagnostic structure, the value  $2^{31}$  can be presented, but the resolution used for velocity calculations is not presented if the singleturn resolution is higher than  $2^{19}$ .

The parameter for velocity unit, octet 39 can be seen below:

Octet	39								
Bits	7 – 0								
Data	$2^7 - 2^0$								
	Velocity Control								

Bit	7	6	5	4	3	2	1	0	Velocity unit
			0	0					Steps/s
			0	1					Steps/100ms
			1	0					Steps/10ms
			1	1					RPM(revolutions/min)

**Table 15** Octet 39 Velocity Control

In case of the step/s unit, an average is made over 200 ms, and the value is multiplied by 5.

## 5.5 Data transfer in normal operation (DDLML\_Data\_Exchange)

The DDLML\_Data\_Exchange mode is the normal status of the device when operated. In this mode the position value is transmitted from the device in a cyclic manner. Output data can also be sent to the device i.e. preset commands.

### 5.5.1 Data exchange mode

The actual position value is transferred to the master as 32-bit values (double word) or optional, the device supports a position value length of 16-bit for singleturn encoder. The position value is right-aligned in the data field.

#### DDLML\_Data\_Exchange mode

Standard configuration:

Octet	1	2	3	4
Bits	31 – 24	23 – 16	15 – 8	7 – 0
Data	$2^{31} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
Data_Exchange – 32 bits				

**Table 16** Data exchange 32-bits

Configuration data:

Device class 1: D1hex 2 input data words, data consistency

Device class 2: F1hex 2 input data words, 2 output data words for preset value, data consistency

Optional configuration:

Octet	1	2
Bits	15 – 8	7 – 0
Data	$2^{15} - 2^8$	$2^7 - 2^0$
Data_Exchange – 16 bits		

**Table 17** Data exchange 16-bits

Configuration data:

Device class 1: D0hex 1 input data word, data consistency

Device class 2: F0hex 1 input data word, 1 output data word for preset value, data consistency

## 5.5.2 Preset function

The preset function enables adaptation of the position value from the encoder to a known mechanical reference point of the system. The preset function sets the actual position of the encoder to zero or to the selected preset value. The preset value is written to the encoder as output data in the Data\_Exchange function. If scaling is used the preset function shall be used after the scaling function, to ensure that the preset value is entered in the current measuring unit.

The most significant bit (MSB) of the preset value controls the preset function as follows:

**Normal operating mode:** MSB = 0 (bit 31, optionally bit 15)

The encoder will not change the preset value.

**Activated mode:** MSB = 1 (bit 31, optionally bit 15)

With MSB = 1, the encoder accepts the transferred value (bits 0 – 30) as a preset value in binary code. The encoder reads the current position value and calculates an offset value from the preset value and the read position value. The position value is shifted by the calculated offset value. If the input position value equals the preset value, the preset mode is terminated and the MSB can be set to 0 by the master. The offset value can be read with the diagnostic function and is securely stored in case of a power interruption and is reloaded at each start-up.

**Note:** The preset function should only be used at encoder standstill.

Preset value format (2 words, 32 bits):

Octet	1		2	3	4
Bits	31	30-24	23 – 16	15 – 8	7 – 0
Data	0 / 1	$2^{30} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
	Preset control bit	Preset value - max. 31 bits			

**Table 18** Preset value, 32-bit format

Preset value format (1 word, 16 bits):

Octet	1		2
Bits	15	14 – 8	7 – 0
Data	0 / 1	$2^{14} - 2^8$	$2^7 - 2^0$
	Preset control bit	Preset value - max. 15 bits	

**Table 19** Preset value, 16-bit format

## 5.6 Diagnostics

The diagnostic information contains diagnostic data which are defined in the PROFIBUS-DP specification (octets 1 to 6) but also encoder-specific diagnostic data:

### DDLML\_Slave\_Diag

Diagnostic function	Data type	Diagnostic. octet number	Device class
Station status 1	Bits	1	1
Station status 2	Bits	2	1
Station status 3	Bits	3	1
Diagnostic master address	Bits	4	1
PNO identification number	Bits	5-6	1
Extended diagnostic header	Octet string	7	1
Alarms	Octet string	8	1
Operating Status	Octet string	9	1
Encoder type	Octet string	10	1
Singleturn resolution (encoder) Measuring unit (linear encoder)	32 without sign	11-14	1
Number of distinguishable revolutions	16 without sign	15-16	1
Additional alarms	Octet string	17	2
Supported alarms	Octet string	18-19	2
Warnings	Octet string	20-21	2
Supported warnings	Octet string	22-23	2
Profile version	Octet string	24-25	2
Software version	Octet string	26-27	2
Operating time	32 without sign	28-31	2
Offset value	32 with sign	32-35	2
Manufacturer offset value	32 with sign	36-39	2
Measuring units per revolution	32 without sign	40-43	2
Total measuring range in measuring units	32 without sign	44-47	2
Serial number	ASCII string	48-57	2
Reserved for future definitions		58-61	2

**Table 20** Diagnostics message, DPV0

**Note:** The length of the diagnostic information of class 1 is limited to 16 bytes, compatible with previous DP versions. For PROFIBUS-DP encoders of class 2, the length of the encoder specific diagnostic data including the extended diagnostic header is 57 bytes.

The DDLML\_Slave\_Diag memory range up to octet 99 is reserved for future diagnostic data of class 2.

## 5.6.1 Diagnostic Header

The header byte specifies the length of the encoder diagnostics including the header byte. The format of the transmission length is hexadecimal. For the PROFIBUS-DP encoder of class 1 the length of the encoder-specific diagnostic data is 10 bytes (0Ahex).

### DDLML\_Slave\_Diag

Octet	7		
Alarms	7	6	5 – 0
Data	0	0	xxh
	Set to 00		Length incl. header
	Extended diagnosis		

**Table 21** Diagnostic header

## 5.6.2 Alarms

Alarm is generated by the device when failure occurs which effects the position value. Octet 8 in the diagnostic function (DDLML\_Slave\_Diag) indicates the status of the alarms. Additional alarms for device class 2 are added in the diagnostic octet 17.

If an alarm is given, the Ext\_Diag bit and the Stat\_Diag bit in the diagnostic function are set to high and remain high until the alarm is cleared and the encoder can provide a correct position value. Alarms are cleared when the functionality is within the specification and the position value is correct.

**Note:** Not every encoder supports every alarm. For encoders of class 2 the diagnostic information “supported alarms” (see Chapter 5.6.8) makes it possible to find out which individual alarm bits are supported.

### DDLML\_Slave\_Diag

Octet	8		
Bits	7 – 0		
	Alarms		

Bits	Definition	= 0	= 1
0	Position error	No	Yes
1	Voltage supply error	No	Yes
2	Current is too high	No	Yes
3	Commissioning diagnostics	OK	Error
4	Memory error	No	Yes
5	Currently not assigned		
6			
7			

**Table 22** Alarms

### 5.6.3 Operating Status

Octet 9 in the diagnostic function provides information about encoder-specific parameters. A class 2 encoder sets the functionality bit for class 2 commands in order to show the DP master that all class 2 commands are supported. The DP master must activate the class 2 functionality bit in the parameter message (DDL\_M\_Set\_Prm) to enable the use of class 2 functions.

The status bit of the scaling function is set when the scaling function is activated and the resolution of the encoder is calculated by means of the scaling parameters.

#### DDL\_M\_Slave\_Diag

Octet	9		
Bits	7 – 0		
	Operating Status		
Bits	Definition	= 0	= 1
0	Code sequence	Increasing position values for clockwise revolutions (seen from flange side)	Increasing position values for counter clockwise revolutions (seen from flange side)
1	Class 2 functionality	No, not supported	Yes
2	Commissioning diagnostics	No, not supported	Yes
3	Scaling function status	Scaling disabled	Scaling enabled
4	Currently not assigned		
5			
6			
7			

**Table 23** Operating status

## 5.6.4 Encoder type

The type of encoder can be read in octet 10 of the diagnostic function. The type of encoder is defined in hex code in the range from 0 to FF.

### DDLML\_Slave\_Diag

<b>Octet</b>	<b>10</b>
Bits	0 - FF
	Encoder type
<b>Bits</b>	<b>Definition</b>
00	Absolute singleturn encoder
01	Absolute multiturn encoder
02	Absolute singleturn encoder with electronic revolution counter
03	Incremental rotary encoder
04	Incremental rotary encoder with battery buffer
05	Incremental linear encoder
06	Incremental linear encoder with battery buffer
07	Absolute linear encoder
08	Absolute linear encoder with periodic coding
09	Currently not assigned
•	
•	
FF	

**Table 24** Diagnostics, encoder type

## 5.6.5 Singleturn resolution or measuring step

The singleturn resolution in the diagnostic function has different meanings depending on the type of encoder.

For rotary or angle encoders, the diagnostic octets 11 to 14 indicate the physical resolution in number of measuring steps per revolution which is transferred for the absolute singleturn position value. The maximum singleturn resolution is  $2^{31}$ .

For linear encoders the measuring steps is presented with respect to the resolution of the linear encoder, i.e. each increment of the measuring step is equal the actual resolution for the linear encoder in use. Typical values for the linear resolution are  $1\mu\text{m}$  -  $40\mu\text{m}$ .

### DDLML\_Slave\_Diag

Octet	11	12	13	14
Bits	31 – 24	23 – 16	15 – 8	7 – 0
Data	$2^{31} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
Singleturn resolution				

**Table 25** Diagnostics, singleturn resolution

## 5.6.6 Number of Distinguishable Revolutions

The number of distinguishable revolutions that the encoder can transfer is defined by octets 15 and 16 of the diagnostic function. In accordance with the formula below, the measuring range for an encoder results from the number of distinguishable revolutions multiplied by the singleturn resolution. The maximum number of distinguishable revolutions is  $65\,536-1$  (16 bits).

Measuring range = number of distinguishable revolutions x singleturn resolution

### DDLML\_Slave\_Diag

Octet	15	16
Bits	15 – 8	7 – 0
Number of distinguishable revolutions		

**Table 26** Diagnostics, number of distinguishable revolutions

## 5.6.7 Additional Alarms

The diagnostic octet 17 indicates additional alarms for device class 2.

### DDLML\_Slave\_Diag

Octet	17
Bits	7 – 0
	Additional alarms

Octet	Definition	= 0	= 1
Bits	Currently not assigned		
0			
•			
7			

**Table 27** Diagnostics, additional alarms

## 5.6.8 Supported Alarms

The diagnostic octets 18 and 19 contain information on the supported alarms.

### DDLML\_Slave\_Diag

Octet	18	19
Bits	15 – 8	7 – 0
	Supported alarms	

Bits	Definition	= 0	= 1
0	Position error	Not supported	Supported
1	Voltage supply error	Not supported	Supported
2	Current is too high	Not supported	Supported
3	Commissioning diagnostics	Not supported	Supported
4	Memory error	Not supported	Supported
5	Currently not assigned		
•			
15			

**Table 28** Diagnostics, supported alarms

## 5.6.9 Warnings

Warnings indicate that tolerances for certain internal parameters of the device have been exceeded. Contrary to alarms, no faulty position values are expected in case of warnings.

Octets 20 and 21 of the diagnostic function indicate the status of the warnings. If a warning is set, the Ext\_Diag bit in the diagnostic function is logically set to 1 until the warning is cleared. All warnings are deleted when the diagnostic message of the device has been read. However, if the tolerances are still exceeded, the warning is activated again. The warning "Maximum operating time exceeded" (bit 4) is not activated before the system is switched on again.

**Note:** Not every encoder supports every warning. Please refer to the diagnostic information under "Supported Warnings", see chapter 5.6.10, for information on the support of specific warnings.

### DDLMSlave\_Diag

Octet	20	21	
Bits	15 – 8	7 – 0	
	WARNINGS		
Bits	Definition	= 0	= 1
0	Frequency exceeded	No	Yes
1	Temperature exceeded	No	Yes
2	Light control reserve	Not reached	Reached
3	CPU monitoring status	OK	Reset
4	Maximum operating time exceeded	No	Yes
5	Battery charging	OK	Too low
6	Reference point	Reached	Not reached
7	Currently not assigned		
•			
15			

**Table 29** Diagnostics, warnings

## 5.6.10 Supported Warnings

The diagnostic octets 22 and 23 contain information on supported warnings.

### DDLML\_Slave\_Diag

Octet	22	23	
Bits	15 – 8	7 – 0	
	Supported Warnings		
Bits	Definition	= 0	= 1
0	Frequency warning	Not supported	Supported
1	Temperature warning	Not supported	Supported
2	Light control reserve warning	Not supported	Supported
3	CPU monitoring status warning	Not supported	Supported
4	Maximum operating time exceeded warning	Not supported	Supported
5	Battery charging warning	Not supported	Supported
6	Reference point warning	Not supported	Supported
7	Currently not assigned		
•			
15			

**Table 30** Diagnostics, supported warnings

## 5.6.11 Profile Version

Octets 24 and 25 of the diagnostic function provide the PROFIBUS-DP encoder profile version that is implemented in the device. The octet's revision number and index are combined.

### Example:

Profile version:	1.40	
Octet no.	24	25
Binary code.	00000001	01000000
Hex:	1	40

### DDLML\_Slave\_Diag

Octet	24	25
Bits	15 – 8	7 – 0
Data	$2^7 - 2^0$	$2^7 - 2^0$
	Revision number	Index
	Profile Version	

**Table 31** Diagnostics, profile version

## 5.6.12 Software Version

Octets 26 and 27 of the DDLM\_Slave\_Diag function provide the software version of the device. The octet's revision number and index are combined.

### Example:

Software version:	1.40	
Octet no.:	26	27
Binary code:	00000001	01000000
Hex:	1	40

### DDLM\_Slave\_Diag

Octet	26	27
Bits	15 – 8	7 – 0
Data	$2^7 - 2^0$	$2^7 - 2^0$
	Revision number	Index
	Software version	

**Table 32** Diagnostics, software version

## 5.6.13 Operating Time

The operating time monitor stores the operating time for the device in operating hours. The operating time is saved every six minutes in the non-volatile memory in the device. This happens as long as the device is under power. The operating time is displayed as a 32-bit value without sign in 0.1 h by the DDLM\_Slave\_Diag function.

If the operating time function is not supported by the device, it is set to the maximum value (FFFF FFFF hex).

### DDLM\_Slave\_Diag

Octet	28	29	30	31
Bits	31 – 24	23 – 16	15 – 8	7 – 0
Data	$2^{31} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
	Operating time			

**Table 33** Diagnostics, operating time

### 5.6.14 Offset Value

The offset value is calculated by the preset function and shifts the position value by the calculated value. The offset value is stored in the device and can be provided by the diagnostic octets 32 to 35. The data type for the offset value is a 32-bit binary value with sign, whereby the offset value range is equal to the measuring range of the device.

The preset function is used after the scaling function. This means that the offset value is indicated according to the scaled resolution of the device.

#### DDLML\_Slave\_Diag

Octet	32	33	34	35
Bits	31 – 24	23 – 16	15 – 8	7 – 0
Data	$2^{31} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
Offset Value				

**Table 34** Diagnostics, offset value

### 5.6.15 Offset Value of the Encoder Manufacturer

The manufacturer offset value indicates the encoder offset set by the manufacturer. This value gives information on the shift of the position zero point in number of positions from the physical zero point of the encoder. The data type for the offset value is a 32-bit binary value with sign. The value range corresponds to the measuring range of the encoder. The offset value of the manufacturer of the encoder is indicated in the number of units according to the basic resolution of the encoder. The value is stored in write-protected memory, which can be changed only by the encoder manufacturer. This value has practically no importance for the user.

#### DDLML\_Slave\_Diag

Octet	36	37	38	39
Bits	31 – 24	23 – 16	15 – 8	7 – 0
Data	$2^{31} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
Offset Value of the Encoder Manufacturer				

**Table 35** Diagnostics, offset value of the encoder manufacturer

## 5.6.16 Scaling Parameters Settings

The scaling parameters are set in the DDLM\_Set\_Prm function. The parameters are stored in the octets 40 to 47 of the diagnostic data. The “Measuring units per revolution” and “Total measuring range in measuring units” parameters define the selected resolution of the encoders. The status bit of the scaling function in the operating status (octet 9 of the diagnostic data) indicates whether the scaling function is enabled.

### Values preset by the manufacturer of the encoder:

Measuring units per revolution = singleturn resolution.

Total measuring range in measuring units = singleturn resolution x number of distinguishable revolutions.

The data type for both values is unsigned 32 bits.

### DDLM\_Slave\_Diag

Octet	40	41	42	43
Bits	31 – 24	23 – 16	15 – 8	7 – 0
Data	$2^{31} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
	Measuring units per revolution			

### DDLM\_Slave\_Diag

Octet	44	45	46	47
Bits	31 – 24	23 – 16	15 – 8	7 – 0
Data	$2^{31} - 2^{24}$	$2^{23} - 2^{16}$	$2^{15} - 2^8$	$2^7 - 2^0$
	Total measuring range in measuring units			

**Table 36** Diagnostics, scaling parameters setting

## 5.6.17 Encoder Serial Number

Octets 48 to 57 of the diagnostic function provide the serial number of the encoder as a 10-character ASCII string.

### DDLML\_Slave\_Diag

Octet	48 – 57
Bits	79 – 0
Data	ASCII
	Serial number

### Example of a serial number

Octet	48	49	50	51	52	53	54	55	56	57
ASCII string	30	30	30	35	39	46	38	44	45	35
Serial (hex.)	0	0	0	5	9	F	8	D	E	5
Serial (dec.)	9434 2629									

**Table 37** Diagnostics, encoder serial number

## 6 Encoder commissioning example, DPV0


This example uses a Siemens master and the SIMATIC NCM PC configuration software. The example is intended to illustrate the commissioning of a PROFIBUS-DPV0 encoder with a 25 bit absolute rotary encoder and velocity information.

### Copying the GSD file

First, copy the GSD file and bitmap file into the corresponding directory in the configuration software,...\GSD.

### Selecting the DPV0 Slave

To select the encoder click on the “PROFIBUS Encoder” icon in the map structure on the right side of the window. Use “drag-and-drop” to add the encoder on the BUS, upper left view.

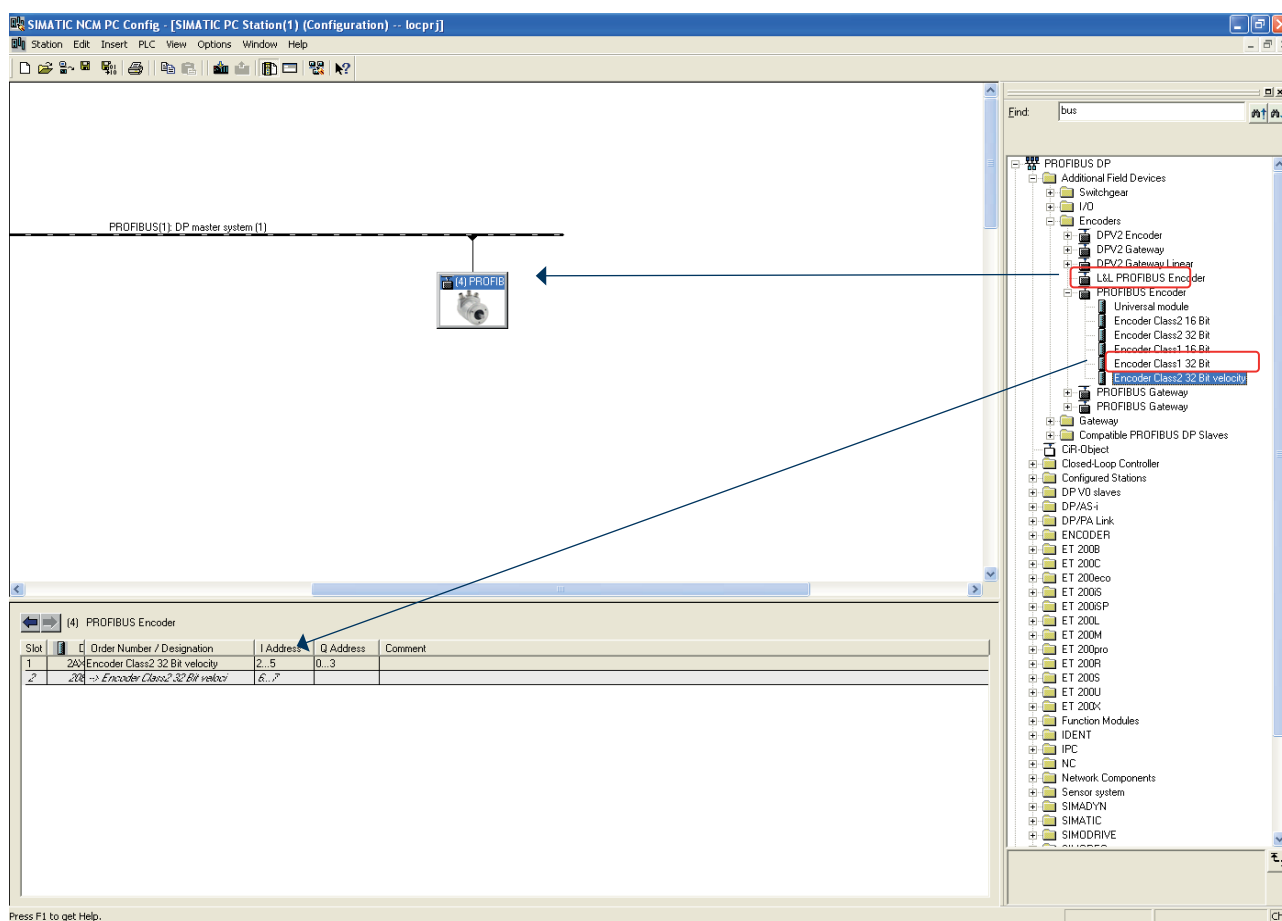


When dropping the encoder on the BUS a PROFIBUS address must be assigned, naturally this address must be the same as assigned on the hardware address switches on the back of the encoder, see chapter 3.1.1.

### Configuration of DPV0 Slave

To configure the encoder for 25-bit position value plus velocity data choose the “Encoder Class 2 32-bit velocity” configuration option in the map structure. Add the chosen configuration by “drag-and-drop” to the configuration window in lower left view.

### Assigning parameters to the DPV0 slave


By “double-clicking” on the configuration row in the configuration view the parameterization view will be opened

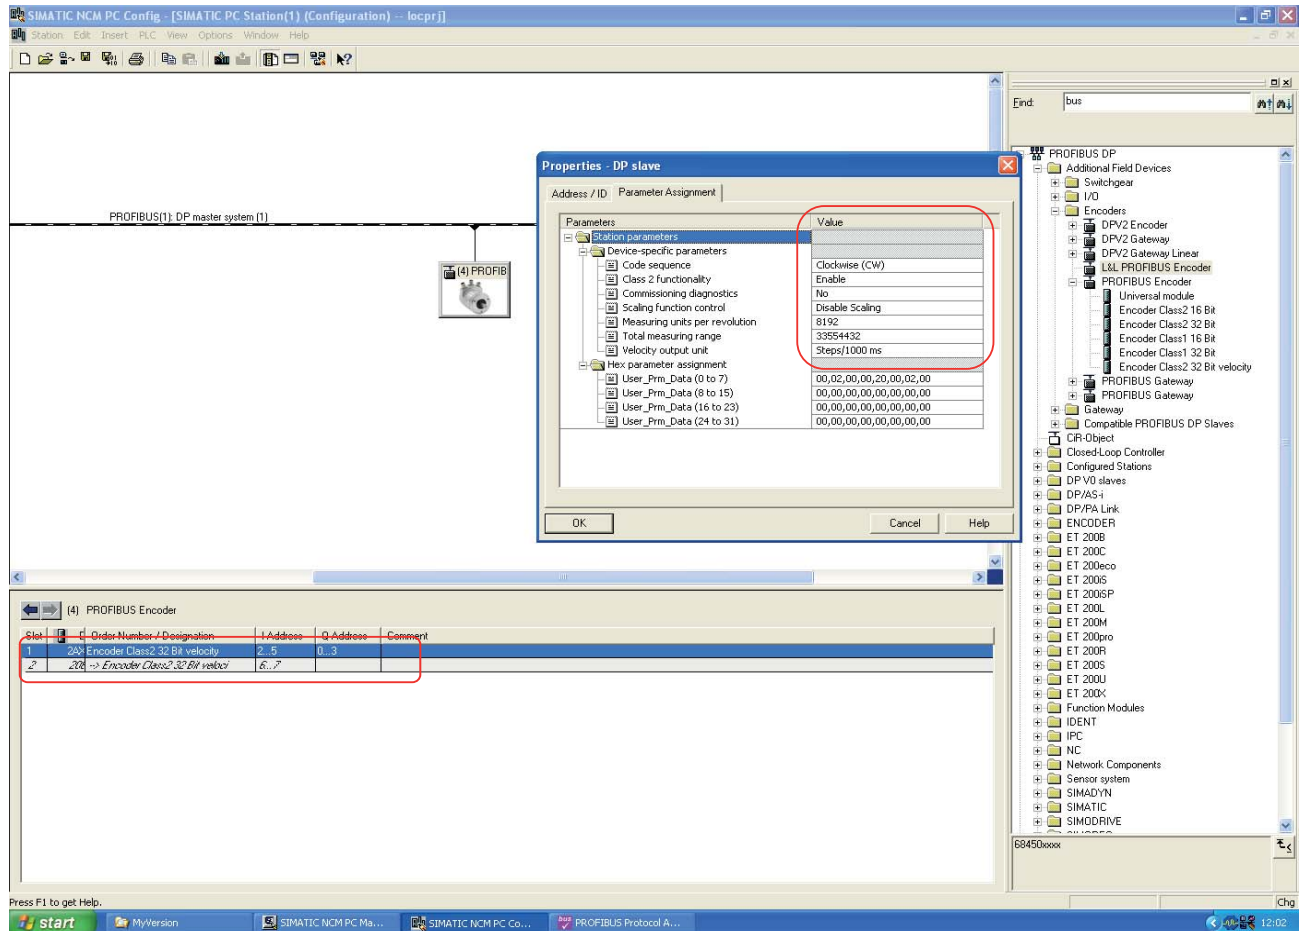

Add or change the data in the “value” field to the desired parameter values. Chapter 5.4 describes the functionality and possibility of each parameter.


### Assigning parameters to the DPV0 slave

Save and compile the settings by clicking on the Station Tab and then choose Save and compile.

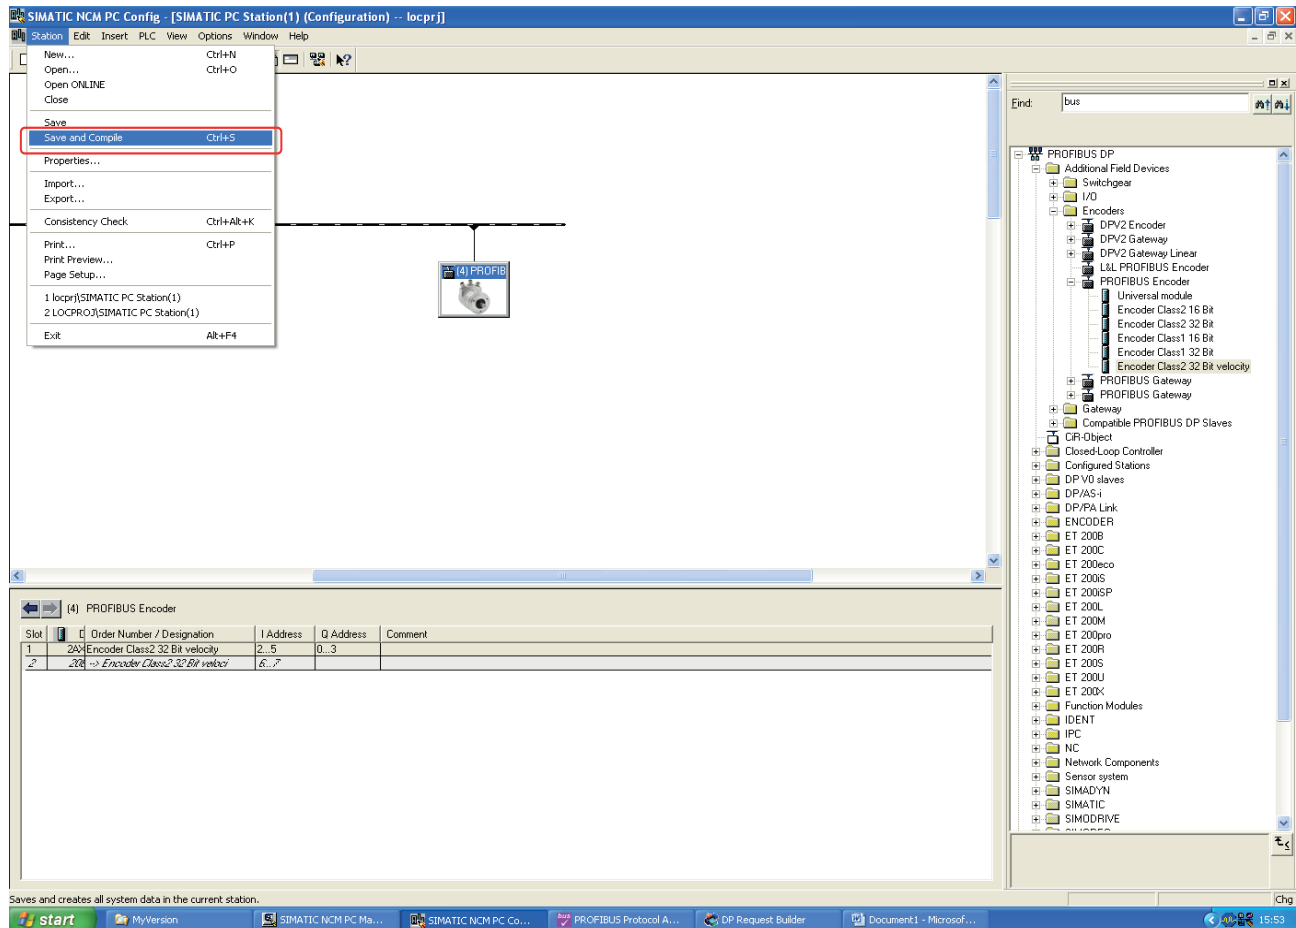


### Update Database

Start the “Station Configuration Editor” and click on the Import Station button.

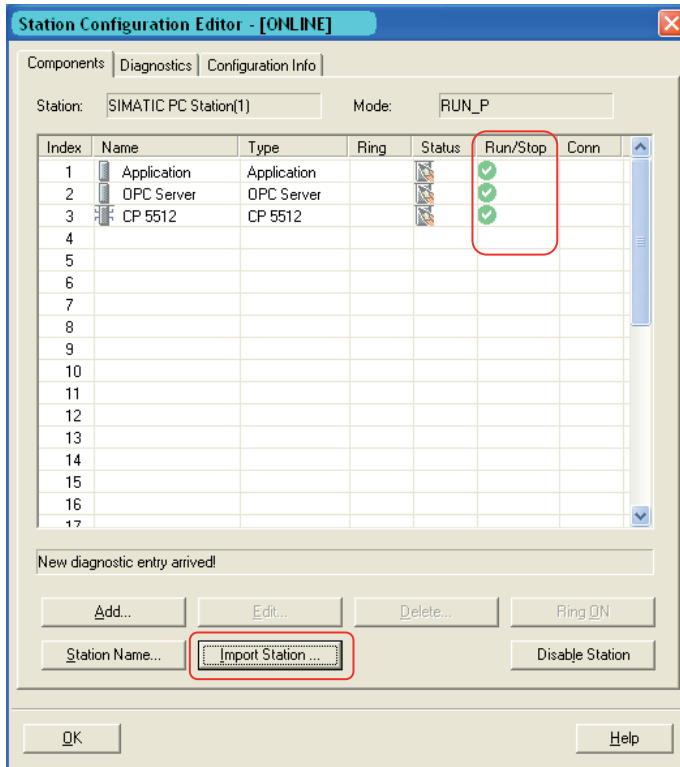

The “import XDB file” window below will open.

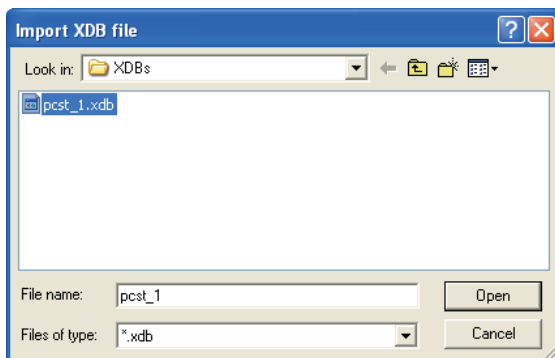

Browse to the location where the \*.xdb file was saved and choose the \*.xdb file and click on the open button. If everything is ok the Run/stop column will show a green “ok”.

**Note:** Please refer to the respective manufacturer for information on the configuration of other PROFIBUS-DP master interface modules.

## 7 Revision history

Revision	Date	Changes
Rev. 1.0	2012-06-01	First release

**Table 38** Revision history





The best encoders are those you never have to think about. Those that simply do their job – year after year. Leine & Linde develops and manufactures customised encoder solutions for demanding environments, advanced measuring systems for accurate feedback of speed and position.

**LEINE  LINDE**

+46-(0)152-26500 [www.leinelinde.com](http://www.leinelinde.com)