

# XM-160/161/162 Direct Vibration Module



**User Guide  
Firmware Revision 5**

**1440-VDRS06-00RH,  
1440-VDRS06-06RH, 1440-VDRP06-00RH**

## Important User Information

Solid state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls (publication SGI-1.1 available from your local Rockwell Automation sales office or online at <http://literature.rockwellautomation.com>) describes some important differences between solid state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.





In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.



Throughout this manual, when necessary, we use notes to make you aware of safety considerations.

<b>WARNING</b> 	Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.
<b>IMPORTANT</b>	Identifies information that is critical for successful application and understanding of the product.
<b>ATTENTION</b> 	Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence
<b>SHOCK HAZARD</b> 	Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.
<b>BURN HAZARD</b> 	Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.

Allen-Bradley, Rockwell Automation, and XM are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

## Safety Approvals

The following information applies when operating this equipment in hazardous locations.		Informations sur l'utilisation de cet équipement en environnements dangereux.	
<p>Products marked "CL I, DIV 2, GP A, B, C, D" are suitable for use in Class I Division 2 Groups A, B, C, D, Hazardous Locations and nonhazardous locations only. Each product is supplied with markings on the rating nameplate indicating the hazardous location temperature code. When combining products within a system, the most adverse temperature code (lowest "T" number) may be used to help determine the overall temperature code of the system. Combinations of equipment in your system are subject to investigation by the local Authority Having Jurisdiction at the time of installation.</p>		<p>Les produits marqués "CL I, DIV 2, GP A, B, C, D" ne conviennent qu'à une utilisation en environnements de Classe I Division 2 Groupes A, B, C, D dangereux et non dangereux. Chaque produit est livré avec des marquages sur sa plaque d'identification qui indiquent le code de température pour les environnements dangereux. Lorsque plusieurs produits sont combinés dans un système, le code de température le plus défavorable (code de température le plus faible) peut être utilisé pour déterminer le code de température global du système. Les combinaisons d'équipements dans le système sont sujettes à inspection par les autorités locales qualifiées au moment de l'installation.</p>	
<b>WARNING</b> 	<b>EXPLOSION HAZARD -</b> <ul style="list-style-type: none"> <li>Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous.</li> <li>Do not disconnect connections to this equipment unless power has been removed or the area is known to be nonhazardous. Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.</li> <li>Substitution of components may impair suitability for Class I, Division 2.</li> <li>If this product contains batteries, they must only be changed in an area known to be nonhazardous.</li> </ul>	<b>AVERTISSEMENT</b> 	<b>RISQUE D'EXPLOSION -</b> <ul style="list-style-type: none"> <li>Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher l'équipement.</li> <li>Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher les connecteurs. Fixer tous les connecteurs externes reliés à cet équipement à l'aide de vis, loquets coulissants, connecteurs filetés ou autres moyens fournis avec ce produit.</li> <li>La substitution de composants peut rendre cet équipement inadapté à une utilisation en environnement de Classe I, Division 2.</li> <li>S'assurer que l'environnement est classé non dangereux avant de changer les piles.</li> </ul>

### IMPORTANT

Wiring to or from this device, which enters or leaves the system enclosure, must utilize wiring methods suitable for Class I, Division 2 Hazardous Locations, as appropriate for the installation in accordance with the product drawings as indicated in the following table.

Model	Catalog Number	Haz Location Drawings*		Model	Catalog Number	Haz Location Drawings*	
		w/o Barriers	w/ Barriers			w/o Barriers	w/ Barriers
XM-120	1440-VST0201RA	48178-HAZ	48179-HAZ	XM-320	1440-TPS0201RB	48238-HAZ	48239-HAZ
XM-121	1440-VLF0201RA			XM-360	1440-TPR0600RE	48295-HAZ	48299-HAZ
XM-122	1440-VSE0201RA			XM-361	1440-TUN0600RE		
XM-123	1440-VAD0201RA			XM-361	1440-TTC0600RE		
XM-160	1440-VDRS0600RH	51263-HAZ	51264-HAZ	XM-440	1440-RMA0004RC	48240-HAZ	N/A
XM-161	1440-VDRS0606RH			XM-441	1440-REX0004RD	48241-HAZ	N/A
XM-162	1440-VDRP0600RH			XM-442	1440-REX0304RG	48642-HAZ	N/A
XM-220	1440-SPD0201RB			48640-HAZ	48641-HAZ		

\* Drawings are available on the included CD



<b>Introduction</b>	<p><b>Chapter 1</b></p> <p>Introducing the XM-160, XM-161, and XM-162 Modules . . . . . 1</p> <p>XM-160, XM-161, and XM-162 Module Components . . . . . 2</p> <p>Using this Manual. . . . . 3</p> <p style="padding-left: 20px;">Organization. . . . . 3</p> <p style="padding-left: 20px;">Document Conventions . . . . . 4</p>
<b>Installing the XM-160/161/162 Direct Vibration Module</b>	<p><b>Chapter 2</b></p> <p>XM Installation Requirements. . . . . 6</p> <p style="padding-left: 20px;">Wiring Requirements. . . . . 6</p> <p style="padding-left: 20px;">Power Requirements . . . . . 6</p> <p style="padding-left: 20px;">Grounding Requirements . . . . . 8</p> <p>Mounting the Terminal Base Unit. . . . . 13</p> <p style="padding-left: 20px;">DIN Rail Mounting . . . . . 14</p> <p style="padding-left: 20px;">Interconnecting Terminal Base Units . . . . . 15</p> <p style="padding-left: 20px;">Panel/Wall Mounting . . . . . 16</p> <p>Connecting Wiring for Your Module . . . . . 17</p> <p style="padding-left: 20px;">Terminal Block Assignments. . . . . 17</p> <p style="padding-left: 20px;">Connecting the Power Supply. . . . . 20</p> <p style="padding-left: 20px;">Connecting the Buffered Outputs . . . . . 21</p> <p style="padding-left: 20px;">Connecting 4-20mA Current Loop Output (XM-161) . . . . . 21</p> <p style="padding-left: 20px;">Connecting a Remote Relay Reset Signal (XM-161 &amp; XM-162). . 23</p> <p style="padding-left: 20px;">Connecting the Setpoint Multiplication Switch (XM-161 &amp; XM-162)</p> <p style="padding-left: 20px;">25</p> <p style="padding-left: 20px;">Connecting the Transducers . . . . . 26</p> <p style="padding-left: 20px;">PC Serial Port Connection . . . . . 50</p> <p style="padding-left: 20px;">DeviceNet Connection . . . . . 51</p> <p>Mounting the Module . . . . . 53</p> <p>Module Indicators . . . . . 54</p> <p>Basic Operations . . . . . 55</p> <p style="padding-left: 20px;">Powering Up the Module . . . . . 55</p> <p style="padding-left: 20px;">Manually Resetting Relays . . . . . 56</p>
<b>Configuration Parameters</b>	<p><b>Chapter 3</b></p> <p>IEPE Buffer Power and Signal Detection Parameters. . . . . 58</p> <p>Channel Transducer Parameters . . . . . 60</p> <p>Channel Signal Processing Parameters . . . . . 62</p> <p>Channel Overall Measurement Parameter . . . . . 63</p> <p>Alarm Parameters . . . . . 64</p> <p>Relay Parameters . . . . . 66</p> <p>4-20mA Output Parameters (XM-161). . . . . 70</p> <p>Triggered Trend . . . . . 71</p> <p>I/O Data Parameters . . . . . 73</p>

	Data Parameters . . . . .	74
	Channel Data Parameters . . . . .	74
	Alarm and Relay Status Parameters . . . . .	75
	Device Mode Parameters . . . . .	76
	<b>Appendix A</b>	
<b>Specifications</b>	.....	77
	<b>Appendix B</b>	
<b>DeviceNet Information</b>	Electronic Data Sheets . . . . .	83
	Changing Operation Modes . . . . .	83
	Transition to Program Mode . . . . .	84
	Transition to Run Mode . . . . .	84
	XM Services . . . . .	85
	Invalid Configuration Errors . . . . .	86
	XM-160/161/162 I/O Message Formats . . . . .	87
	Poll Message Format . . . . .	87
	COS Message Format . . . . .	88
	Bit-Strobe Message Format . . . . .	89
	ADR for XM Modules . . . . .	90
	<b>Appendix C</b>	
<b>DeviceNet Objects</b>	Identity Object (Class ID 01H) . . . . .	94
	Class Attributes . . . . .	94
	Instance Attributes . . . . .	94
	Status . . . . .	94
	Services . . . . .	95
	DeviceNet Object (Class ID 03H) . . . . .	95
	Class Attributes . . . . .	96
	Instance Attributes . . . . .	96
	Assembly Object (Class ID 04H) . . . . .	97
	Class Attribute . . . . .	97
	Instances . . . . .	97
	Instance Attributes . . . . .	97
	Assembly Instance Attribute Data Format . . . . .	98
	Services . . . . .	101
	Connection Object (Class ID 05H) . . . . .	101
	Class Attributes . . . . .	101
	Instances . . . . .	101
	Instance Attributes . . . . .	102
	Services . . . . .	103
	Discrete Input Point Object (Class ID 08H) . . . . .	103
	Class Attributes . . . . .	103
	Instance Attributes . . . . .	103
	Services . . . . .	104

Parameter Object (Class ID 0FH) .....	104
Class Attributes .....	104
Instances .....	105
Instance Attributes .....	109
Services .....	110
Acknowledge Handler Object (Class ID 2BH) .....	110
Class Attributes .....	110
Instances .....	111
Instance Attributes .....	111
Services .....	111
Alarm Object (Class ID 31DH) .....	111
Class Attributes .....	111
Instances .....	112
Instance Attributes .....	112
Services .....	113
Channel Object (Class ID 31FH) .....	113
Class Attributes .....	113
Instances .....	113
Instance Attributes .....	114
Services .....	115
Device Mode Object (Class ID 320H) .....	115
Class Attributes .....	115
Instance Attributes .....	115
Service .....	116
Overall Measurement Object (Class ID 322H) .....	116
Class Attributes .....	117
Instances .....	117
Instance Attributes .....	117
Relay Object (Class ID 323H) .....	118
Class Attributes .....	118
Instances .....	118
Instance Attributes .....	119
Services .....	120
Transducer Object (Class ID 328H) .....	120
Class Attributes .....	121
Instances .....	121
Services .....	122
4-20mA Output Object (Class ID 32AH) .....	122
Class Attributes .....	122
Instances .....	123
Instance Attributes .....	123
Services .....	123

<b>Glossary</b> .....	125
-----------------------	-----

<b>Index</b> .....	131
--------------------	-----





## Introduction

This chapter provides an overview of the XM-160 Direct Vibration module, the XM-161 Direct Vibration with 4-20mA module, and the XM-162 Direct Vibration with Power module. It also discusses the components of the modules.

For information about	See page
Introducing the XM-160, XM-161, and XM-162 Modules	1
XM-160, XM-161, and XM-162 Module Components	2
Using this Manual	3

### Introducing the XM-160, XM-161, and XM-162 Modules

The XM-160, XM-161, and XM-162 modules are members of the Allen-Bradley™ XM® Series, a family of distributed machine conditioning monitoring and protection devices that operate both in stand-alone applications or integrate with Programmable Logic Controllers (PLCs) and control system networks.

The Direct Vibration modules are intelligent 6-channel monitors that are designed for real time monitoring of overall (direct) vibration levels. Each module measures and reports the overall vibration level between selected high and low pass filters, as well as the gap or bias voltage for each channel. The modules can power and accept input from Integrated Electronics Piezo Electric (IEPE) accelerometers. They can also accept signals from standard eddy current probe systems and most standard voltage output measurement devices such as a velocity or pressure transducer making them well-suited for general machine monitoring and protection.

The XM-160, XM-161, and XM-162 modules primarily offer the same capabilities with a few exceptions, including:

- The XM-161 module includes a 4-20mA output for each channel.
- The XM-162 module offers a DC power supply for powering standard -24V eddy current probe drivers.


The modules also include a buffer output for each input signal; can connect up to two XM-441 Expansion Relay modules, providing a total of eight relays, and collect trend data based on an event such as a relay actuation.

The XM-160, XM-161, and XM-162 can operate stand-alone, or they can be deployed on a standard or dedicated DeviceNet network where they can provide real-time data and status information to other XM modules, PLCs, distributed control systems (DCS), and Condition Monitoring Systems. The Direct Vibration modules can be configured remotely via the DeviceNet network, or locally using a serial connection to a PC or laptop. Refer to Chapter 3 for a list of the configuration parameters.


## XM-160, XM-161, and XM-162 Module Components

The XM-160, XM-161, and XM-162 consist of a terminal base unit and an instrument module. The XM-160, XM-161 and XM-162 Direct Vibration modules and the XM-947 Direct Vibration Terminal Base are shown below.

**Figure 1.1 XM-160/161/162 Module Components**

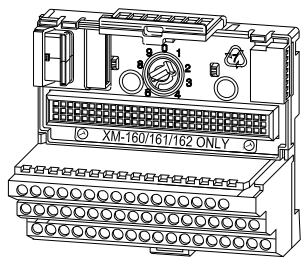


XM-947 Direct Vibration Module  
Terminal Base Unit  
Cat. No. 1440-TB-H

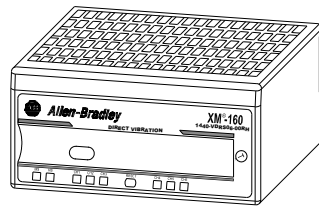

XM-160 Direct Vibration  
Module  
Cat. No. 1440-VDRS06-00RH



XM-161 Direct Vibration with  
4-20mA Module  
Cat. No. 1440-VDRS06-06RH

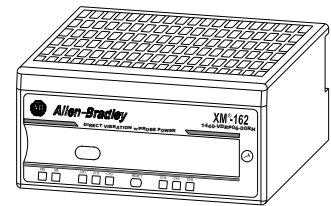

XM-162 Direct Vibration with  
Power Module  
Cat. No. 1440-VDRP06-00RH

- XM-947 Direct Vibration Module Terminal Base - A DIN rail mounted base unit that provides terminations for all field wiring required by XM Direct Vibration modules, including the XM-160, XM-161, and XM-162.

- XM-160/161/162 Direct Vibration Module - The module mounts on the XM-947 terminal base via a keyswitch and a 96-pin connector. The module contains the measurement electronics, processors, and serial interface port for local configuration.

**IMPORTANT**

Up to two XM-441 Expansion Relay modules may be connected to the XM-160, XM-161, or XM-162 module via the XM-947 terminal base.

When connected to the module, the Expansion Relay modules simply “expand” the capability of the XM-160, XM-161, or XM-162 by providing a total of up to eight relays. The Direct Vibration module controls the operation of the Expansion Relay modules.

## Using this Manual

This manual introduces you to the XM-160, XM-161, and XM-162 Direct Vibration modules. It is intended for anyone who installs, configures, or uses the XM-160, XM-161 and XM-162 Direct Vibration modules.

## Organization

To help you navigate through this manual, it is organized in chapters based on these tasks and topics.

Chapter 1 “Introduction” contains an overview of this manual and the XM-160, XM-161 and XM-162 modules.

Chapter 2 “Installing the XM-160/161/162 Direct Vibration Module” describes how to install, wire, and use the XM-160, XM-161 and XM-162 modules.

Chapter 3 “Configuration Parameters” provides a complete listing and description of the XM-160, XM-161, and XM-162 parameters. The parameters can be viewed and edited using the XM Serial Configuration Utility software and a personal computer.

Appendix A “Specifications” lists the technical specifications for the XM-160, XM-161, and XM-162 modules.

Appendix B “DeviceNet Information” provides information to help you configure the XM-160, XM-161, and XM-162 over a DeviceNet network.

Appendix C “DeviceNet Objects” provides information on the DeviceNet objects supported by the XM-160, XM-161, and XM-162 modules.

For definitions of terms used in this Guide, see the Glossary at the end of the Guide.

## Document Conventions

There are several document conventions used in this manual, including the following:

The XM-160, XM-161, and XM-162 Direct Vibration modules are referred to as XM-160/161/162, Direct Vibration modules, devices, or modules throughout this manual.

Direct vibration is a common term for an unfiltered overall vibration measurement and can be used interchangeably with “Overall.”

---

**TIP**

A tip indicates additional information which may be helpful.

---

**EXAMPLE**

This convention presents an example.

---

---

## Installing the XM-160/161/162 Direct Vibration Module

This chapter discusses how to install and wire the XM-160, XM-161, and XM-162 Direct Vibration modules. It also describes the module indicators and the basic operations of the modules.

<b>For information about</b>	<b>See page</b>
XM Installation Requirements	6
Mounting the Terminal Base Unit	13
Connecting Wiring for Your Module	17
Mounting the Module	53
Module Indicators	54
Basic Operations	55

---

**ATTENTION****Environment and Enclosure**

This equipment is intended for use in a Pollution Degree 2 Industrial environment, in overvoltage Category II applications (as defined in IED publication 60664-1), at altitudes up to 2000 meters without derating.

This equipment is supplied as “open type” equipment. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that will be present, and appropriately designed to prevent personal injury resulting from accessibility to live parts. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication may contain additional information regarding specific enclosure type ratings that are required to comply with certain product safety certifications.

See NEMA Standards publication 250 and IEC publication 60529, as applicable, for explanations of the degrees of protection provided by different types of enclosures.

---

## XM Installation Requirements

This section describes wire, power, and grounding requirements for an XM system

### Wiring Requirements

Use solid or stranded wire. All wiring should meet the following specifications:

- 14 to 22 AWG copper conductors without pretreatment; 8 AWG required for grounding the DIN rail for electromagnetic interference (emi) purposes
- Recommended strip length 8 millimeters (0.31 inches)
- Minimum insulation rating of 300V
- Soldering the conductor is forbidden
- Wire ferrules can be used with stranded conductors; copper ferrules recommended

---

**ATTENTION**

See the XM Documentation and Configuration Utility CD for Hazardous Locations installation drawings. The XM Documentation and Configuration Utility CD is packaged with the XM modules.

---

### Power Requirements

Before installing your module, calculate the power requirements of all modules interconnected via their side connectors. The total current draw through the side connector cannot exceed 3A. Refer to the specifications for the specific modules for power requirements.

---


**ATTENTION**

A separate power connection is necessary if the total current draw of the interconnecting modules is greater than 3A.

---

Figure 2.1 is an illustration of wiring modules using separate power connections.

**Figure 2.1 XM Modules with Separate Power Connections**

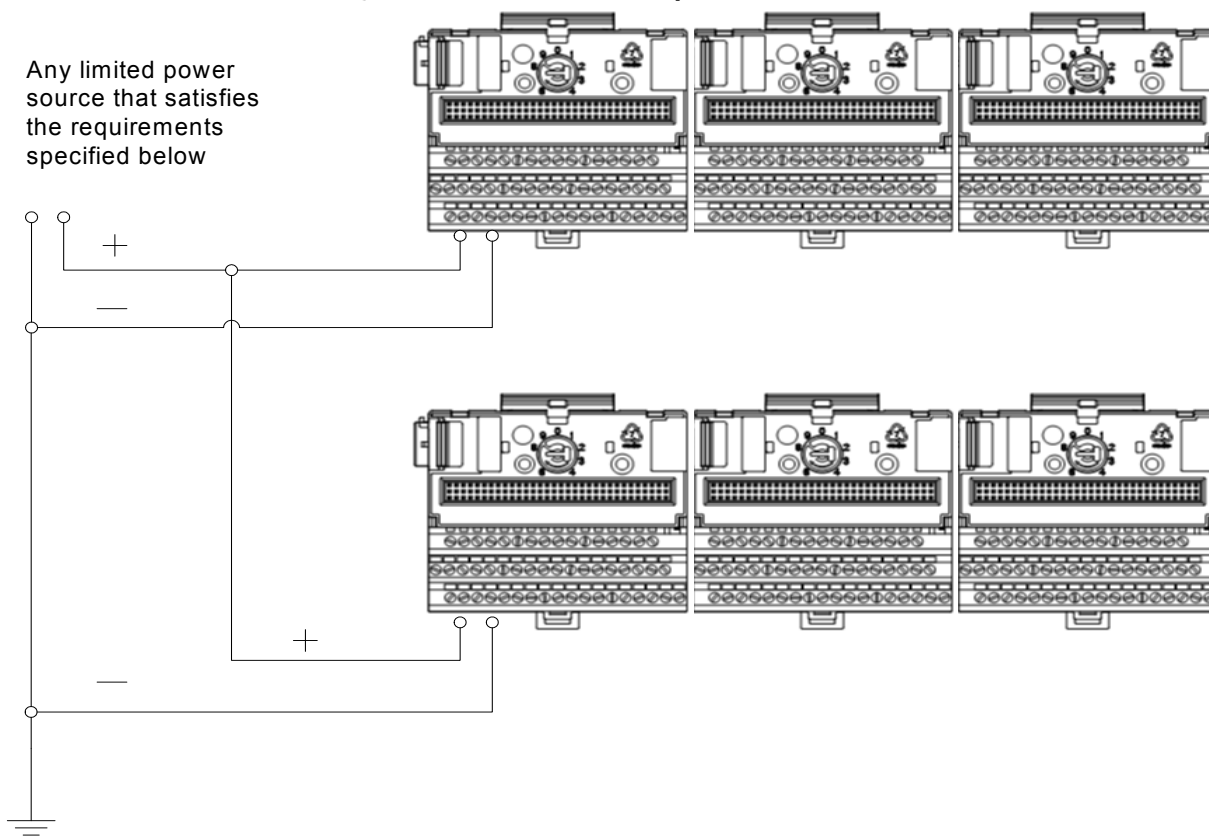

**Power Supply Requirements**

<b>XM Power Supply Requirements</b>	
Protection	Listed Class 2 rated supply, or Fused* ITE Listed SELV supply, or Fused* ITE Listed PELV supply
Output Voltage	18–32 Vdc
Output Power	100 Watts Maximum (~4A @ 24 Vdc)
Static Regulation	± 2%
Dynamic Regulation	± 3%
Ripple	< 100mVpp
Output Noise	Per EN50081-1
Overshoot	< 3% at turn-on, < 2% at turn-off
Hold-up Time	As required (typically 50mS at full rated load)

\* When a fused supply is used the fuse must be a 5 amp, listed, fast acting fuse such as provided by Allen-Bradley part number 1440-5AFUSEKIT

---

**IMPORTANT**

See Application Technique "XM Power Supply Solutions", publication ICM-AP005A-EN-E, for guidance in architecting power supplies for XM systems.

---

## Grounding Requirements

Use these grounding requirements to ensure safe electrical operating circumstances, and to help avoid potential emi and ground noise that can cause unfavorable operating conditions for your XM system.


### *DIN Rail Grounding*

The XM modules make a chassis ground connection through the DIN rail. The DIN rail must be connected to a ground bus or grounding electrode conductor using 8 AWG or 1 inch copper braid. See Figure 2.2.

Use zinc-plated, yellow-chromated steel DIN rail (Allen-Bradley part no. 199-DR1 or 199-DR4) or equivalent to assure proper grounding. Using other DIN rail materials (e.g. aluminum, plastic, etc.), which can corrode, oxidize, or are poor conductors can result in improper or intermittent platform grounding.




**Figure 2.2 XM System DIN Rail Grounding**

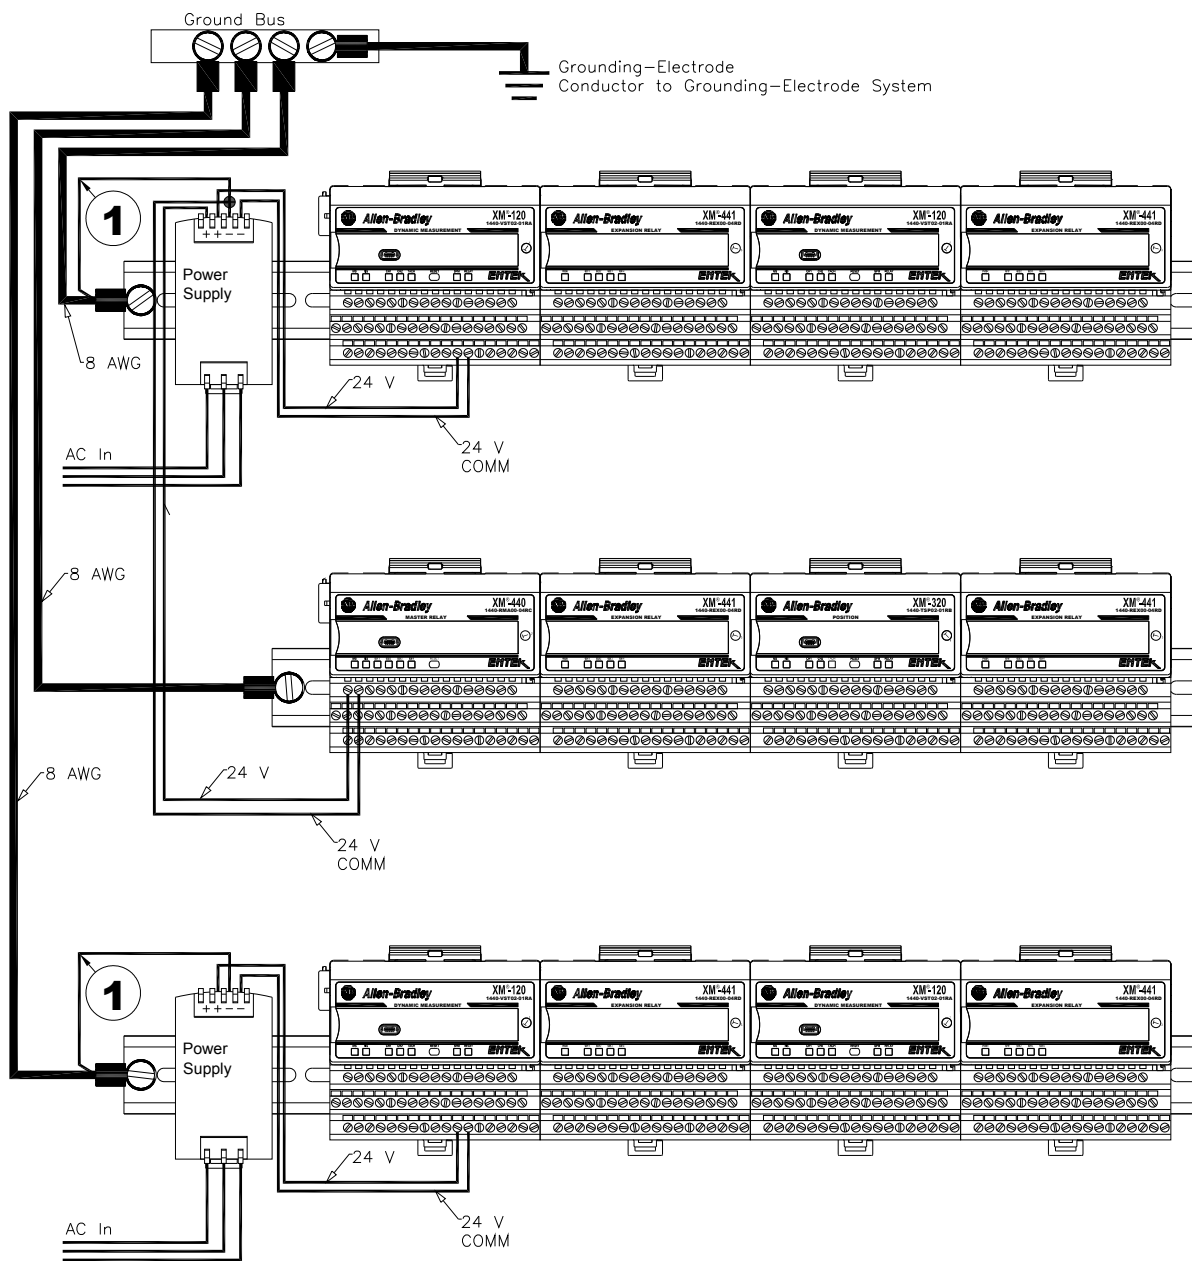

1 Use 14 AWG wire.

The grounding wire can be connected to the DIN rail using a DIN Rail Grounding Block (Figure 2.3).


**Figure 2.3 DIN Rail Grounding Block**

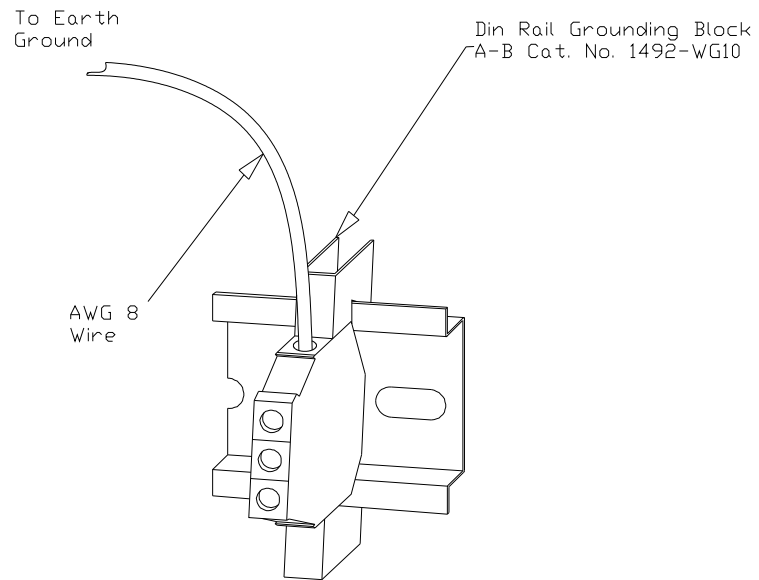


*Panel/Wall Mount Grounding*

The XM modules can also be mounted to a conductive mounting plate that is grounded. See Figure 2.5. Use the grounding screw hole provided on the terminal base to connect the mounting plate the Chassis terminals.

**Figure 2.4 Grounding Screw on XM Terminal Base**

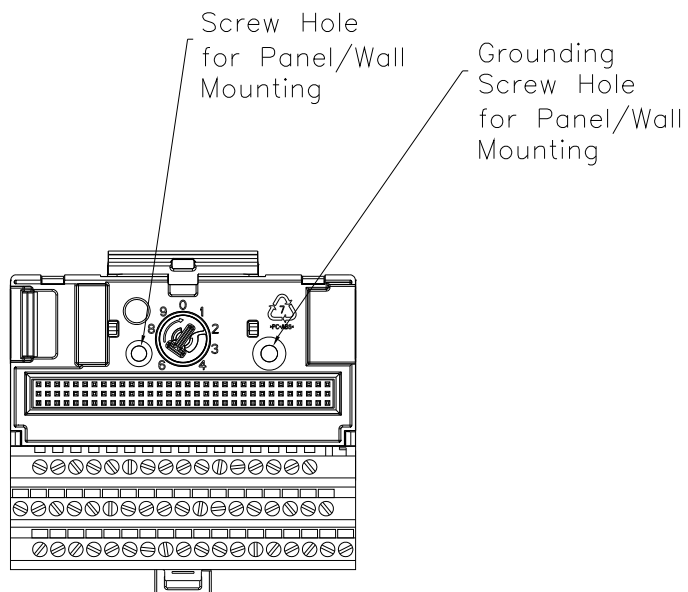

**Figure 2.5 Panel/Wall Mount Grounding**

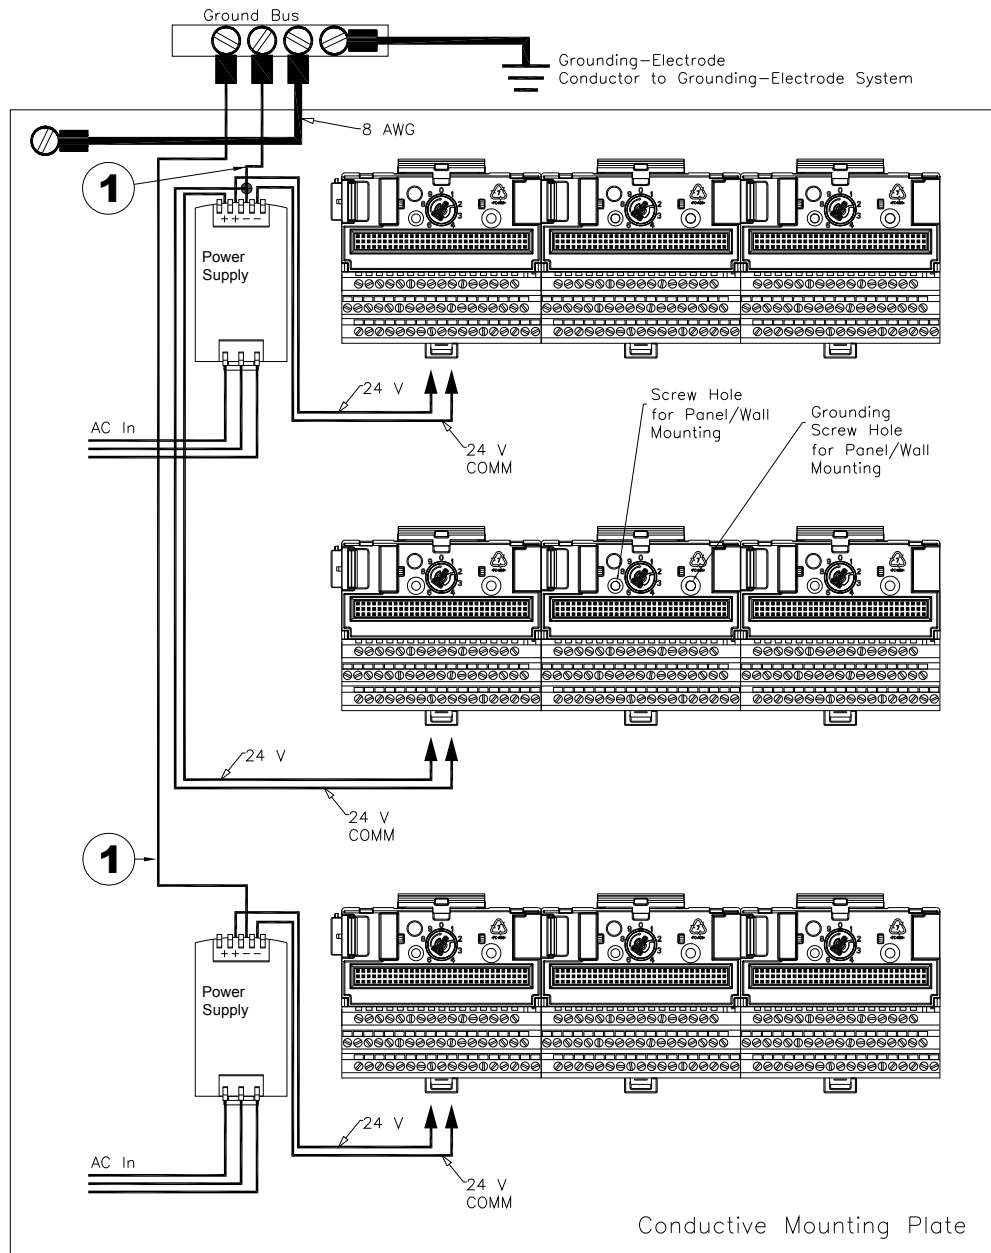

1 Use 14 AWG wire.

### *24V Common Grounding*

24V power to the XM modules must be grounded. When two or more power supplies power the XM system, ground the 24V Commons at a single point, such as the ground bus bar.

---

**IMPORTANT**

If it is not possible or practical to ground the -24Vdc supply, then it is possible for the system to be installed and operate ungrounded. However, if installed ungrounded then the system must not be connected to a ground through any other circuit unless that circuit is isolated externally. Connecting a floating system to a non-isolated ground could result in damage to the XM module(s) and/or any connected device. Also, operating the system without a ground may result in the system not performing to the published specifications regards measurement accuracy and communications speed, distance or reliability.

---

---

**IMPORTANT**

The 24V Common and Signal Common terminals are internally connected. They are isolated from the Chassis terminals unless they are connected to ground as described in this section. See Terminal Block Assignments on page 17 for more information.


---

### *Transducer Grounding*

Make certain the transducers are electrically isolated from earth ground. Cable shields must be grounded at one end of the cable, and the other end left floating or not connected. It is recommended that where possible, the cable shield be grounded at the XM terminal base (Chassis terminal) and not at the transducer.

### *DeviceNet Grounding*

The DeviceNet network is functionally isolated and must be referenced to earth ground at a single point. XM modules do not require an external DeviceNet power supply. Connect DeviceNet V- to earth ground at one of the XM modules, as shown in Figure 2.6.

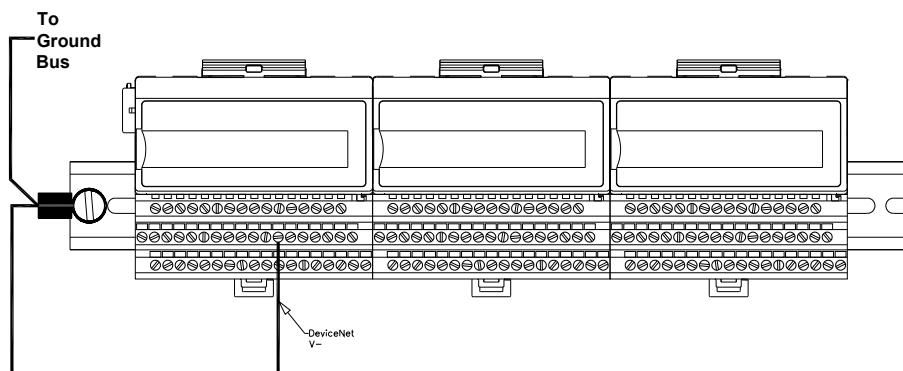**Figure 2.6 Grounded DeviceNet V- at XM Module****ATTENTION**

Use of a separate DeviceNet power supply is not permitted. See Application Technique "XM Power Supply Solutions", publication ICM-AP005A-EN-E, for guidance in using XM with other DeviceNet products.

For more information on the DeviceNet installation, refer to the ODVA Planning and Installation Manual - DeviceNet Cable System, which is available on the ODVA web site (<http://www.odva.org>).

## Mounting the Terminal Base Unit

The XM family includes several different terminal base units to serve all of the XM modules. The XM-947 terminal base, Cat. No. 1440-TB-H, is the only terminal base unit used with the XM-160, XM-161, and XM-162.

The terminal base can be DIN rail or wall/panel mounted. Refer to the specific method of mounting below.

**ATTENTION**


The XM modules make a chassis ground connection through the DIN rail. Use zinc plated, yellow chromated steel DIN rail to assure proper grounding. Using other DIN rail materials (e.g. aluminum, plastic, etc.), which can corrode, oxidize or are poor conductors can result in improper or intermittent platform grounding.

You can also mount the terminal base to a grounded mounting plate. Refer to Panel/Wall Mount Grounding on page 10.

## DIN Rail Mounting


Use the following steps to mount the XM-947 terminal base unit on a DIN rail (A-B pt no. 199-DR1 or 199-DR4).

1. Position the terminal base on the 35 x 7.5mm DIN rail (A).

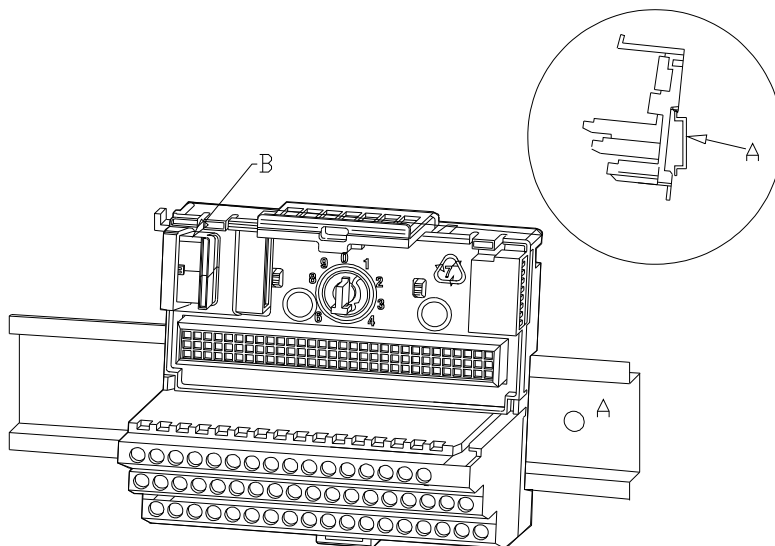

Position terminal base at a slight angle and hook over the top of the DIN rail.

2. Slide the terminal base unit over leaving room for the side connector (B).
3. Rotate the terminal base onto the DIN rail with the top of the rail hooked under the lip on the rear of the terminal base.

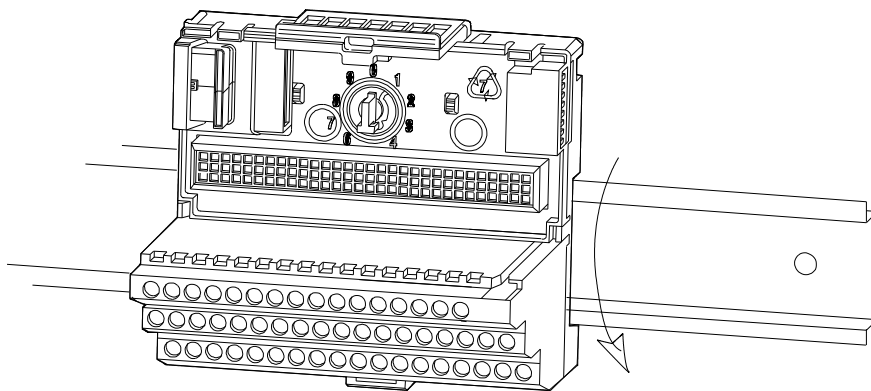

4. Press down on the terminal base unit to lock the terminal base on the DIN rail. If the terminal base does not lock into place, use a screwdriver or similar device to open the locking tab, press down on the terminal base until flush with the DIN rail and release the locking tab to lock the base in place.


## Interconnecting Terminal Base Units

Follow the steps below to install another terminal base unit on the DIN Rail.

### IMPORTANT

Make certain you install the terminal base units in order of left to right.

1. Position the terminal base up against the previously installed terminal base.
2. Make certain the side connector (B) is **fully retracted** into the base unit.
3. Slide the terminal base unit over tight against the neighboring terminal base. Make sure the hook on the terminal base slides under the edge of the terminal base unit.
4. Press down on the terminal base unit to lock the terminal base on the DIN rail. If the terminal base does not lock into place, use a screwdriver or similar device to open the locking tab, press down on the terminal base until flush with the DIN rail and release the locking tab to lock the base in place.
5. Gently push the side connector into the side of the neighboring terminal base unit to complete the backplane connection.

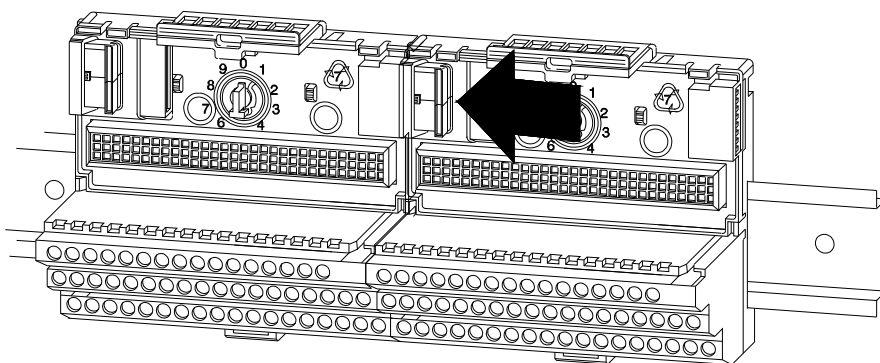


## Panel/Wall Mounting

Installation on a wall or panel consists of:

- laying out the drilling points on the wall or panel
- drilling the pilot holes for the mounting screws
- installing the terminal base units and securing them to the wall or panel

Use the following steps to install the terminal base on a wall or panel.

1. Lay out the required points on the wall/panel as shown in the drilling dimension drawing below.

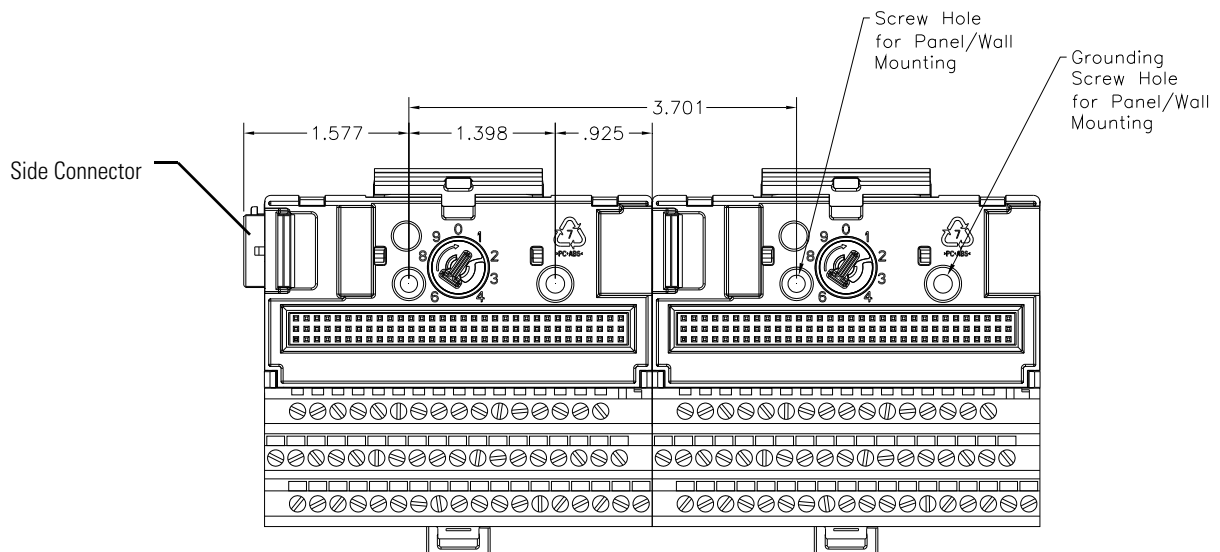


2. Drill the necessary holes for the #6 self-tapping mounting screws.
3. Secure the terminal base unit using two #6 self-tapping screws.
4. To install another terminal base unit, retract the side connector into the base unit. Make sure it is **fully retracted**.
5. Position the terminal base unit up tight against the neighboring terminal base. Make sure the hook on the terminal base slides under the edge of the terminal base unit.
6. Gently push the side connector into the side of the neighboring terminal base to complete the backplane connection.
7. Secure the terminal base to the wall with two #6 self-tapping screws.



## Connecting Wiring for Your Module

Wiring to the module is made through the terminal base unit on which the module mounts. The XM-160, XM-161, and XM-162 modules are compatible only with the XM-947 terminal base unit, Cat. No. 1440-TB-H.

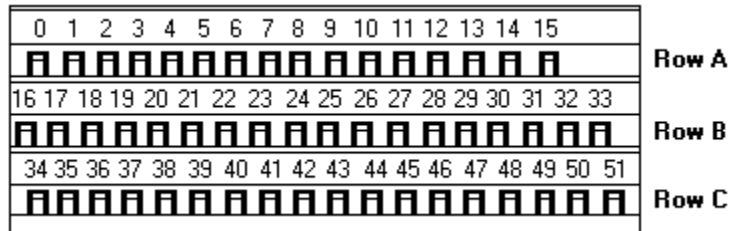

**Figure 2.7 XM-947 Terminal Base Unit**



XM-947, Cat. No. 1440-TB-H

## Terminal Block Assignments

The terminal block assignments and descriptions for the XM-160, XM-161, and XM-162 modules are shown below.

<b>ATTENTION</b>	 <p>The terminal block assignments are different for different XM modules. The following table applies only to the Direct Vibration modules. Refer to the installation instructions for the specific XM module for its terminal assignments.</p>
<b>WARNING</b>	 <p><b>EXPLOSION HAZARD</b></p> <p>Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous.</p> <p>Do not disconnect connections to this equipment unless power has been removed or the area is known to be nonhazardous. Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.</p>

### Terminal Block Assignments

No.	Name			Description
	XM-160	XM-161	XM-162	
0	Chassis			Connection to DIN rail ground spring or panel mounting hole
1	Chassis			Connection to DIN rail ground spring or panel mounting hole
2	Chassis			Connection to DIN rail ground spring or panel mounting hole
3	Signal Common			Transducer input and buffered output return

## Terminal Block Assignments

No.	Name			Description
	XM-160	XM-161	XM-162	
4		Signal Common		Transducer input and buffered output return
5		Signal Common		Transducer input and buffered output return
6		Signal Common		Transducer input and buffered output return
7		Signal Common		Transducer input and buffered output return
8		Signal Common		Transducer input and buffered output return
9		Signal Common		Transducer input and buffered output return
10		Signal Common		Transducer input and buffered output return
11		Signal Common		Transducer input and buffered output return
12		Signal Common		Transducer input and buffered output return
13		Signal Common		Transducer input and buffered output return
14		Signal Common		Transducer input and buffered output return
15		Chassis		Connection to DIN rail ground spring or panel mounting hole
16	No Connection	4-20mA Out 1 (+)	-24V Prox Power (Ch 1...3)	XM-161 channel 1 4-20mA output XM-162 -24V source for proximity probe channels 1, 2, 3
17	No Connection	4-20mA Out 2 (+)	-24V Prox Power (Ch 1...3)	XM-161 channel 2 4-20mA output XM-162 -24V source for proximity probe channels 1, 2, 3
18	No Connection	4-20mA Out 3 (+)	-24V Prox Power (Ch 1...3)	XM-161 channel 3 4-20mA output XM-162 -24V source for proximity probe channels 1, 2, 3
19		Signal In 1		Channel 1 transducer/signal input
20		Buffer Out 1		Channel 1 signal's true buffered output
21		Signal In 2		Channel 2 transducer/signal input
22		Buffer Out 2		Channel 2 signal's true buffered output
23		Signal In 3		Channel 3 transducer/signal input
24		Buffer Out 3		Channel 3 signal's true buffered output
25		Signal In 4		Channel 4 transducer/signal input
26		Buffer Out 4		Channel 4 signal's true buffered output
27		Signal In 5		Channel 5 transducer/signal input
28		Buffer Out 5		Channel 5 signal's true buffered output
29		Signal In 6		Channel 6 transducer/signal input
30		Buffer Out 6		Channel 6 signal's true buffered output
31	No Connection	4-20mA Out 4 (+)	-24V Prox Power (Ch 4...6)	XM-161 channel 4 4-20mA output XM-162 -24V source for proximity probe channels 4, 5, 6
32	No Connection	4-20mA Out 5 (+)	-24V Prox Power (Ch 4...6)	XM-161 channel 5 4-20mA output XM-162 -24V source for proximity probe channels 4, 5, 6
33	No Connection	4-20mA Out 6 (+)	-24V Prox Power (Ch 4...6)	XM-161 channel 6 4-20mA output XM-162 -24V source for proximity probe channels 4, 5, 6

## Terminal Block Assignments

No.	Name			Description
	XM-160	XM-161	XM-162	
34	No Connection	4-20mA 1...3 V+	GND/COM	XM-161 channel 1, 2, & 3 4-20mA positive voltage supply input (4-20mA loops returned directly to external power source) XM-162 circuit ground (Relay Reset and SetPtMult switch return)
35	No Connection	4-20mA 1...3 V+	GND/COM	XM-161 channel 1, 2, & 3 4-20mA positive voltage supply input (4-20mA loops returned directly to external power source) XM-162 circuit ground (Relay Reset and SetPtMult switch return)
36	No Connection	Relay Reset		Relay reset switch input Switch returned to 24V GND (or signal common)
37	+24V In			Connection to external +24V power supply, positive side
38	24V Common			Connection to external +24V power supply, negative side (internally DC-coupled to circuit ground)
39	Reserved			
40	Common			Internally DC-coupled to circuit ground
41	Chassis			Connection to DIN rail ground spring or panel mounting hole
42	Chassis			Connection to DIN rail ground spring or panel mounting hole
43	Chassis			Connection to DIN rail ground spring or panel mounting hole
44	CAN_High			DeviceNet bus connection, high differential (white wire)
45	CAN_Low			DeviceNet bus connection, low differential (blue wire)
46	CAN_Shield			DeviceNet bus connection to chassis ground (bare wire)
47	DNet V (+)			DeviceNet bus power input, positive side (red wire)
48	DNet V (-)			DeviceNet bus power input, negative side (black wire)
49	No Connection	SetPtMult		Switch input to activate Setpoint Multiplier Switch returned to 24V GND (or signal common)
50	No Connection	4-20mA 4...6 V+	GND/COM	XM-161 channel 4, 5, & 6 4-20mA positive voltage supply input (4-20mA loops returned directly to external power source) XM-162 circuit ground (Relay Reset and SetPtMult switch return)
51	No Connection	4-20mA 4...6 V+	GND/COM	XM-161 channel 4, 5, & 6 4-20mA positive voltage supply input (4-20mA loops returned directly to external power source) XM-162 circuit ground (Relay Reset and SetPtMult switch return)

## Connecting the Power Supply

Power supplied to the module must be nominally 18–32 Vdc and must be a Class 2 rated circuit.

Wire the DC-input power supply to the terminal base unit as shown in Figure 2.8.


### ATTENTION



If the power supply is mounted remotely from the module rack, or the 24V power is sourced from something other than an approved AC-DC power supply, a line filter must be installed in series with the 24V source and the following should be met:

- The total cable length should be less than 10m from the 24V source. Or,
- The cable should be shielded with the shield earth grounded.

**Figure 2.8 DC Input Power Supply Connections**

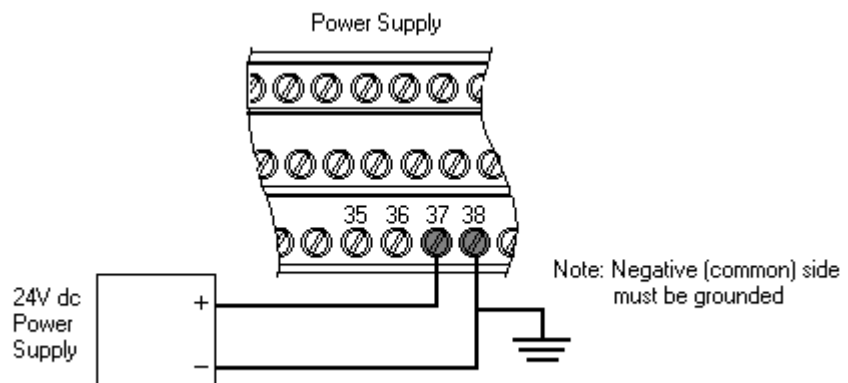

### IMPORTANT

A Class 2 circuit can be provided by use of an NEC Class 2 rated power supply, or by using a SELV or PELV rated power supply with a 5 Amp current limiting fuse installed before the XM module(s).

### IMPORTANT

24Vdc needs to be wired to terminal 37 (+24 V In) to provide power to the device and other XM modules linked to the wired terminal base via the side connector.

**ATTENTION**

The power connections are different for different XM modules. Refer to the installation instructions for your specific XM module for complete wiring information.


## Connecting the Buffered Outputs

The XM-160, XM-161, and XM-162 provide buffered outputs of all transducer input signals (a total of six). The buffered output connections may be used to connect the module to portable data collectors.

The internal power supply voltage provided to the buffered output circuits depends on configuration of the module. Refer to IEPE Buffer Power and Signal Detection Parameters on page 58 for a description of the Buffer Power parameters.

Figure 2.9 shows the buffered output connections for the modules.

**Figure 2.9 Buffered Output Connections**

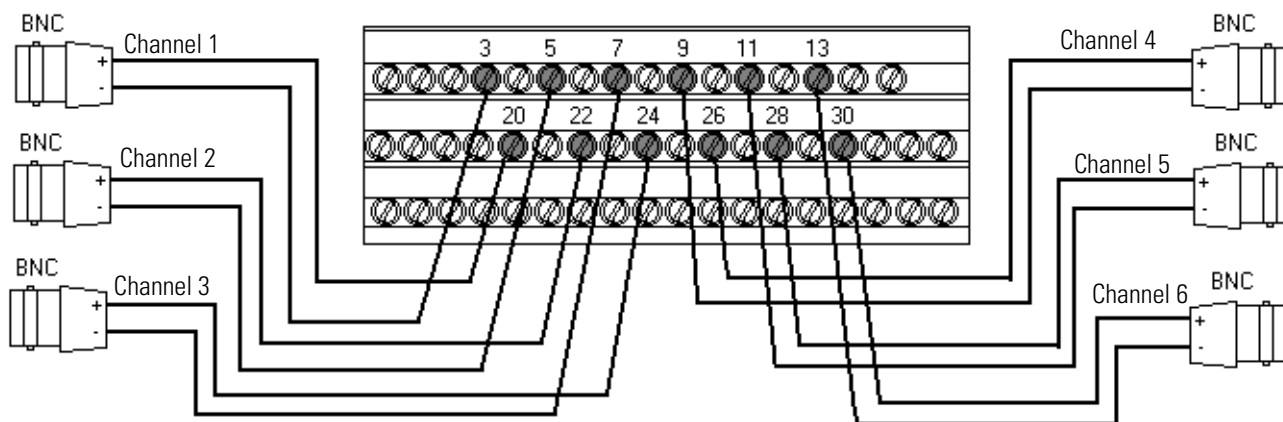

## Connecting 4-20mA Current Loop Output (XM-161)

The XM-161 includes six 4-20mA output channels. The 4-20mA outputs are arranged into two isolated banks of three outputs each. Each bank of 4-20mA outputs is electrically isolated from the other bank and from circuit power and ground. The isolation provided is up to 250V.

The XM-161 requires an external DC power supply to provide loop power. The DC power supply must meet the following requirements:

- Minimum: 7V dc
- Maximum: 36V dc

To determine the minimum voltage across the total loop, add the resistance of all loads in the loop, and determine the minimum operating voltage using the following formula:

$$\text{Voltage minimum} = 7 + (.0226\text{A} \times \text{total resistance in ohms})$$

---

**EXAMPLE**

A single PLC input channel with a resistance of 250 ohms, combined with a field wire resistance of 50 ohms gives a total resistance of 300 ohms.

$$\text{Voltage minimum} = 7 + (.0226\text{A} \times 300 \text{ ohms})$$

$$\text{Voltage minimum} = 13.78\text{V dc}$$

---

The measurements that the 4-20mA output tracks and the signal levels that correspond to the 4mA and 20mA are configurable. Refer to 4-20mA Output Parameters (XM-161) on page 70 for a description of the 4-20mA parameters.

Wire the loop-powered 4-20mA connection to the terminal base unit of the XM-161 as shown in Figure 2.10. A 250 ohm resistor is the recommended load.


---

**ATTENTION**

The 4-20mA output shields must be grounded at a single point. It is recommended that where possible the cable shield be grounded at the equipment wired to the 4-20mA output and not at the XM terminal base.

---

**Figure 2.10 Loop-powered 4-20mA Connections**

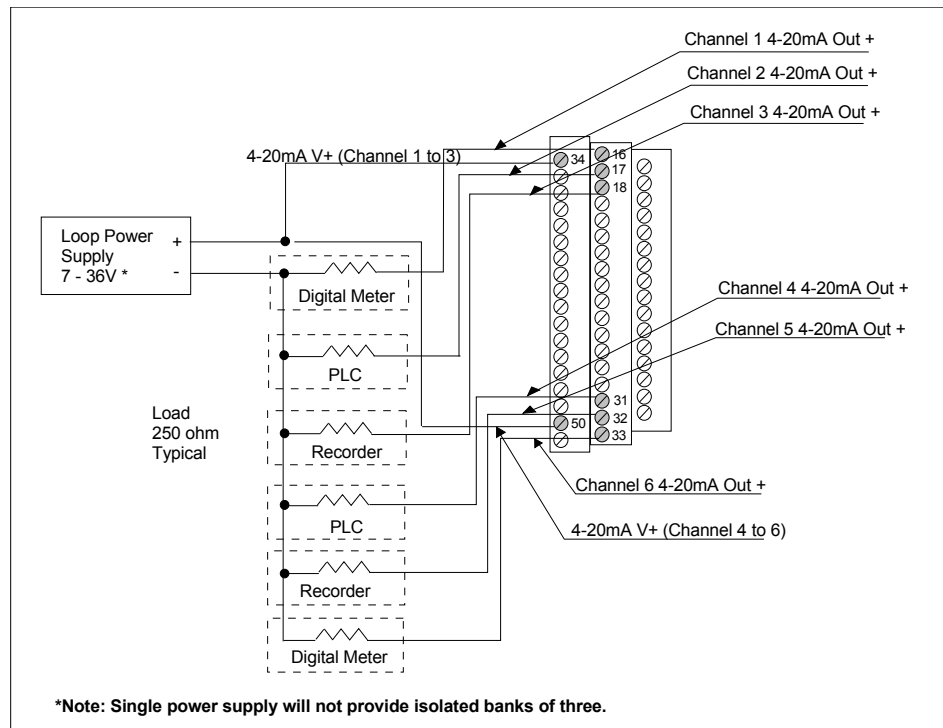

### Connecting a Remote Relay Reset Signal (XM-161 & XM-162)

If you set the relay (physical or virtual) to latching and the relay activates, the relay stays activated even when the condition that caused the alarm has ended. The remote relay reset signal enables you to reset the relay remotely after you have corrected the alarm condition.

**TIP** If you set a module relay to latching, make sure that any linked relays, such as relays in an XM-440 Master Relay Module, are **not** configured as latching. When both relays are set to latching, the relay in each module will have to be independently reset when necessary.

The Direct Vibration modules do not have an on-board relay. The relays are added when an Expansion Relay (XM-441) module is connected to the Direct Vibration modules. The Direct Vibration modules support two Expansion Relay modules for a total of eight relays.

**TIP** You can reset individual relays using the serial or remote configuration tool.

The XM-161 and XM-162 modules can be wired to a Remote Relay Reset Signal. To activate the switch, the switch input terminal should be connected to ground/common. The XM-162 module provides a dedicated terminal for this purpose. However, the XM-161 module does not. Therefore, the input terminal must be wired to any of the XM-161 module's Signal Common or 24V Power Supply GND/COM terminals.

**TIP**

The XM-160 module does not support a Remote Relay Reset Signal. The XM-160 relays can be reset using the reset switch on top of the module, the serial configuration tool, or a DeviceNet command (see XM Services on page 85).


Wire the Remote Relay Reset Signal to the terminal base as shown in Figure 2.11.

**ATTENTION**



If the Relay Reset switch cable exceeds a length of 30m, then the cable must be shielded with the shield earth grounded.

**Figure 2.11 Remote Relay Reset Signal Connection**

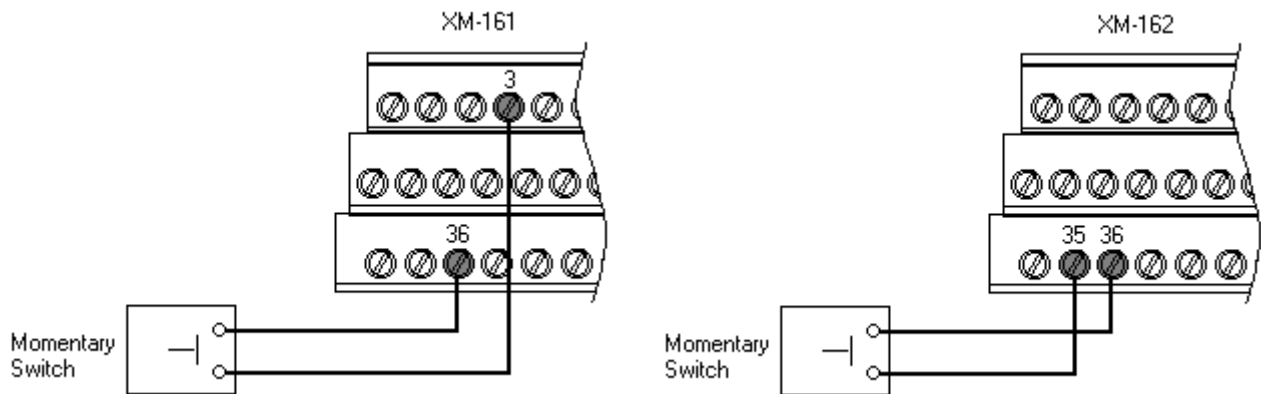


A single switch contact can also be shared by multiple XM modules wired in parallel as shown in Figure 2.12.

**ATTENTION**



The relay reset connections may be different for different XM modules. Figure 2.12 applies only to the XM-162 module. Refer to the installation instructions for the module for its terminal assignments.

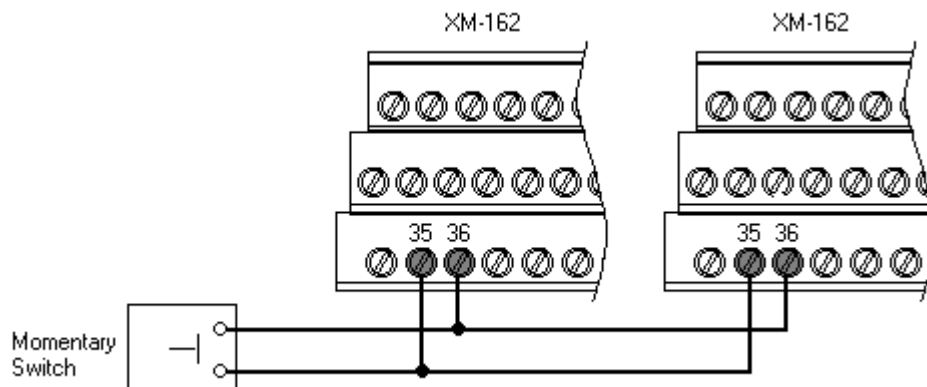

**Figure 2.12 Typical Multiple XM Modules Remote Relay Reset Signal Connection**

### Connecting the Setpoint Multiplication Switch (XM-161 & XM-162)

You can configure the Direct Vibration modules to multiply the alarm setpoints, or inhibit the alarms during the start-up period. This can be used to avoid alarm conditions that may occur during startup, for example, when the monitored machine passes through a critical speed.

Setpoint Multiplication (startup inhibit) can be initiated and terminated using a DeviceNet command (XM Service) or by a closure of a physical contact (XM-161 and XM-162 only). Refer to XM Services on page 85 for more information on XM Services.

To activate the switch, the Setpoint Multiplication input terminal should be connected to ground/common. The XM-162 module provides a dedicated terminal for this purpose. However, the XM-161 module does not. Therefore, the input terminal must be wired to any of the XM-161 module's Signal Common or 24V Power Supply GND/COM terminals.


Wire the Setpoint Multiplication switch to the terminal base unit as shown in Figure 2.13.

#### ATTENTION



If the Setpoint Multiplication switch cable exceeds a length of 30m, then the cable must be shielded with the shield earth grounded.

**Figure 2.13 Setpoint Multiplication Connections**

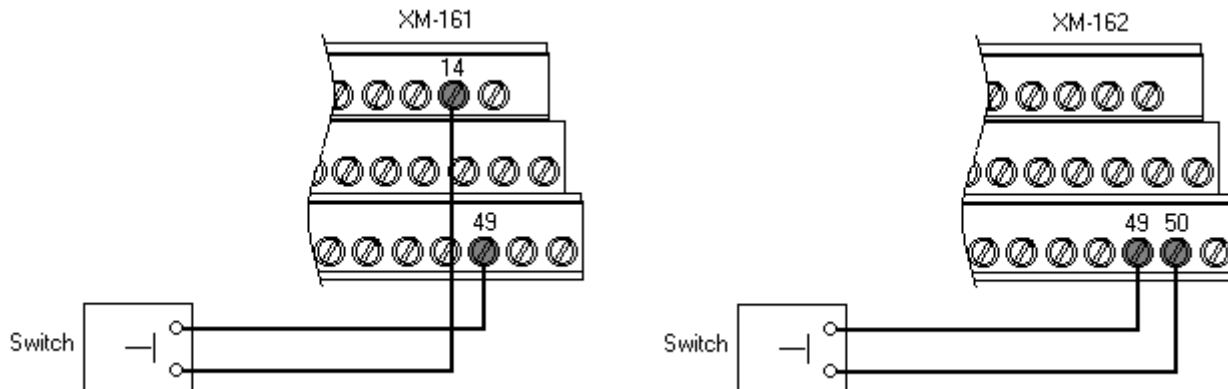


### Connecting the Transducers

The Direct Vibration Modules can accept input from any Allen-Bradley non-contact eddy current probe, a standard IEPE accelerometer, a velocity transducer, or AC voltage output measurement device.

#### Connecting an IEPE Accelerometer


The following figures show the wiring of an IEPE accelerometer to the terminal base unit.

---


<b>ATTENTION</b>	You may ground the cable shield at either end of the cable. Do not ground the shield at both ends. Recommended practice is to ground the cable shield at the terminal base and not at the transducer. Any convenient Chassis terminal may be used (see Terminal Block Assignments on page 17).
	
<b>IMPORTANT</b>	The internal transducer power supply is providing power to the IEPE accelerometer. Make certain the <b>IEPE Power</b> parameter is enabled. Refer to IEPE Buffer Power and Signal Detection Parameters on page 58.

---


**Figure 2.14 IEPE Accelerometer to Channel 1 Wiring**

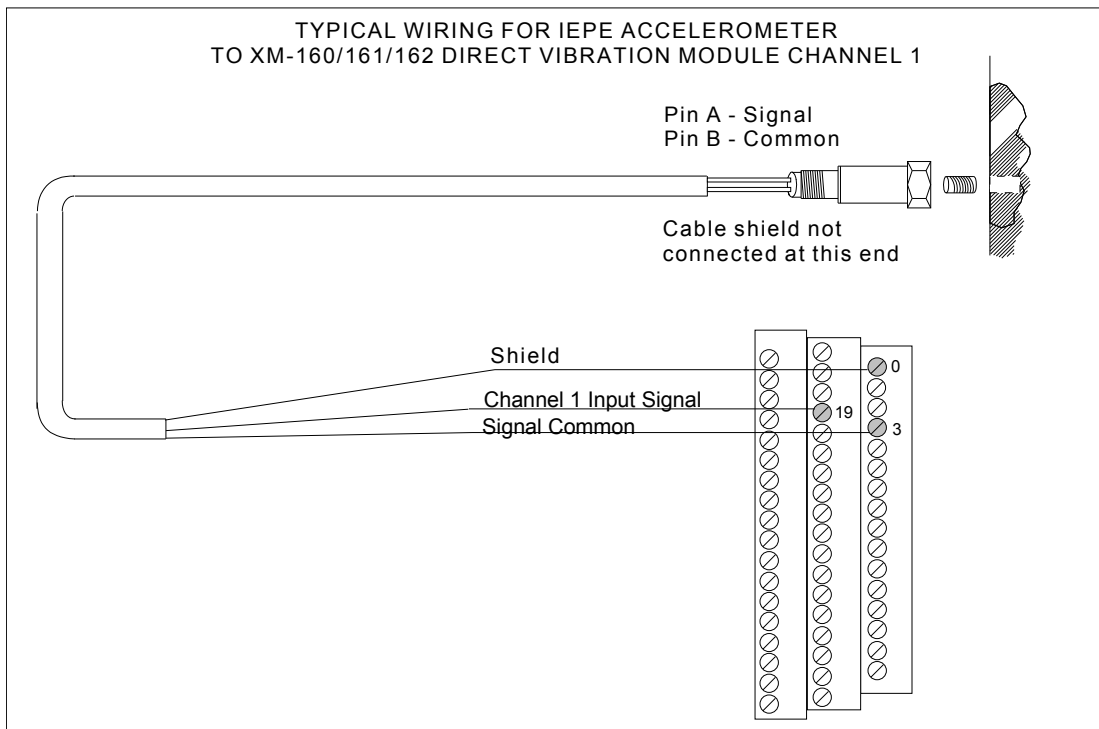


**Figure 2.15 IEPE Accelerometer to Channel 2 Wiring**

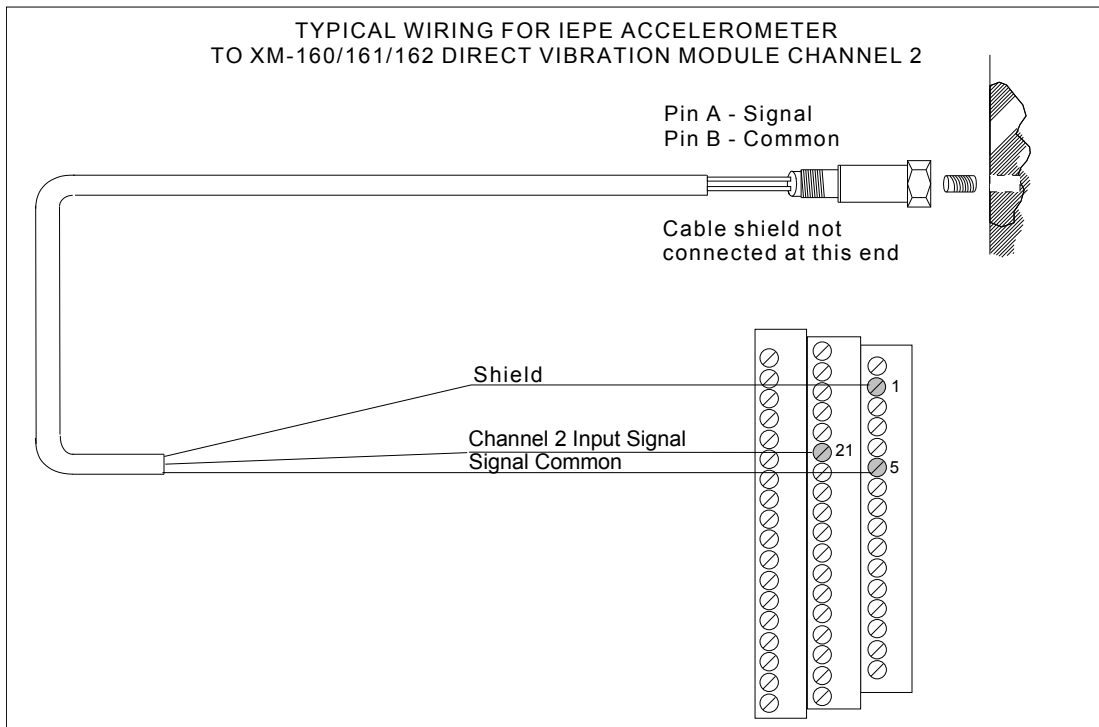


**Figure 2.16 IEPE Accelerometer to Channel 3 Wiring**

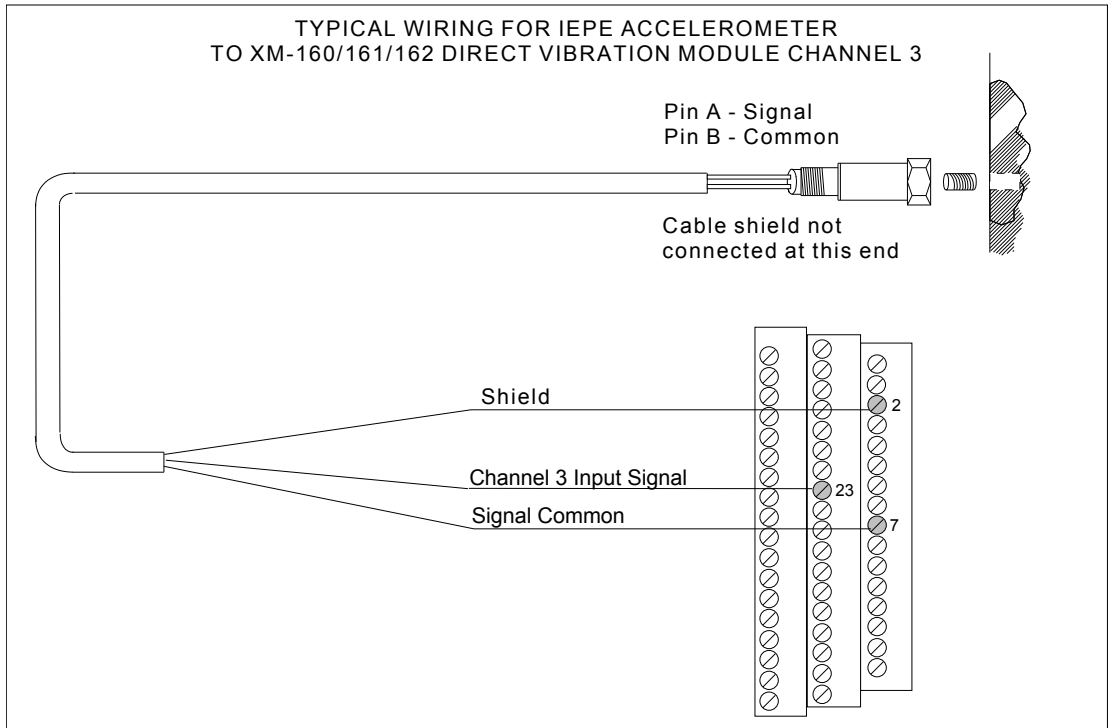


**Figure 2.17 IEPE Accelerometer to Channel 4 Wiring**

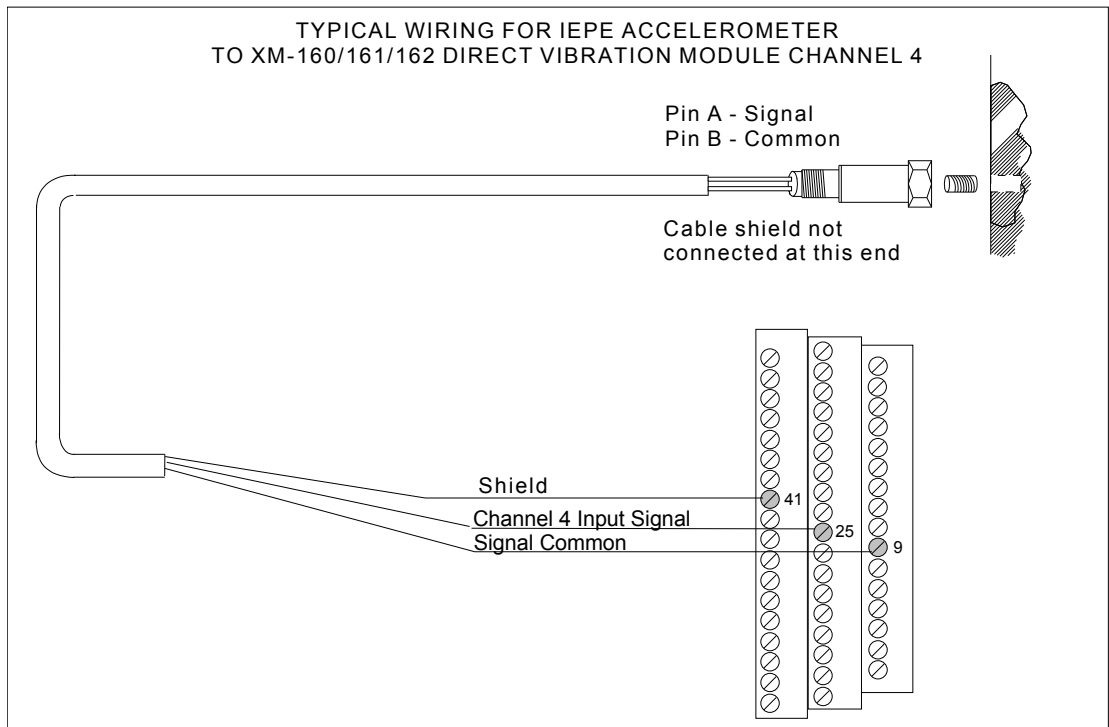

**Figure 2.18 IEPE Accelerometer to Channel 5 Wiring**

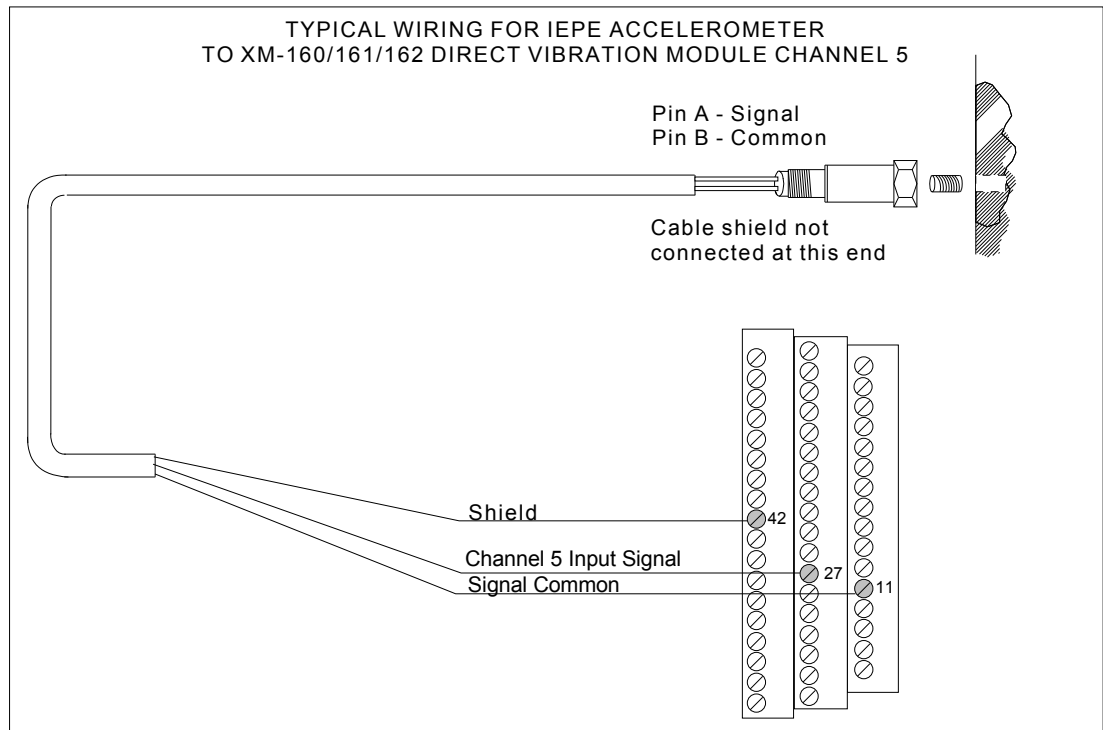

**Figure 2.19 IEPE Accelerometer to Channel 6 Wiring**

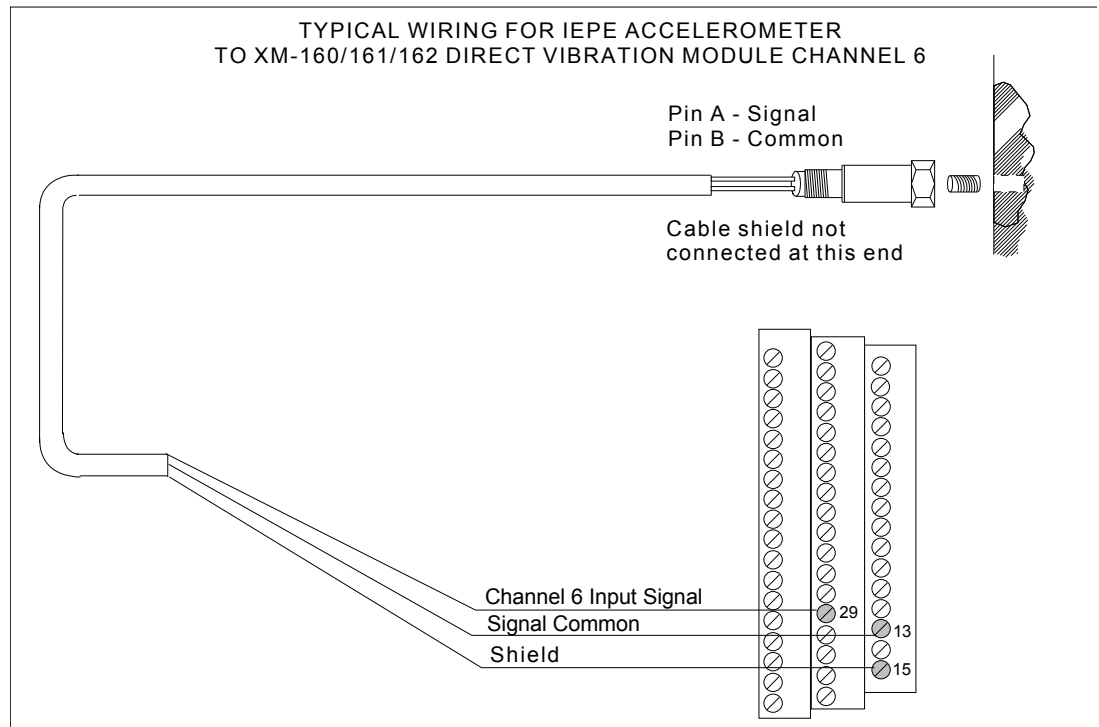


### Connecting a Non-Contact Sensor to the XM-162

The figures below show the wiring of a non-contact sensor to the terminal base unit of the XM-162 module. The XM-162 module provides an internal DC power supply for powering a standard -24V non-contact eddy current probe driver.

Refer to Connecting a Non-Contact Sensor to the XM-160 and 161 on page 33 to see how to wire the XM-160 and XM-161 modules to a non-contact sensor.

---

**ATTENTION**



You may ground the cable shield at either end of the cable. Do not ground the shield at both ends. Recommended practice is to ground the cable shield at the terminal base and not at the transducer. Any convenient Chassis terminal may be used (see Terminal Block Assignments on page 17).


---

**IMPORTANT**


The internal transducer power supply is providing power to the non-contact sensor.

---


**Figure 2.20 Non-Contact Sensor to XM-162 Channel 1 Wiring**

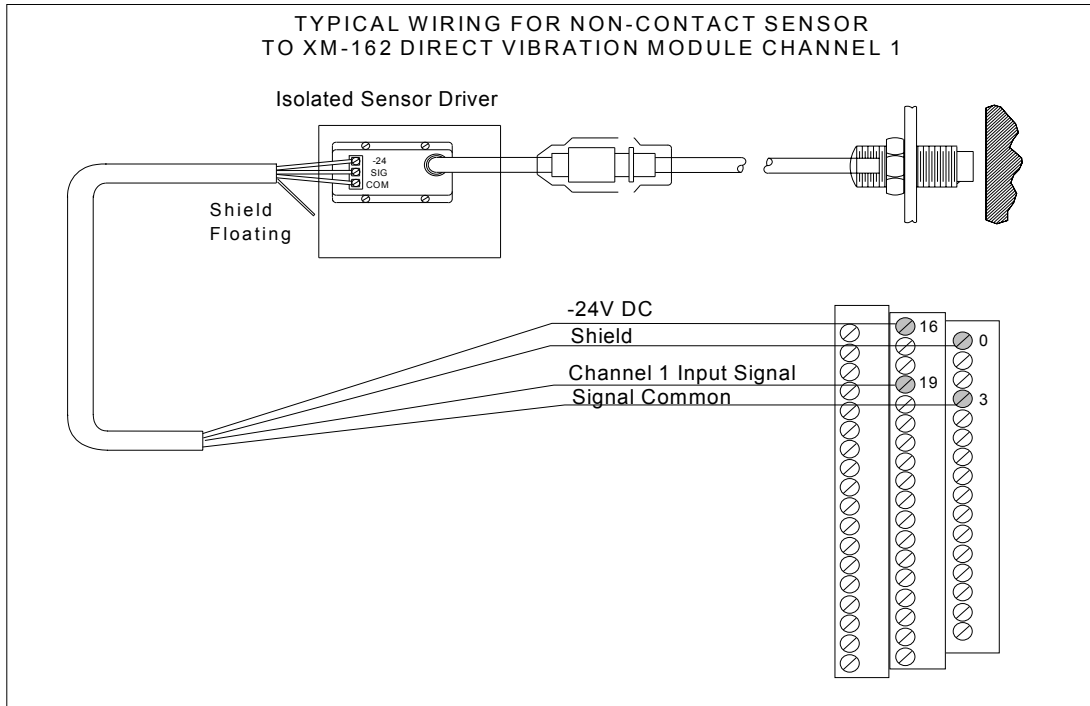


**Figure 2.21 Non-Contact Sensor to XM-162 Channel 2 Wiring**

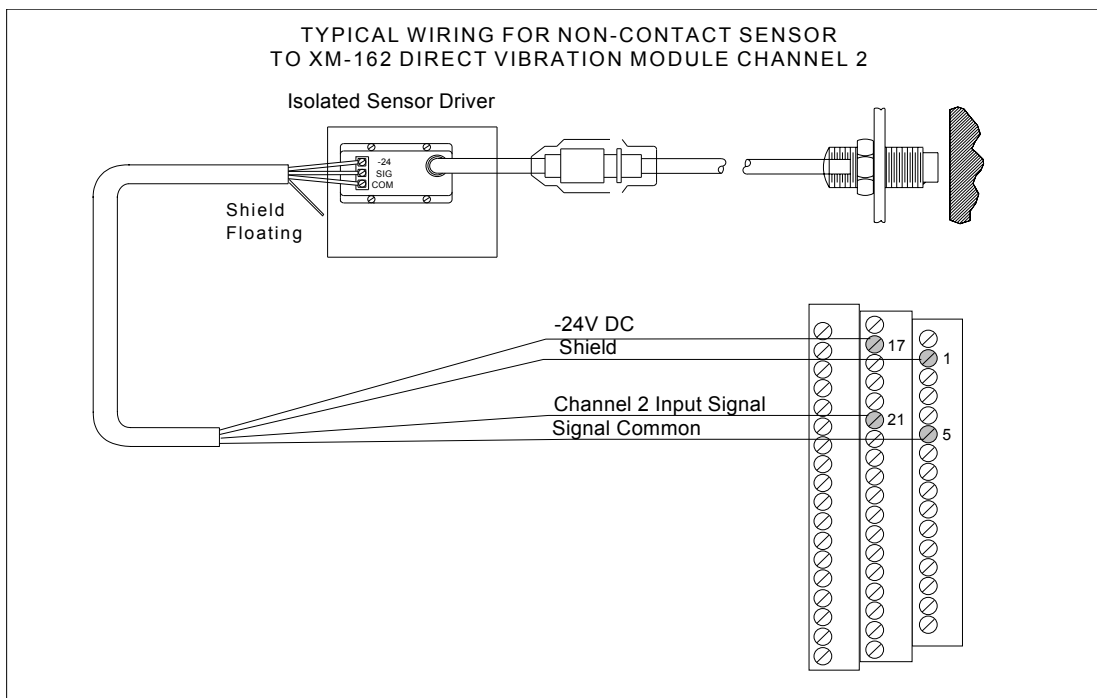


**Figure 2.22 Non-Contact Sensor to XM-162 Channel 3 Wiring**

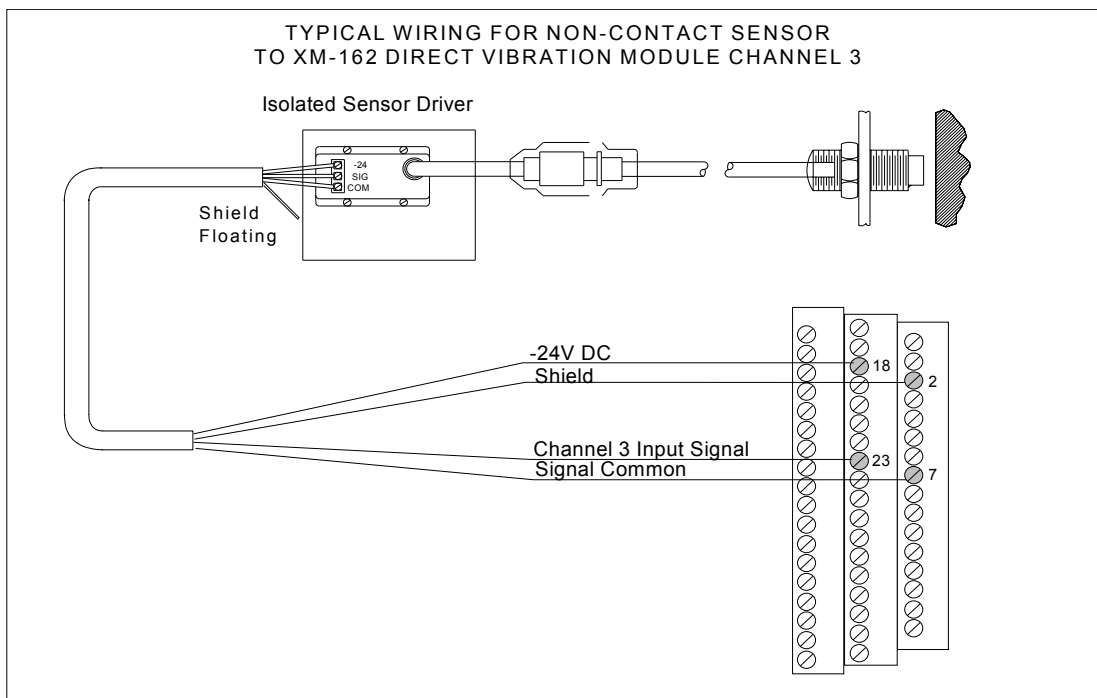


**Figure 2.23 Non-Contact Sensor to XM-162 Channel 4 Wiring**

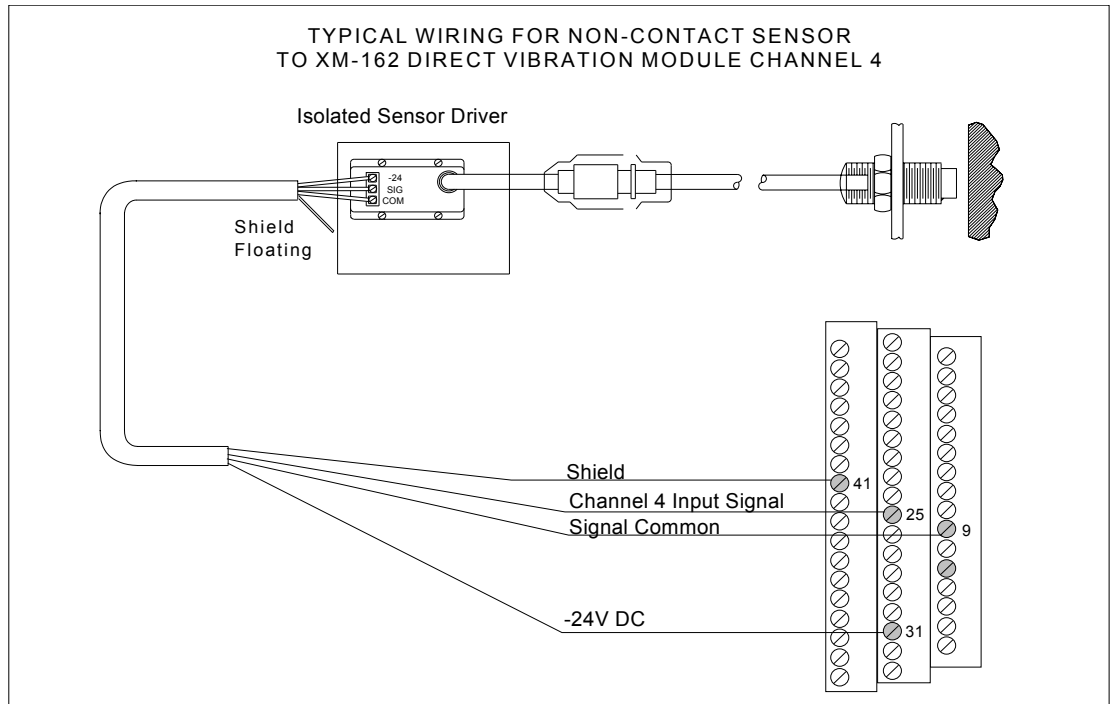

**Figure 2.24 Non-Contact Sensor to XM-162 Channel 5 Wiring**

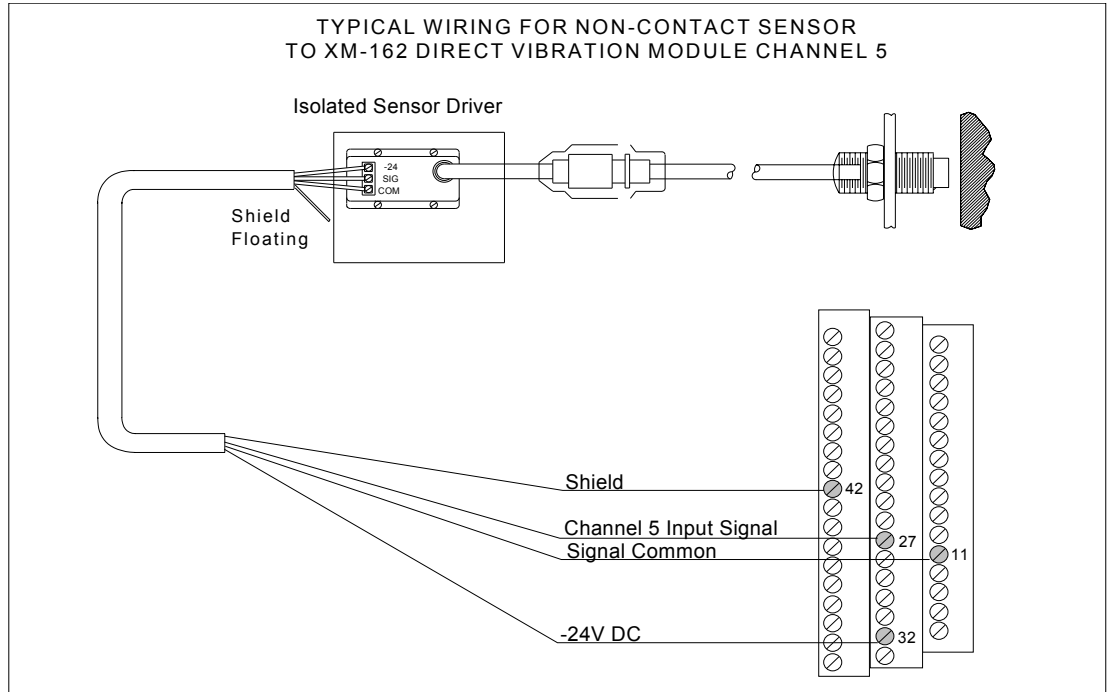

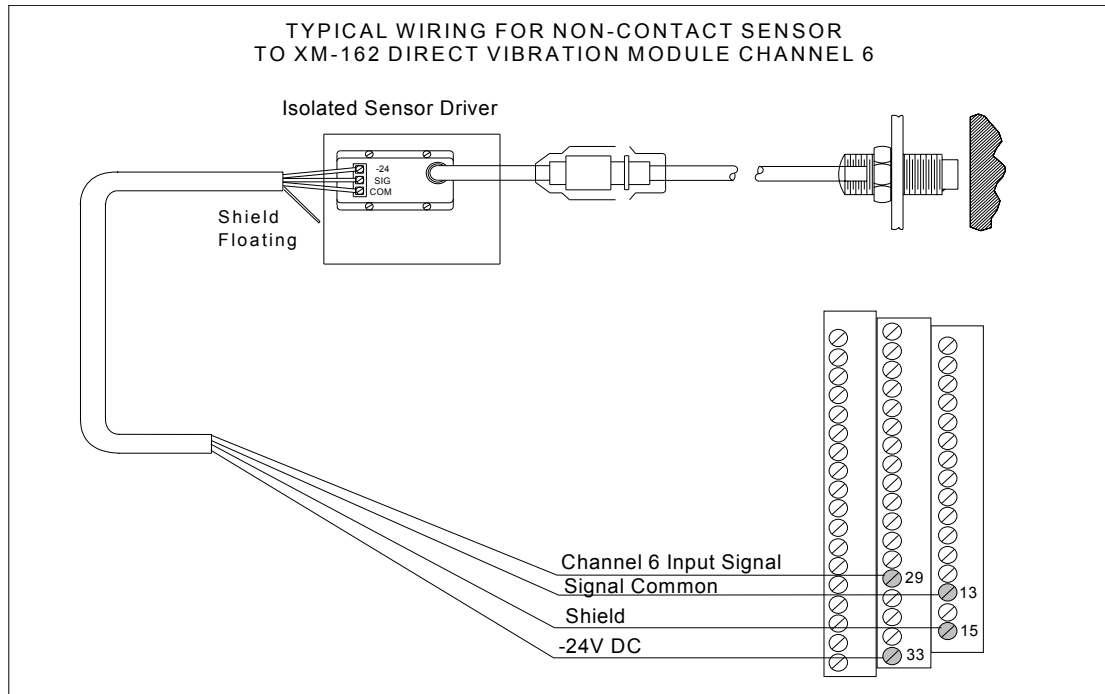

**Figure 2.25 Non-Contact Sensor to XM-162 Channel 6 Wiring**

### Connecting a Non-Contact Sensor to the XM-160 and 161

The XM-160 and XM-161 modules require a dedicated -24V dc power supply or an isolated +24V dc power supply wired in reverse to power a standard -24V non-contact eddy current probe driver. You can use the Allen-Bradley 1606-series power supply for this purpose as shown in the figures below.


Refer to Connecting a Non-Contact Sensor to the XM-162 on page 30 for information on how to wire the XM-162 module to a non-contact sensor.

#### ATTENTION




You may ground the cable shield at either end of the cable. Do not ground the shield at both ends. Recommended practice is to ground the cable shield at the terminal base and not at the transducer. Any convenient Chassis terminal may be used (see Terminal Block Assignments on page 17).


Figure 2.26 Non-Contact Sensor to XM-160/161 Channel 1 Wiring

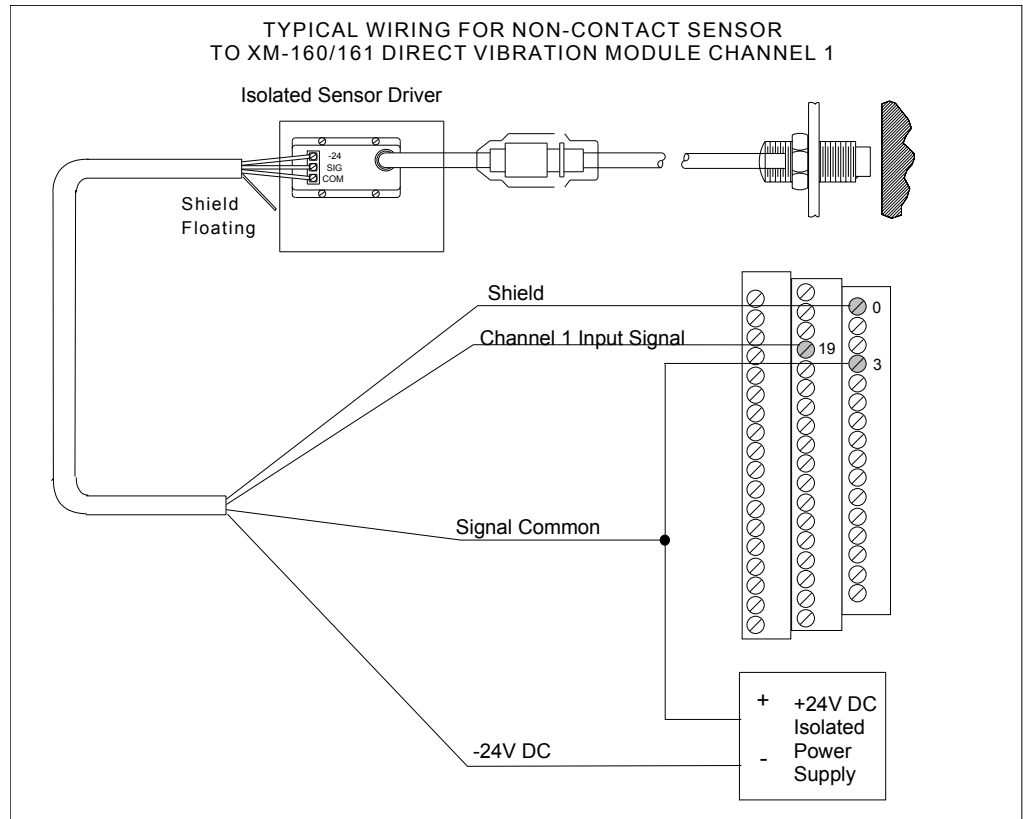


**Figure 2.27 Non-Contact Sensor to XM-160/161 Channel 2 Wiring**

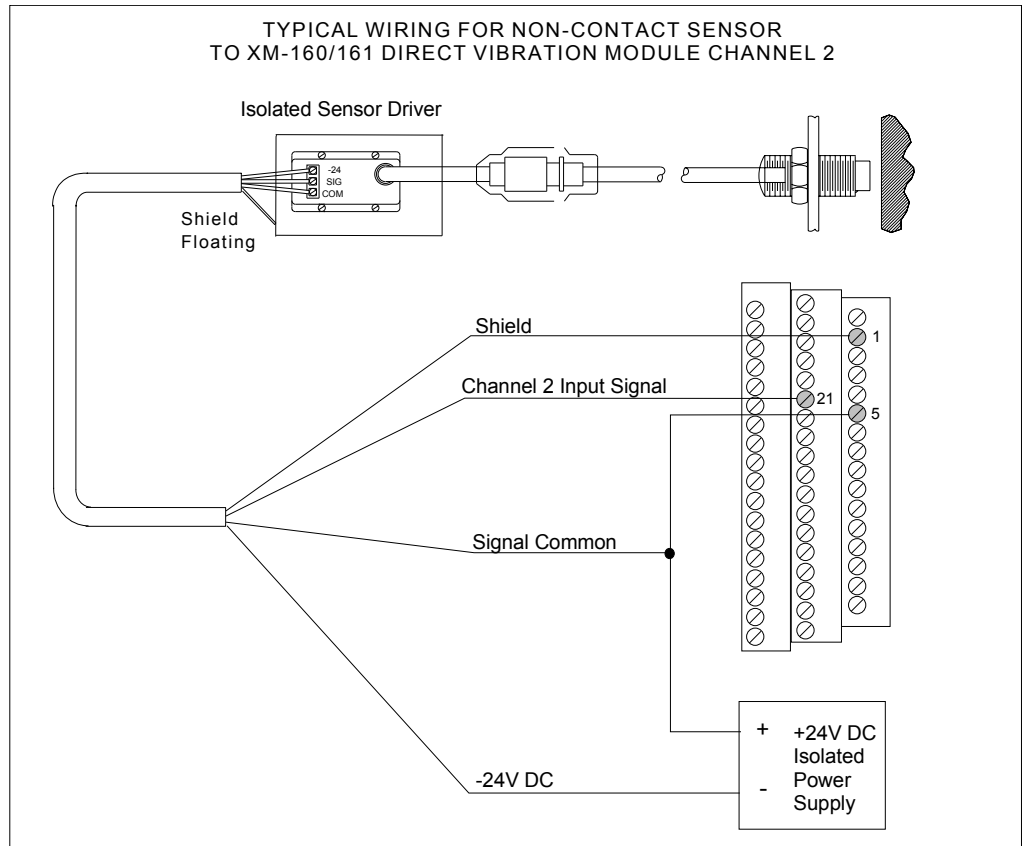


**Figure 2.28 Non-Contact Sensor to XM-160/161 Channel 3 Wiring**

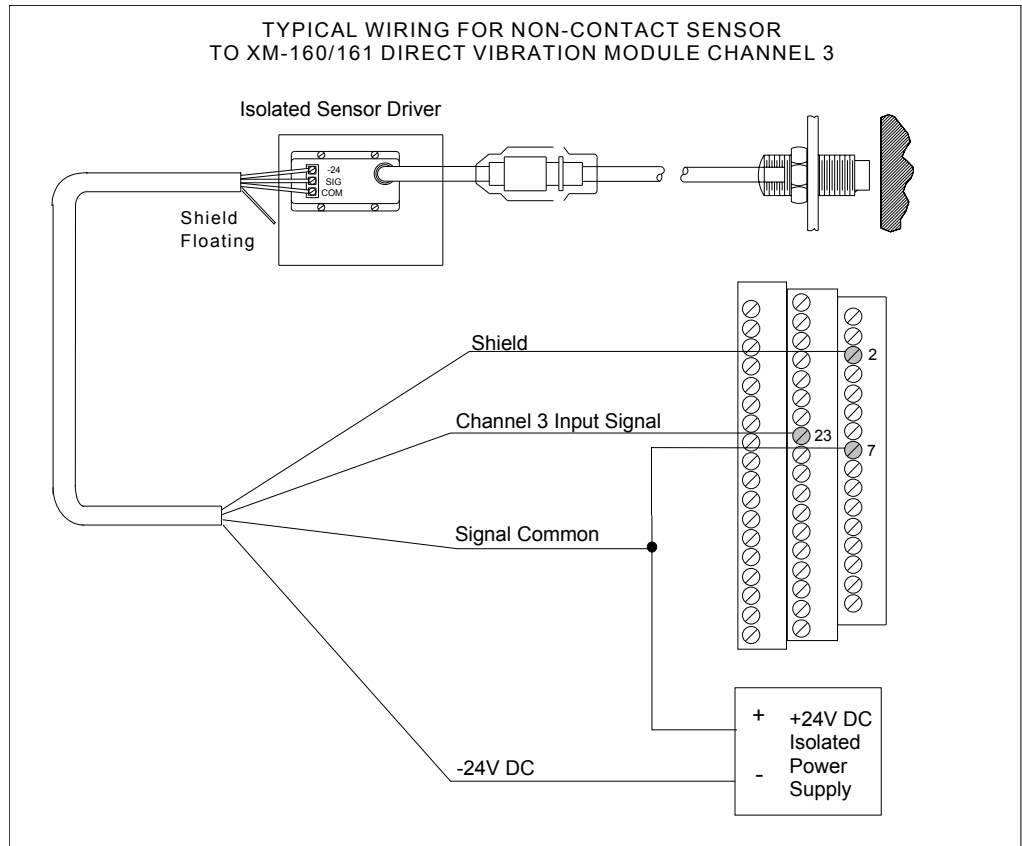


**Figure 2.29 Non-Contact Sensor to XM-160/161 Channel 4 Wiring**

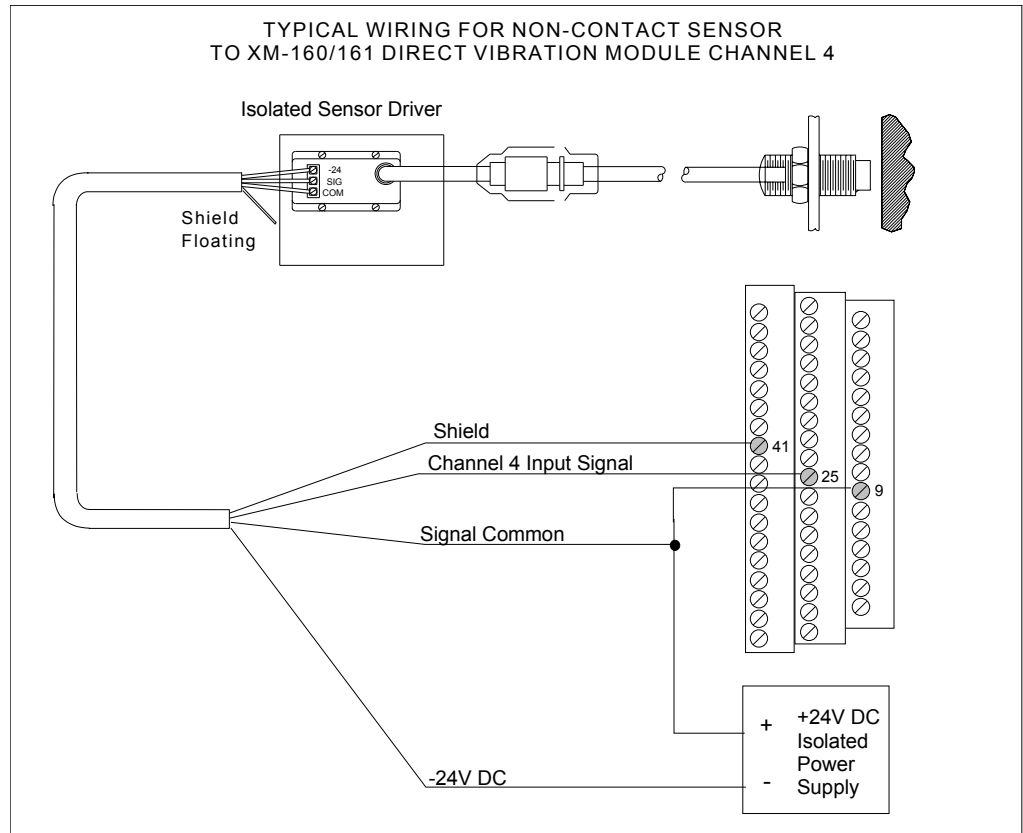

**Figure 2.30 Non-Contact Sensor to XM-160/161 Channel 5 Wiring**

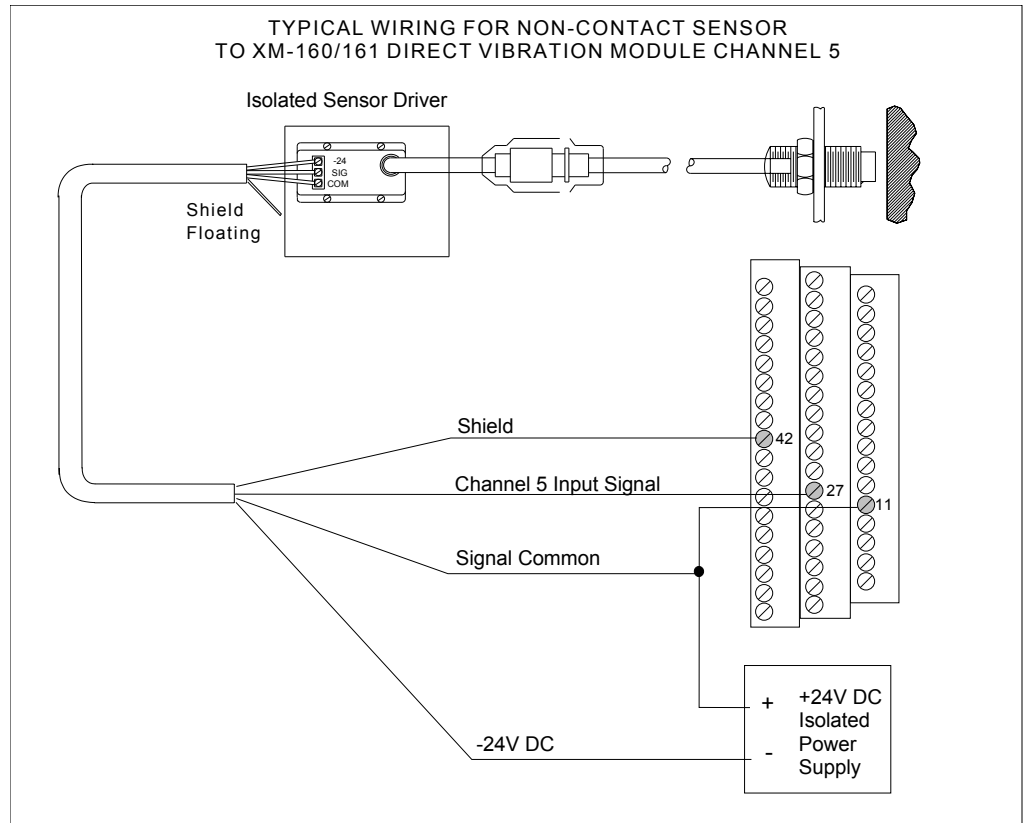

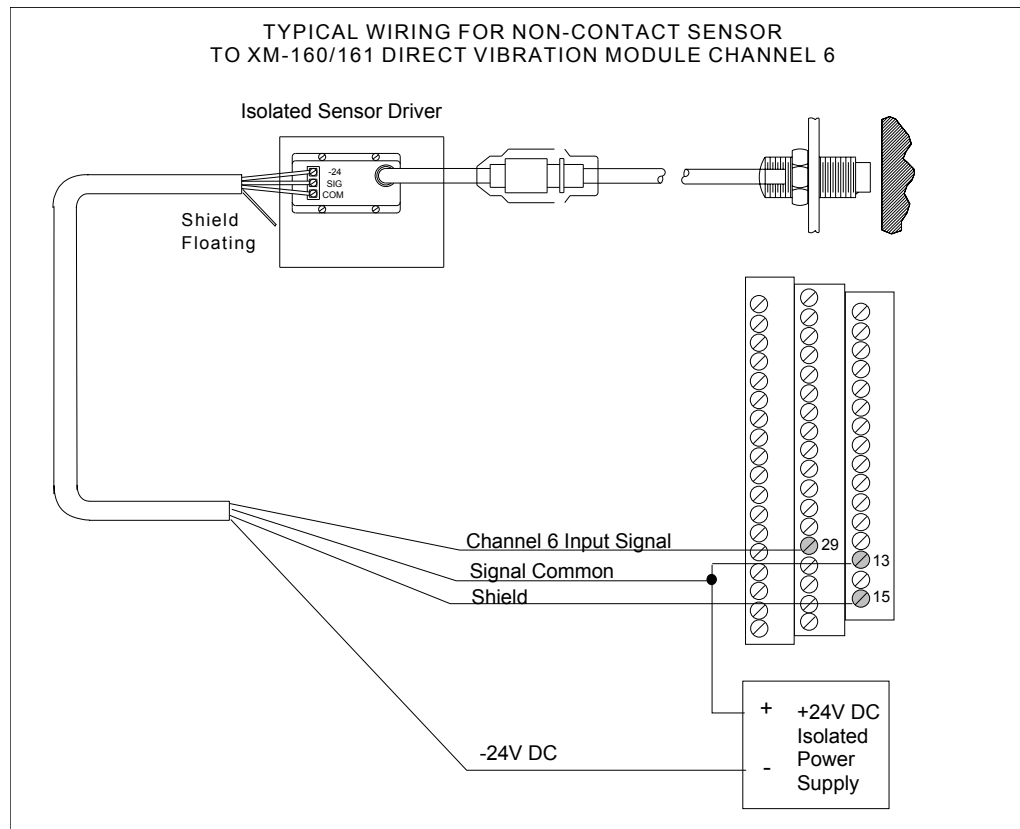**Figure 2.31 Non-Contact Sensor to XM-160/161 Channel 6 Wiring**

### Connecting a Passive Transducer

The figures below show the wiring of a passive transducer, such as a velocity sensor, to the terminal base unit.


**ATTENTION**

You may ground the cable shield at either end of the cable. Do not ground the shield at both ends. Recommended practice is to ground the cable shield at the terminal base and not at the transducer. Any convenient Chassis terminal may be used (see Terminal Block Assignments on page 17).


**IMPORTANT**

The module does not power the sensor. It measures only the input voltage.

**Figure 2.32 Velocity Sensor to Channel 1 Wiring**

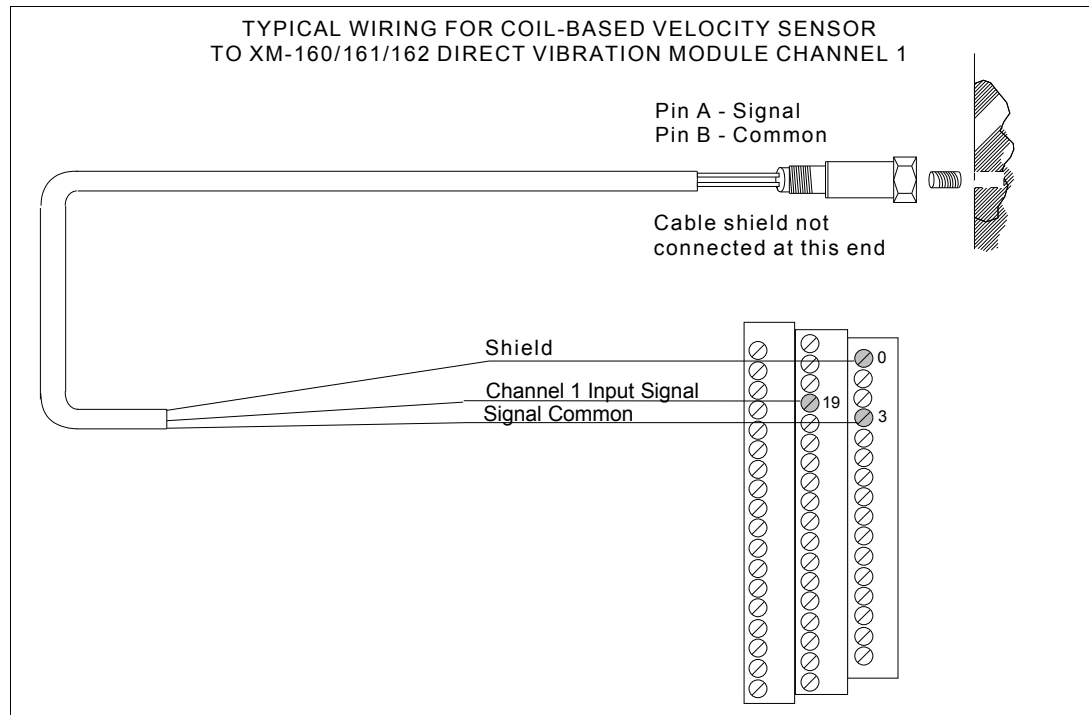


**Figure 2.33 Velocity Sensor to Channel 2 Wiring**

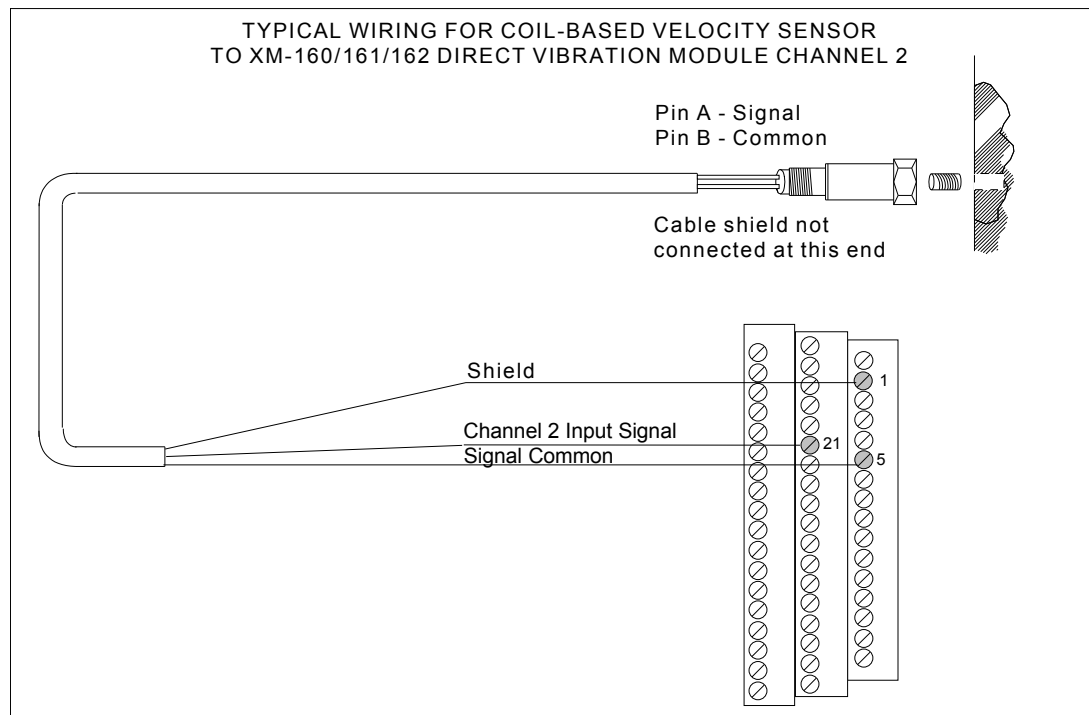





**Figure 2.34 Velocity Sensor to Channel 3 Wiring**

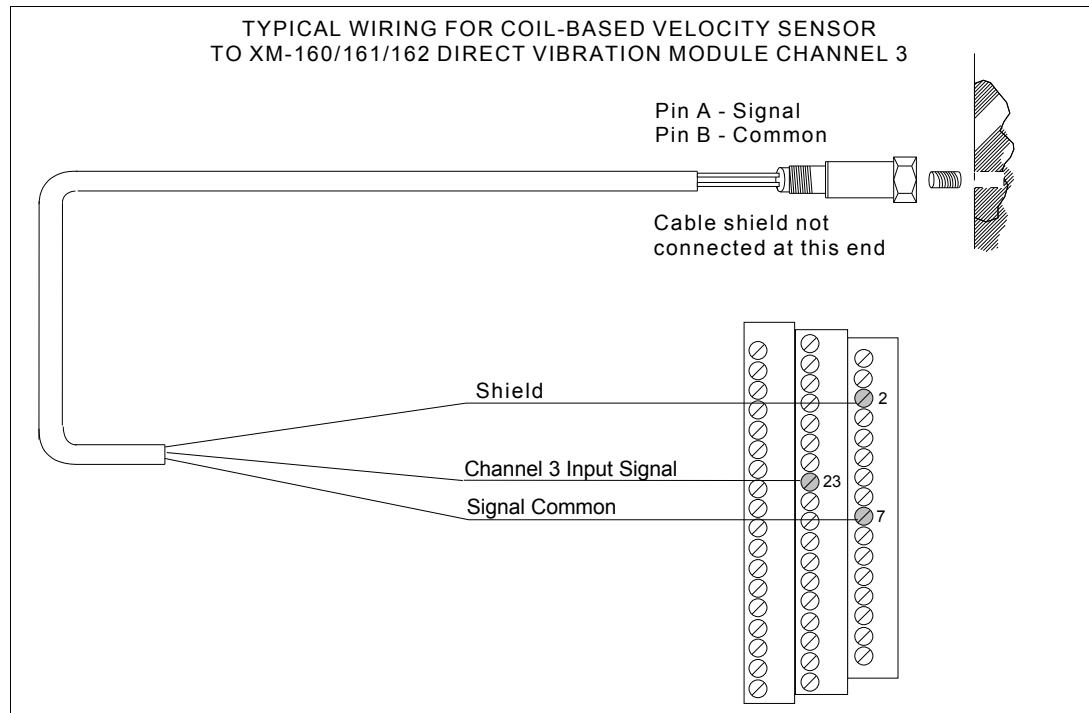


**Figure 2.35 Velocity Sensor to Channel 4 Wiring**

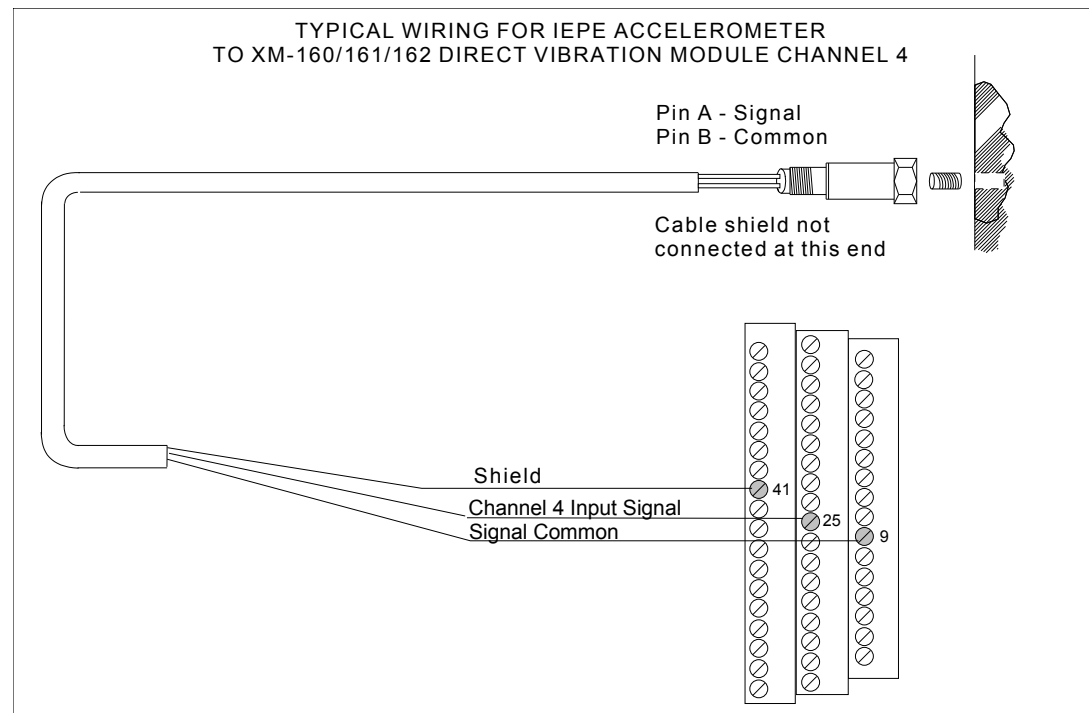

**Figure 2.36 Velocity Sensor to Channel 5 Wiring**

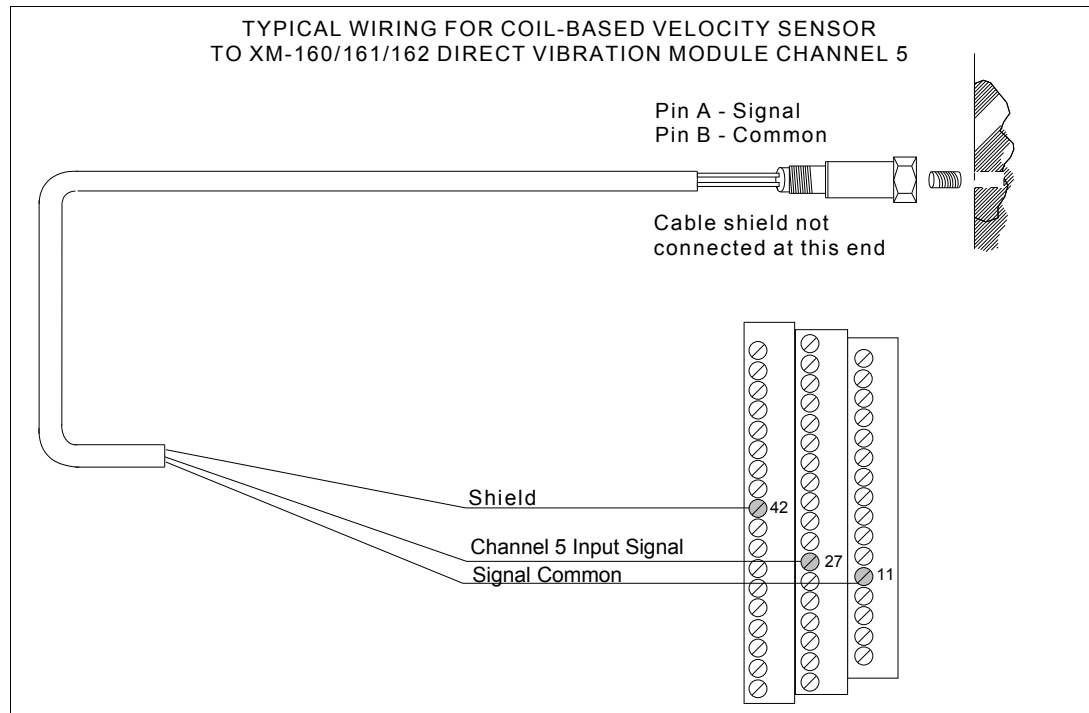

**Figure 2.37 Velocity Sensor to Channel 6 Wiring**

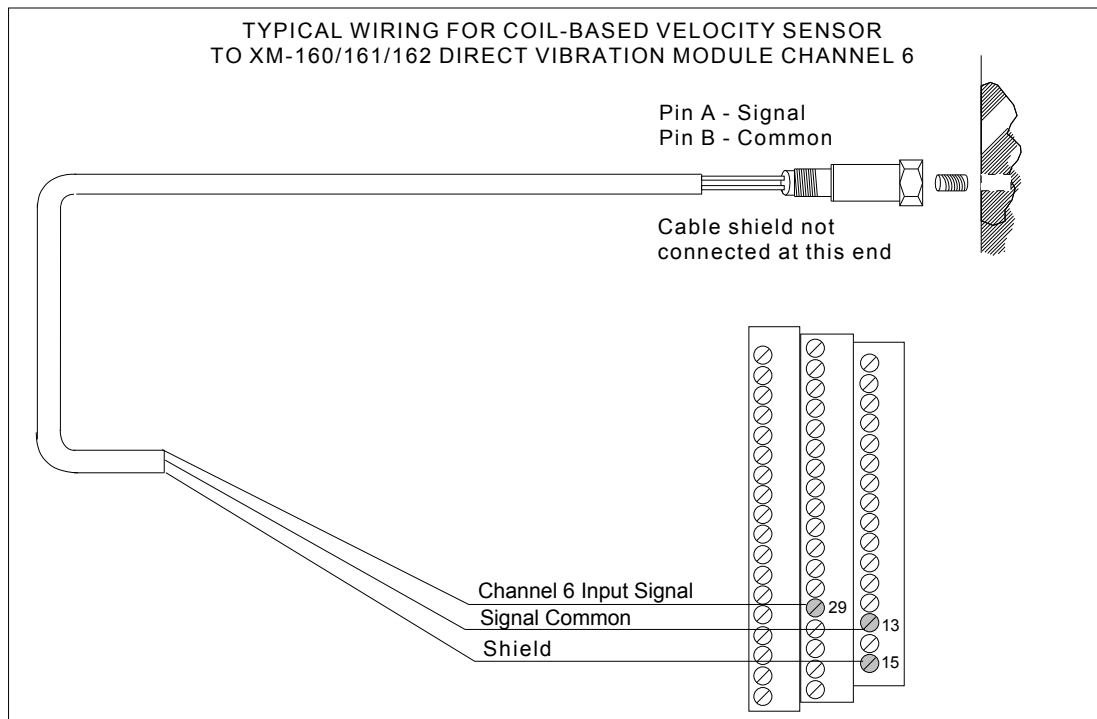

### Connecting a Powered Sensor


The figures below show the wiring of a powered sensor, such as the Model 580 Vibration Pickup, to the terminal base unit.

**ATTENTION**




You may ground the cable shield at either end of the cable. Do not ground the shield at both ends. Recommended practice is to ground the cable shield at the terminal base and not at the transducer. Any convenient Chassis terminal may be used (see Terminal Block Assignments on page 17).


**Figure 2.38 Powered Sensor to Channel 1 Wiring**

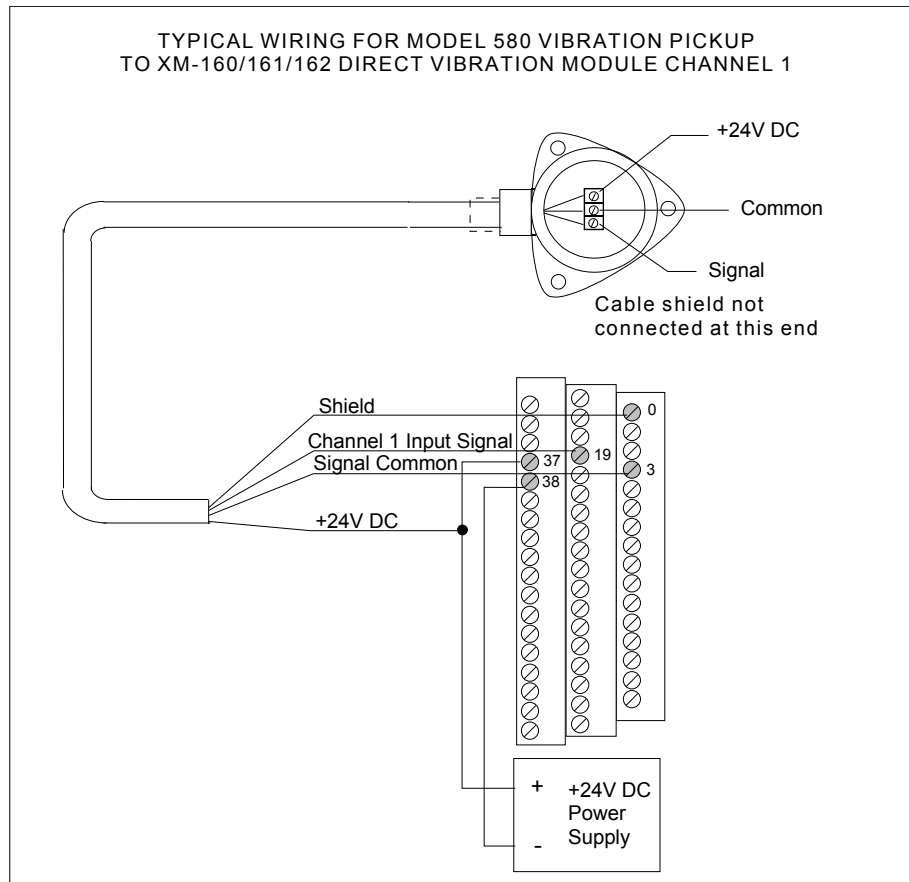


**Figure 2.39 Powered Sensor to Channel 2 Wiring**

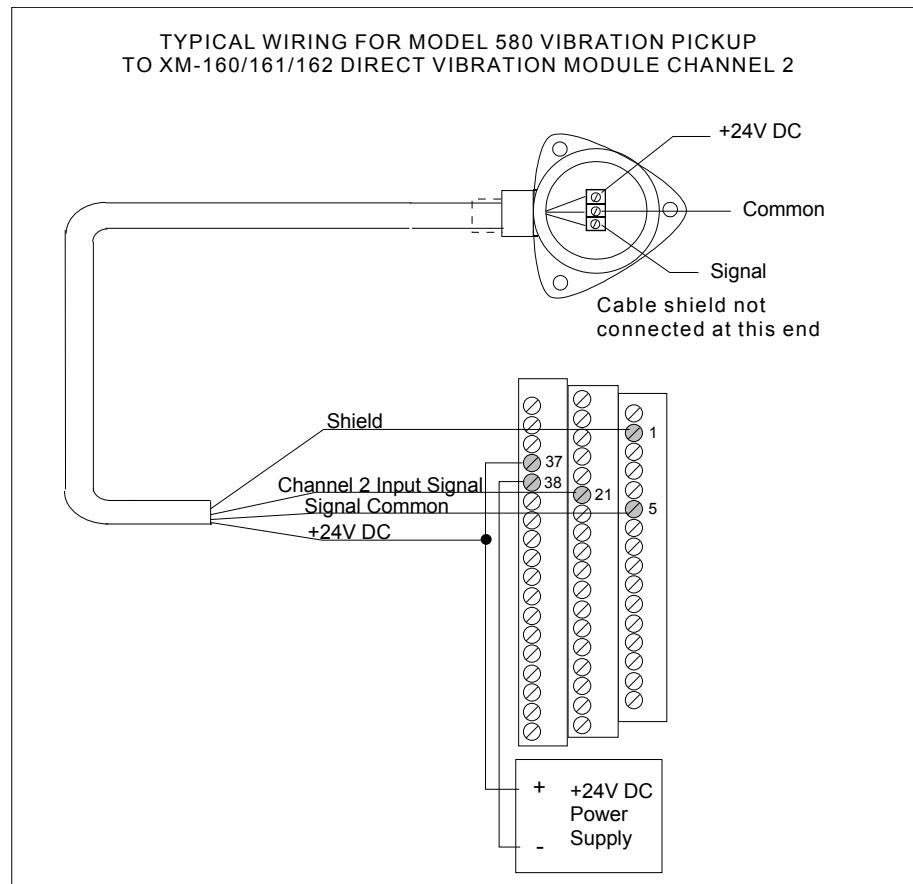


**Figure 2.40 Powered Sensor to Channel 3 Wiring**

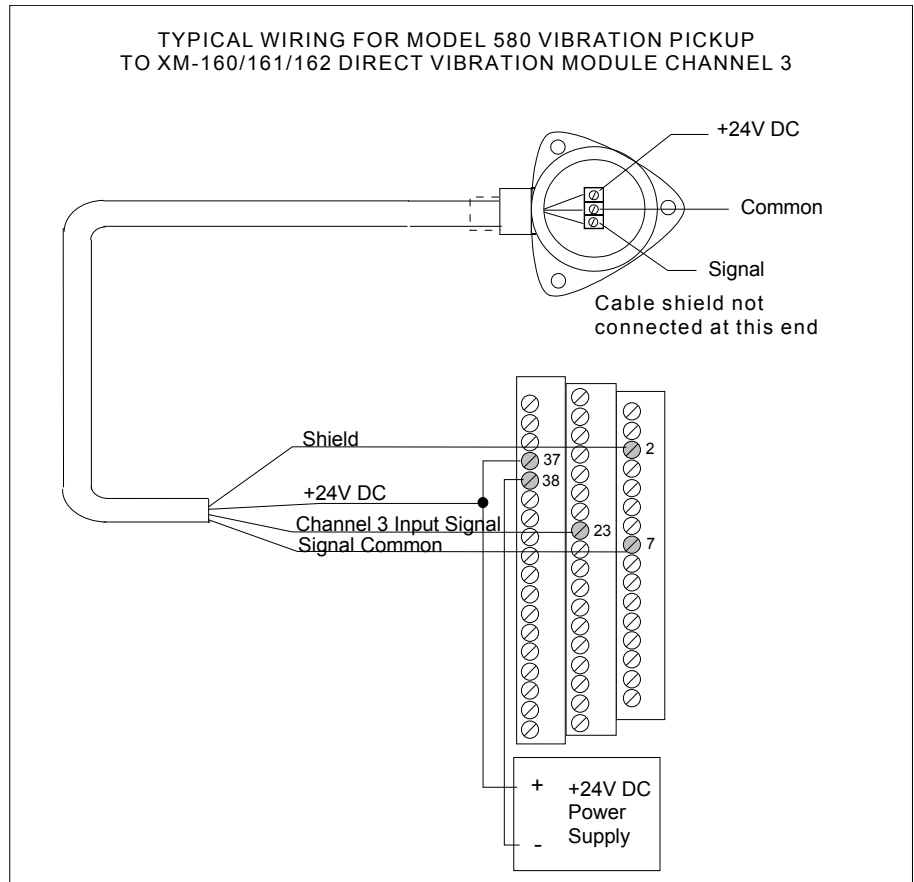


**Figure 2.41 Powered Sensor to Channel 4 Wiring**

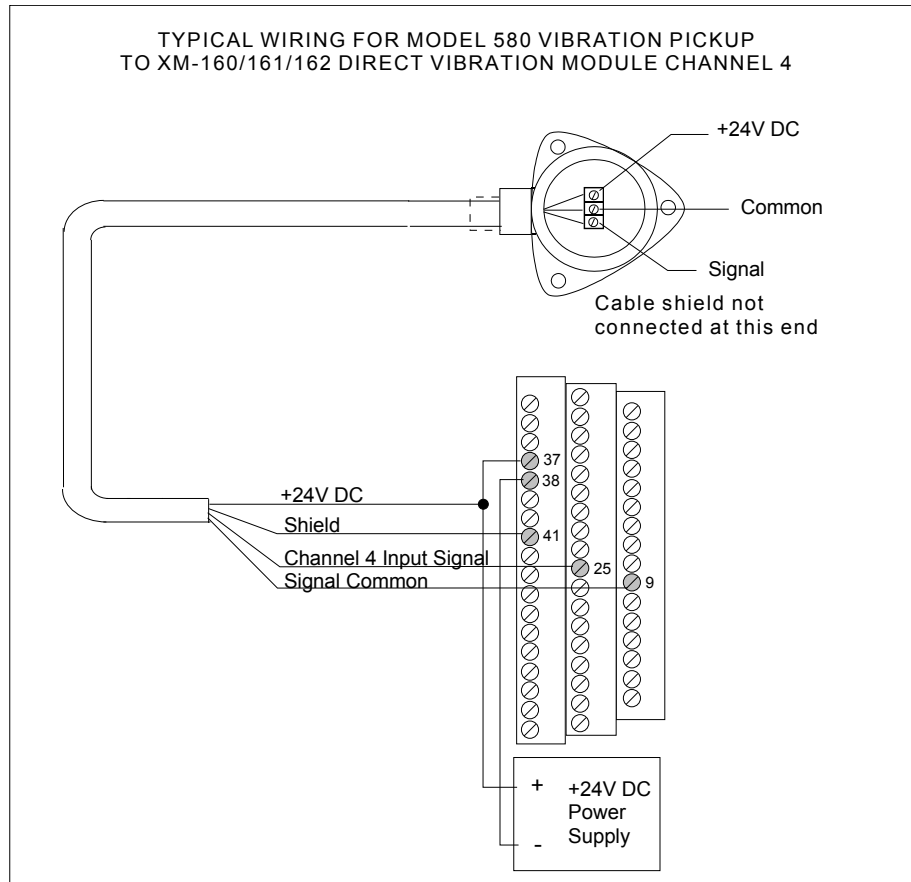

**Figure 2.42 Powered Sensor to Channel 5 Wiring**

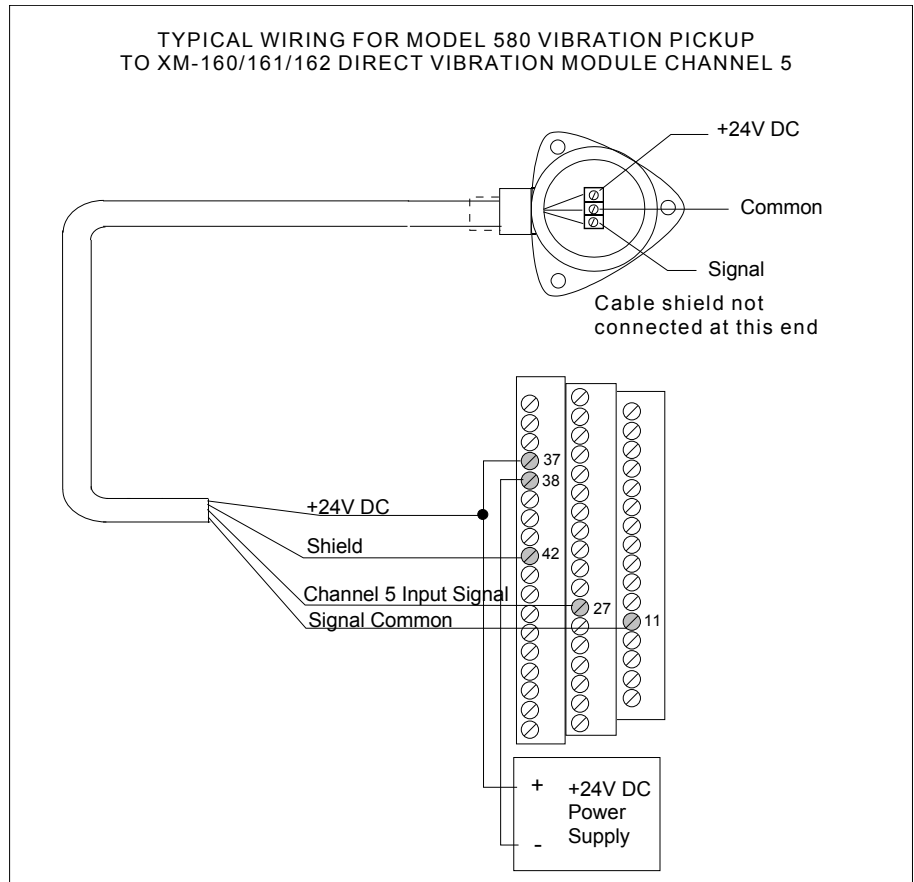

**Figure 2.43 Powered Sensor to Channel 6 Wiring**

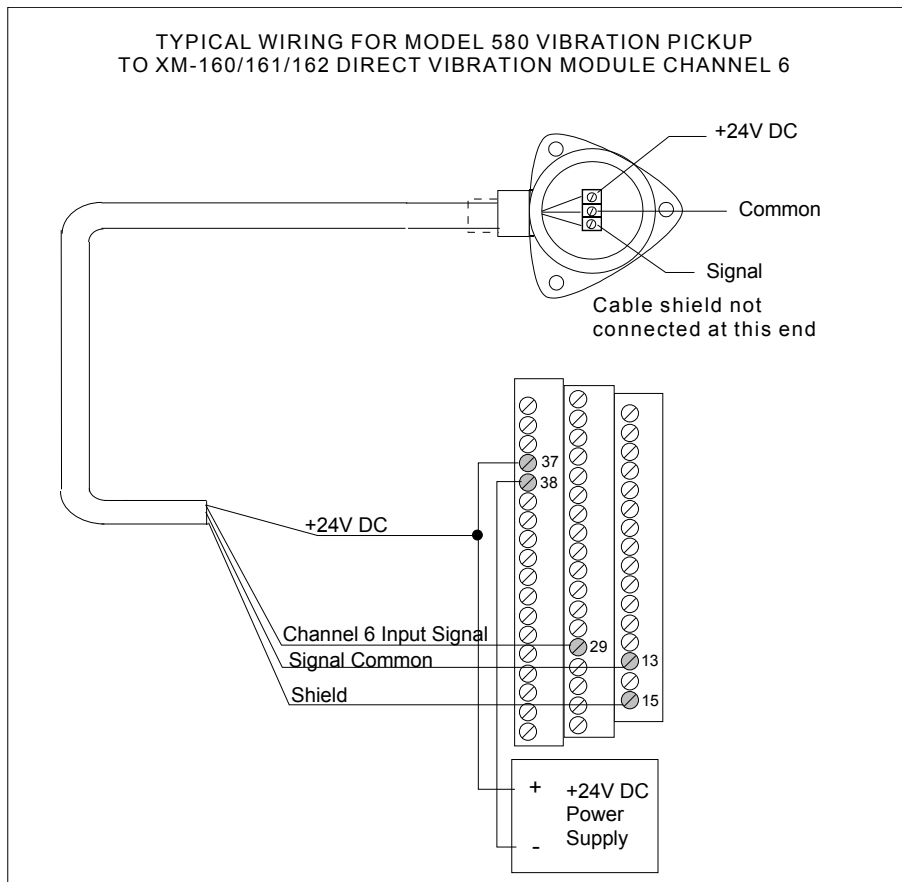



### Connecting an IEPE Accelerometer and Non-Contact Sensor

Figure 2.44 shows the wiring of an IEPE accelerometer and a non-contact sensor to the XM-162 terminal base unit.

---

**IMPORTANT**

The IEPE Power in the XM-160/161/162 module is configurable in channel pairs: Channels 1 and 2, Channels 3 and 4, and Channels 5 and 6. When you have different transducer types, such as an IEPE accelerometer and a non-contact sensor, the non-IEPE powered transducers cannot be in the channel-pair with the IEPE transducer.

For example, when you are connecting a single IEPE accelerometer and a single non-contact sensor to the XM-160/161/162, wire the accelerometer to channel 1 and enable the **IEPE Power Channels 1 and 2** parameter. Wire the non-contact sensor to channel 3 and disable the **IEPE Power Channels 3 and 4** parameter.

Refer to IEPE Buffer Power and Signal Detection Parameters on page 58 for more information on the IEPE Power parameters.

---

---

**ATTENTION**

You may ground the cable shield at either end of the cable. Do not ground the shield at both ends. Recommended practice is to ground the cable shield at the terminal base and not at the transducer. Any convenient Chassis terminal may be used (see Terminal Block Assignments on page 17).

---


---

**IMPORTANT**

The XM-162 module provides an internal DC power supply for powering a standard -24V non-contact eddy current probe driver. The XM-160 and XM-161 modules require a dedicated -24V dc power supply or an isolated +24V dc power supply wired in reverse to power a non-contact eddy current probe driver. Refer to Connecting a Non-Contact Sensor to the XM-160 and 161 on page 33 for details.

---


**Figure 2.44 IEPE Accelerometer and Non-Contact Sensor Wiring**

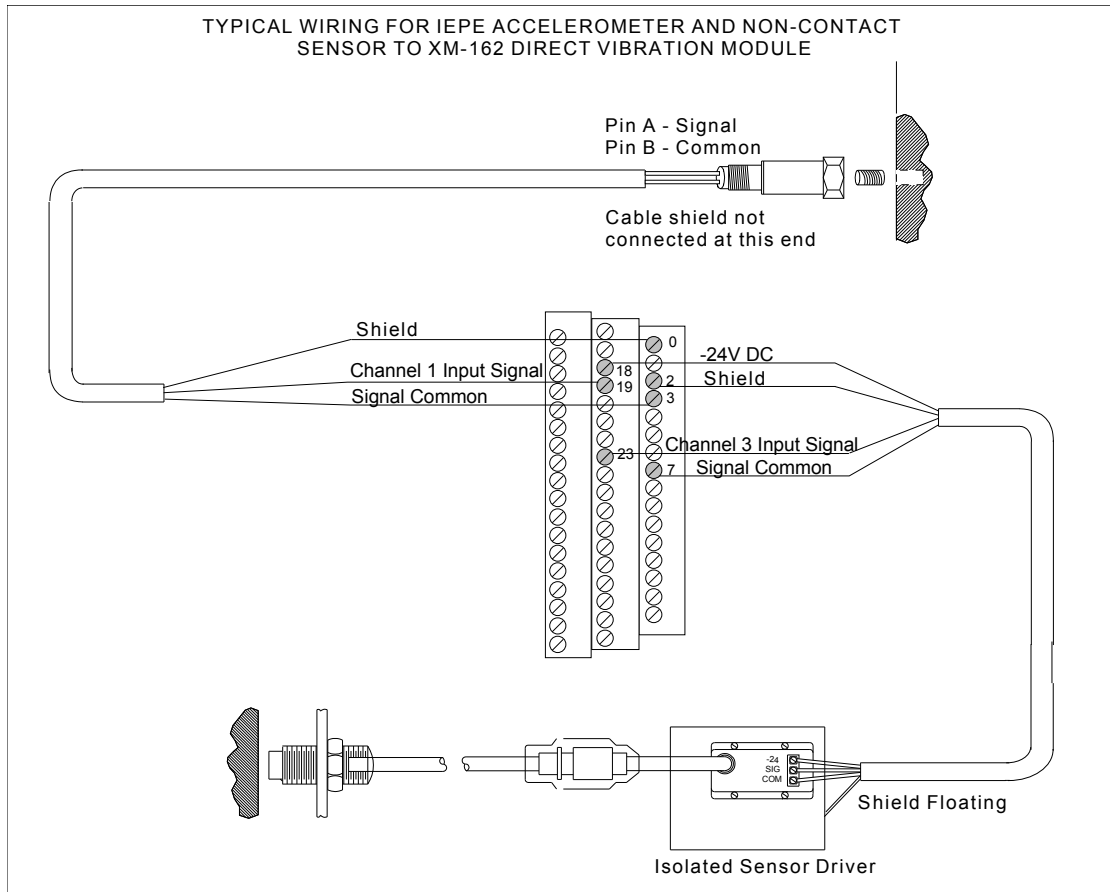

## PC Serial Port Connection

The XM-160, XM-161, and XM-162 include a serial connection that allows you to connect a PC to it and configure the module's parameters. The connection is through a mini-connector that is located on top of the module, as shown in Figure 2.45.

**Figure 2.45 Mini-Connector**

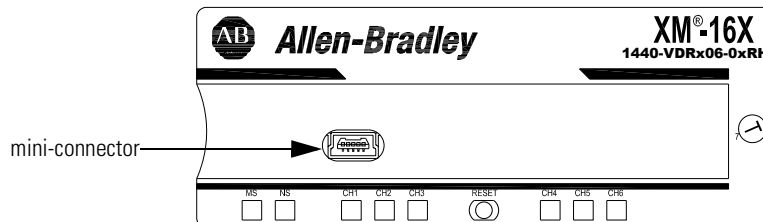

A special cable (Cat. No. 1440-SCDB9FXM2) is required for this serial connection. The connector that inserts into the PC is a DB-9 female connector, and the connector that inserts into the module is a USB Mini-B male connector.

**WARNING**

If you connect or disconnect the serial cable with power applied to the module or the serial device on the other end of the cable, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

**IMPORTANT**

If 24V Common is not referenced to earth ground, we recommend you use an RS-232 isolator, such as Phoenix PSM-ME-RS232/RS232-P (Cat. No. 1440-ISO-232-24), to protect both the XM module and the computer.

## DeviceNet Connection

The Direct Vibration modules include a DeviceNet™ connection that allows the modules to communicate directly with a programmable controller, DCS, or another XM module.

DeviceNet is an open, global, industry-standard communications network designed to provide an interface through a single cable from a programmable controller to a smart device such as the XM-160, XM-161, or XM-162. As multiple XM modules are interconnected, DeviceNet also serves as the communication bus and protocol that efficiently transfers data between the XM modules.

Connect the DeviceNet cable to the terminal base unit as shown.

Connect	To	Terminal Base Unit
Red Wire	DNet V+	47 (Optional-see note)
White Wire	CAN High	44
Bare Wire	Shield (Chassis)	46
Blue Wire	CAN Low	45
Black Wire	DNet V-	48

**IMPORTANT**

The DeviceNet power circuit through the XM module interconnect, which is rated at only 300 mA, is not intended or designed to power DeviceNet loads. Doing so could damage the module or terminal base.

To preclude this possibility, even unintentionally, it is recommended that DeviceNet V+ be left unconnected.

---

**ATTENTION**



You must ground the DeviceNet shield at only one location. Connecting the DeviceNet shield to terminal 46 will ground the DeviceNet shield at the XM module. If you intend to terminate the shield elsewhere, do not connect the shield to terminal 46.

---

**ATTENTION**



The DeviceNet network must also be referenced to earth at only one location. Connect DNet V- to earth or chassis at one of the XM modules.

---

**ATTENTION**



The DNet V+ and DNet V- terminals are inputs to the XM module. Do not attempt to pass DeviceNet power through the XM terminal base to other non-XM equipment by connecting to these terminals. Failure to comply may result in damage to the XM terminal base and/or other equipment.

---

**IMPORTANT**

Terminate the DeviceNet network and adhere to the requirements and instructions in the ODVA Planning and Installation Manual - DeviceNet Cable System, which is available on the ODVA web site (<http://www.odva.org>).

---

The device is shipped from the factory with the network node address (MAC ID) set to 63. The network node address is software settable. You can use the XM Serial Configuration Utility or RSNetWorx for DeviceNet (Version 3.0 or later) to set the network node address. Refer to the appropriate documentation for details.

---

**IMPORTANT**

The baud rate for the XM-160, XM-161, and XM-162 is set by way of “baud detection” (Autobaud) at power-up.

---

## Mounting the Module

The Direct Vibration modules mount on the XM-947 terminal base unit, Cat. No. 1440-TB-H. You should mount the module after you have connected the wiring on the terminal base unit.

### ATTENTION



The Direct Vibration modules are compatible only with the XM-947 terminal base unit. The keyswitch on the terminal base unit should be at position 7 for the modules.

**Do not attempt to install the XM-160, XM-161, and XM-162 modules on other terminal base units.**

**Do not change the position of the keyswitch after wiring the terminal base.**

### ATTENTION



This module is designed so you can **remove and insert it under power**. However, when you remove or insert the module with power applied, I/O attached to the module can change states due to its input/output signal changing conditions. Take special care when using this feature.

### WARNING




When you insert or remove the module while power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

### IMPORTANT

Install the overlay slide label to protect serial connector and electronics when the serial port is not in use.

1. Make certain the keyswitch (A) on the terminal base unit (C) is at position 7 as required for the XM-160, XM-161 and XM-162 modules.

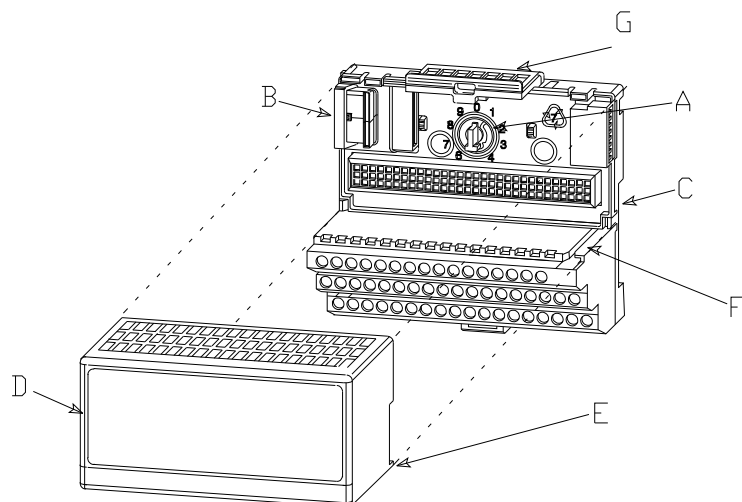


2. Make certain the side connector (B) is pushed all the way to the left. **You cannot install the module unless the connector is fully extended.**
3. Make sure that the pins on the bottom of the module are straight so they will align properly with the connector in the terminal base unit.
4. Position the module (D) with its alignment bar (E) aligned with the groove (F) on the terminal base.
5. Press firmly and evenly to seat the module in the terminal base unit. The module is seated when the latching mechanism (G) is locked into the module.
6. Repeat the above steps to install the next module in its terminal base.

## Module Indicators

Each Direct Vibration module has eight LED indicators, which include a module status (MS) indicator, a network status (NS) indicator, and a status indicator for each channel (CH1 to CH6). The LED indicators are located on top of the module.

**Figure 2.46 LED Indicators**

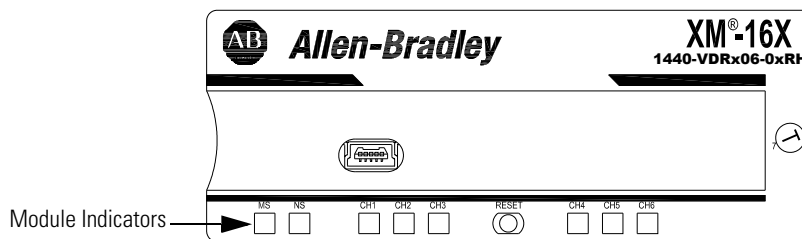

The following tables describe the states of the LED status indicators.

### Module Status (MS) Indicator

Color	State	Description
No color	Off	No power applied to the module.
Green	Flashing Red	Module performing power-up self test.
	Flashing	Module operating in Program Mode <sup>1</sup> .
	Solid	Module operating in Run Mode <sup>2</sup> .
Red	Flashing	<ul style="list-style-type: none"> <li>• Application firmware is invalid or not loaded. Download firmware to the module.</li> <li>• Firmware download is currently in progress.</li> <li>• The module power voltage is incorrect.</li> </ul>
	Solid	An unrecoverable fault has occurred. The module may need to be repaired or replaced.

- 1 Program Mode - Typically this occurs when the module configuration settings are being updated with the XM Serial Configuration Utility. In Program Mode, the module does not perform its usual functions. The signal processing/measurement process is stopped, and the status of the alarms is set to the disarm state to prevent a false alert or danger status.
- 2 Run Mode - In Run Mode, the module collects measurement data and monitors each measurement device.

### Network Status (NS) Indicator

Color	State	Description
No color	Off	Module is not online. <ul style="list-style-type: none"> <li>• Module is autobauding.</li> <li>• No power is applied to the module, look at Module Status LED.</li> </ul>
Green	Flashing	Module is online (DeviceNet) but no connections are currently established. <sup>1</sup>
	Solid	Module is online with connections currently established.
Red	Flashing	One or more I/O connections are in the timed-out state.
	Solid	Failed communications (duplicate MAC ID or bus-off).

<sup>1</sup> Normal condition when the module is not a slave to an XM-440, PLC, or other master device.

### Channel Status Indicator (6 in all)

Color	State	Description
No Color	Off	<ul style="list-style-type: none"> <li>• Normal operation within alarm limits on the channel.</li> <li>• No power applied to the module, look at Module Status LED.</li> </ul>
Yellow	Solid	An alert level alarm condition exists on the channel (and no transducer fault or danger level alarm condition exists).
Red	Solid	A danger level alarm condition exists on the channel (and no transducer fault condition exists).
	Flashing	A transducer fault condition exists on the channel.

## Basic Operations

### Powering Up the Module

The Direct Vibration modules perform a self-test at power-up. The self-test includes an LED test and a device test. During the LED test, the indicators will be turned on independently and in sequence for approximately 0.25 seconds.

The device test occurs after the LED test. The Module Status (MS) indicator is used to indicate the status of the device self-test.


MS Indicator State	Description
Flashing Red and Green	Device self test is in progress.
Solid Green or Flashing Green	Device self test completed successfully, and the firmware is valid and running.
Flashing Red	<ul style="list-style-type: none"> <li>• Device self test completed, the hardware is OK, but the firmware is invalid.</li> <li>• Firmware download is in progress.</li> <li>• Module power voltage is incorrect.</li> </ul>
Solid Red	Unrecoverable fault, hardware failure, or Boot Loader program may be corrupted.

Refer to Module Indicators on page 54 for more information about the LED indicators.

### Manually Resetting Relays

The Direct Vibration modules have an external reset switch located on top of the module, as shown in Figure 2.47.

Figure 2.47 Reset Switch

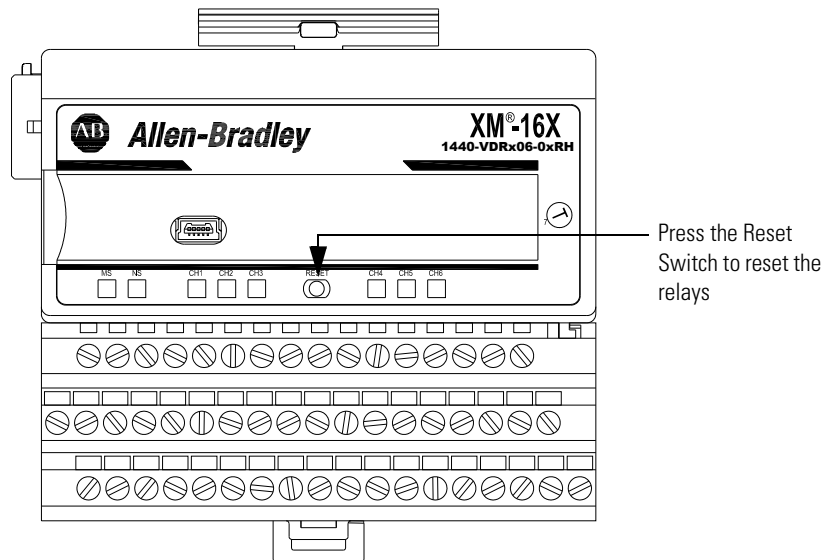

The switch can be used to reset all latched relays in the Expansion Relay module when it is connected to the XM-160, XM-161, or XM-162.

**IMPORTANT** The Reset switch resets the relays only if the input is no longer in alarm or the condition that caused the alarm is no longer present.



---

## Configuration Parameters

This chapter provides a complete listing and description of the XM-160, XM161, and XM-162 parameters. The parameters can be viewed and edited using the XM Serial Configuration Utility software and a personal computer. If the module is installed on a DeviceNet network, configuring can also be performed using a network configuration tool such as RSNetWorx (Version 3.0 or later). Refer to your configuration tool documentation for instructions on configuring a device.

<b>For information about</b>	<b>See page</b>
IEPE Buffer Power and Signal Detection Parameters	58
Channel Transducer Parameters	60
Channel Signal Processing Parameters	62
Channel Overall Measurement Parameter	63
Alarm Parameters	64
Relay Parameters	66
4-20mA Output Parameters (XM-161)	70
Triggered Trend	71
I/O Data Parameters	73
Data Parameters	74
Device Mode Parameters	76

---

**IMPORTANT**

The appearance and procedure to configure the parameters may differ in different software.

---

## IEPE Buffer Power and Signal Detection Parameters

Use these parameters to configure the IEPE and buffer power options and to determine the measurement performed on the input signal to produce the overall value.

### IEPE Buffer Power and Signal Detection Parameters

Parameter Name		Description	Values/Comments	
<b>XM Configuration Utility</b>	<b>EDS File</b>	Controls whether to provide standard accelerometer (IEPE) power to the transducer. The IEPE Power is configurable in channel pairs: Channels 1 and 2, Channels 3 and 4, and Channels 5 and 6.  <b>Important:</b> When mixing transducer types, such as IEPE accelerometers and non-contact sensors, non-IEPE powered transducers cannot be in a channel-pair with IEPE transducers. For example, if you plan to use a single accelerometer and a single non-contact sensor, wire the accelerometer to channel 1 and enable <b>IEPE Power Channels 1 and 2</b> . Wire the non-contact sensor to channel 3 and disable <b>IEPE Power Channels 3 and 4</b> . See page 49 for wiring details.	<b>XM Configuration Utility</b>	<b>EDS File</b>
<b>Enable IEPE Power</b>	<b>IEPE Power</b>		Check to Enable	Enabled
			Clear to Disable	Disabled
<b>Signal Detection</b>		The measurement (or calculation) performed on the input signal to produce the <b>Overall Value</b> . See Data Parameters on page 74.  <ul style="list-style-type: none"> <li>• <b>RMS</b> - The Overall Value is the root mean squared (RMS) signal level of the input signal.</li> <li>• <b>Calculated Peak</b> - The Overall Value is the measured RMS value multiplied by the square root of two (1.4142).</li> <li>• <b>Calculated Peak-to-Peak</b> - The Overall Value is the measured RMS value multiplied by two times the square root of two (2.8284).</li> <li>• <b>True Peak</b> - The Overall Value is the output of a peak detector applied to the input signal.</li> <li>• <b>True Peak-to-Peak</b> - The Overall Value is the output of a peak-to-peak detector applied to the input signal.</li> </ul>	Options: RMS Calculated Peak Calculated Peak-to-Peak True Peak True Peak-to-Peak  <b>Note:</b> This parameter setting applies to all six channels.	

**IEPE Buffer Power and Signal Detection Parameters**

Parameter Name		Description	Values/Comments	
<b>XM Configuration Utility</b>	<b>EDS File</b>	<p>Boosts the supply voltage to IEPE power when the module power supply voltage drops below 22V dc.</p> <p>This parameter is intended for battery-powered applications that experience low voltage situations (down to 18V dc) with slow battery drain, and high voltage situations (up to 32V dc) as the battery charges.</p> <p>Enable the IEPE Voltage Boost only when using IEPE powered transducers with a module powered from a 24V battery system. Standard applications that use an AC-powered 24V power supply should disable this parameter.</p>	<b>XM Configuration Utility</b>	<b>EDS File</b>
<b>Enable IEPE Voltage Boost</b>	<b>IEPE Voltage Boost</b>		<p>Check to Enable</p> <p>Clear to Disable</p> <p><b>Important:</b> When IEPE Voltage Boost is enabled, <b>Auto Buffer Power</b> is automatically set to "Automatic," and <b>Buffer Power Type</b> is automatically set to "Positive." This means negative-voltage transducers (e.g. non-contact sensors) will not be correctly represented at the buffered outputs. Therefore, in applications where the module is powered by a 24V battery system and uses non-contact sensors, this parameter should be disabled.</p> <p><b>Note:</b> This parameter setting applies to all six channels.</p>	Automatic
<b>XM Configuration Utility</b>	<b>EDS File</b>	<p>Determines whether the buffer power is set automatically by the XM module or manually by the user.</p> <p>The Buffer Power and <b>Buffer Power Type</b> settings determine the internal power supply voltage provided to the buffered output circuits. The buffered output circuits are not capable of swinging the entire -24V dc to +24V dc transducer input range. These settings determine whether the outputs swing the positive range (nominally +0.6V dc to +22.5V dc) or the negative range (-22V dc to +3V dc).</p> <p>When Buffer Power is set to "Automatic," the module senses the DC bias voltage of each of the six channels on power-up, and sets the power to positive voltage or negative voltage depending on the majority of the transducers. If there is an equal number of positive and negative transducers (for example, three positive and three negative), the setting defaults to negative.</p> <p>In applications where you want to use the buffered outputs of a transducer that is in the minority, set Buffer Power to "Manual" and configure the <b>Buffer Power Type</b> setting. Note that buffer power settings that do not correctly match input transducers will not cause any damage to the transducer or module. These buffers will simply saturate and no useful signal will be obtained at their respective outputs.</p>	<b>XM Configuration Utility</b>	<b>EDS File</b>
<b>Auto Buffer Power</b>	<b>Buffer Power Mode</b>		<p>Check means Automatic</p> <p>Clear means Manual</p> <p><b>Important:</b> This parameter is automatically set to "Automatic" when <b>IEPE Voltage Boost</b> is enabled. You must disable <b>IEPE Voltage Boost</b> to change the Auto Buffer Power setting.</p> <p><b>Note:</b> The Buffer Power settings take approximately five seconds to activate after downloading the configuration or upon power-up. This delay allows the DC Bias measurement to settle.</p> <p><b>Note:</b> This parameter setting applies to all six channels.</p>	Automatic

**IEPE Buffer Power and Signal Detection Parameters**

Parameter Name		Description	Values/Comments
<b>XM Configuration Utility</b>	<b>EDS File</b>	Manual setting of the buffer power circuits. Determines whether the buffered output circuits swing the positive range (nominally +0.6V dc to +22.5V dc) or the negative range (-22V dc to +3V dc). See <b>Auto Buffer Power</b> for more details.	Options: Positive Negative  <b>Note:</b> In the XM Configuration Utility, this parameter is available only when <b>Auto Buffer Power</b> and <b>IEPE Voltage Boost</b> are disabled.  <b>Note:</b> This parameter setting applies to all six channels.
<b>Buffer Power Type</b>	<b>Buff Pwr Manual Setting</b>		
<b>Buffer Pwr Status (EDS File only)</b>		Shows the actual buffer power setting.  <b>Important:</b> If you change any of the Buffer settings and download to the module, the Buffer Pwr Status will not change immediately. Wait approximately five seconds and upload the configuration from the module to correctly show the setting.	Options: Positive Negative  <b>Note:</b> In the XM Configuration Utility, the <b>Buffer Power Type</b> parameter shows the actual buffer power setting.

**Channel Transducer Parameters**

The channel transducer parameters define the characteristics of the transducers you will be using with the module. Use the parameters to configure the transducer sensitivity and operating range. There are six instances of the channel transducer parameters, one for each channel.

**TIP**

The Channel LED will flash red when a transducer fault condition exists on the channel even if you are not using the channel. You can keep the Channel LED from flashing red on unused channels by setting the unused channel's **Fault High** and **Fault Low** to greater than zero and less than zero, respectively. For example, set **Fault High** to +40 volts and set **Fault Low** to -40 volts.

**Channel Transducer Parameters**

Parameter Name	Description	Values/Comments
<b>Channel Name (XM Serial Configuration Utility only)</b>	A descriptive name to help identify the channel in the XM Serial Configuration Utility.	Maximum 18 characters
<b>Sensitivity</b>	The sensitivity of the transducer in millivolts per <b>Eng. Unit</b> .	The sensitivity value is included with the transducer's documentation or it may be imprinted on the side of the transducer.

## Channel Transducer Parameters

Parameter Name	Description	Values/Comments	
<b>Eng. Units</b>	Defines the native units of the transducer. Your choice controls the list of possible selections available in the <b>Output Data Units</b> parameter. It also affects other module parameters.	<b>Eng. Units Options</b>	<b>Quantity of Measure</b>
		g (gravity)	Acceleration
		ips (inch per second)	Velocity
		mm/s (millimeters per second)	
		mils (1/1000 inch)	Displacement
		um (micro meter)	
		Volts	Voltage
		Pa (pascals)	pressure
		psi (pound-force per square inch)	
<b>Fault Low</b>	The minimum, or most negative, expected DC voltage from the transducer.	Volts	
<b>Fault High</b>	The maximum expected DC bias voltage from the transducer.	<b>Note:</b> A voltage reading outside this range constitutes a transducer fault.	
<b>DC Bias Time Constant</b>	The time constant used for exponential averaging (low pass filtering) of the transducer DC bias measurement. The corner frequency for the low pass filter is $1 / (2\pi \times \text{DC Bias Time Constant})$ . The greater the value entered, the longer the settling time of the measured value to a change in the input signal. See example table below.	Seconds	
		<b>Time Constant (seconds)</b>	<b>-3dB Frequency (Hz)</b>
			<b>Settling (seconds)</b>
		1	0.159
		2	0.080
		3	0.053
		4	0.040
		5	0.032
		6	0.027
		7	0.023
		8	0.020
		9	0.018
		10	0.016

## Channel Signal Processing Parameters

The channel signal processing parameters determine the signal processing that will be performed on the input signals. Use these parameters to select the output data units, full scale settings, and the low cutoff frequency.

There are six instances of the signal processing parameters, one for each channel.

### Channel Signal Processing Parameters

Parameter Name	Description	Values/Comments																			
<b>Output Data Unit</b>	The data units of the measured values.	<p>The available options depend on the <b>Eng. Units</b> selection. See page 60.</p> <table border="1"> <thead> <tr> <th>Eng. Units</th> <th>Output Data Unit Options</th> </tr> </thead> <tbody> <tr> <td rowspan="3">g</td> <td>g</td> </tr> <tr> <td>ips</td> </tr> <tr> <td>mm/sec</td> </tr> <tr> <td rowspan="4">ips or mm/sec</td> <td>ips</td> </tr> <tr> <td>mil</td> </tr> <tr> <td>mm/sec</td> </tr> <tr> <td>um</td> </tr> <tr> <td rowspan="2">mils or um</td> <td>mils</td> </tr> <tr> <td>um</td> </tr> <tr> <td>Volt</td> <td>volt</td> </tr> <tr> <td rowspan="2">Pa or psi</td> <td>Pa</td> </tr> <tr> <td>psi</td> </tr> </tbody> </table>	Eng. Units	Output Data Unit Options	g	g	ips	mm/sec	ips or mm/sec	ips	mil	mm/sec	um	mils or um	mils	um	Volt	volt	Pa or psi	Pa	psi
Eng. Units	Output Data Unit Options																				
g	g																				
	ips																				
	mm/sec																				
ips or mm/sec	ips																				
	mil																				
	mm/sec																				
	um																				
mils or um	mils																				
	um																				
Volt	volt																				
Pa or psi	Pa																				
	psi																				
<b>Full Scale</b>	<p>The maximum vibration level expected to be processed by the channel. This value is used to determine the analog hardware range (programmable gain settings).</p> <p>Setting the full scale to a greater value allows the channel to handle greater measurement levels without saturating or clipping. Setting the full scale value to a lesser value allows the measurement to have greater resolution.</p> <p>The full scale should be set to a value greater than the maximum expected vibration level and/or the value of the Danger alarm. Typical setting: 1.5 to 2 times greater.</p>	Same measurement unit as <b>Output Data Unit</b> selection for the specified channel.																			

### Channel Signal Processing Parameters

Parameter Name	Description	Values/Comments
<b>High Pass Filter</b>	Sets the high pass filter to apply to the measurements. The high pass filter is useful in removing low frequency signal components that would dominate the signal. The high pass filter attenuates all frequencies below a defined frequency. It allows, or passes, frequencies above the defined frequency.	Options: 3Hz 10Hz
<b>Low Pass Filter</b>	Sets the frequency above which the input signal will be significantly attenuated.	Options: 1000Hz 5000Hz
<b>Very Low HPF Frequency (EDS File only)</b>	Shows the corner frequency for the Very Low high pass filter option.	
<b>Low HPF Frequency (EDS File only)</b>	Shows the corner frequency for the Low high pass filter option.	
<b>Low LPF Frequency (EDS File only)</b>	Shows the corner frequency for the Low low pass filter option.	
<b>High LPF Frequency (EDS File only)</b>	Shows the corner frequency for the High low pass filter option.	

## Channel Overall Measurement Parameter

There are six instances of the overall measurement parameter, one for each channel. Use this parameter to configure the filtering performed for each overall measurement.

### Overall Measurement Parameter

Parameter Name	Description	Values/Comments										
<b>Overall Time Constant</b>	<p>For <b>RMS</b> measurements, the Overall Time Constant parameter sets the 3dB bandwidth (Hz) for the digital filtering used to calculate the <b>Overall Value</b>. The 3dB bandwidth is roughly equal to <math>1 / (2\pi \times \text{Overall Time Constant})</math>. The greater the Overall Time Constant, the slower the response of the measured Overall Value to change in the input signal.</p> <p>The lesser value of the Overall Time Constant will result in a noisier measurement with a fast response time. A greater value of the Overall Time Constant will result in a smoother, more accurate measurement with a slower response time. Response time is approximately 3X Overall Time Constant.</p> <p>For <b>True Peak</b> and <b>True Pk- Pk</b> measurements, the Overall Time Constant sets the decay rate of the peak detection meter. The greater the Overall Time Constant, the slower the Peak is decayed.</p>	<p>Enter a value greater than 0 (zero).</p> <p><b>Recommended Values:</b> The recommended values are appropriate for a typical 50/60Hz machine, and may need to be adjusted depending on the application.</p> <table border="1"> <thead> <tr> <th>High Pass Filter</th> <th>Overall Time Constant</th> </tr> </thead> <tbody> <tr> <td>3Hz, RMS</td> <td>1.0 sec</td> </tr> <tr> <td>3Hz, Pk</td> <td>2.0 sec</td> </tr> <tr> <td>10Hz, RMS</td> <td>0.5 sec</td> </tr> <tr> <td>10Hz, Pk</td> <td>1.0 sec</td> </tr> </tbody> </table>	High Pass Filter	Overall Time Constant	3Hz, RMS	1.0 sec	3Hz, Pk	2.0 sec	10Hz, RMS	0.5 sec	10Hz, Pk	1.0 sec
High Pass Filter	Overall Time Constant											
3Hz, RMS	1.0 sec											
3Hz, Pk	2.0 sec											
10Hz, RMS	0.5 sec											
10Hz, Pk	1.0 sec											

## Alarm Parameters

The Alarm parameters control the operation of the alarms (alert and danger level) and provide alarm status. The XM-160, XM-161, and XM-162 modules provide six alarms. The alarms are associated with the direct (overall) value measured from the respective channel (1 to 6). Use the parameters to configure the behavior of the alarm.

### Alarm Parameters

Parameter Name	Description	Values/Comments							
<b>Number (1-16) (XM Serial Configuration Utility only)</b>	Sets the alarm to be configured in the XM Serial Configuration Utility. There are six alarms in the XM-160/161/162. The alarms are associated with the direct (overall) value measured from the respective channel.	Select a number from 1 to 6.							
<b>Name (XM Serial Configuration Utility only)</b>	A descriptive name to identify the alarm in the XM Serial Configuration Utility.	Maximum 18 characters							
<b>Enable</b>	<p>Enable/disable the selected alarm.</p> <p><b>Note:</b> The <b>Alarm Status</b> is set to "Disarm" when the alarm is disabled.</p>	<table border="1"> <thead> <tr> <th>XM Configuration Utility</th> <th>EDS File</th> </tr> </thead> <tbody> <tr> <td>Check to Enable</td> <td>Enabled</td> </tr> <tr> <td>Clear to Disable</td> <td>Disabled</td> </tr> </tbody> </table>	XM Configuration Utility	EDS File	Check to Enable	Enabled	Clear to Disable	Disabled	
XM Configuration Utility	EDS File								
Check to Enable	Enabled								
Clear to Disable	Disabled								
<b>Condition</b>	<p>Controls when the alarm should trigger.</p> <ul style="list-style-type: none"> <li> <b>Greater than</b> - Triggers the alarm when the measurement value is greater than or equal to the <b>Alert</b> and <b>Danger Threshold</b> values.                      The Danger Threshold value must be greater than or equal to the Alert Threshold value for the trigger to occur.                 </li> <li> <b>Less than</b> - Triggers the alarm when the measurement value is less than or equal to the <b>Alert</b> and <b>Danger Threshold</b> values.                      The Danger Threshold value must be less than or equal to the Alert Threshold value for the trigger to occur.                 </li> <li> <b>Inside range</b> - Triggers the alarm when the measurement value is equal to or inside the range of the <b>Alert</b> and <b>Danger Threshold</b> values.                      The Danger Threshold (High) value must be less than or equal to the Alert Threshold (High) value AND the Danger Threshold (Low) value must be greater than or equal to the Alert Threshold (Low) value for the trigger to occur.                 </li> <li> <b>Outside range</b> - Triggers the alarm when the measurement value is equal to or outside the range of the <b>Alert</b> and <b>Danger Threshold</b> values.                      The Danger Threshold (High) value must be greater than or equal to the Alert Threshold (High) value, AND the Danger Threshold (Low) value must be less than or equal to the Alert Threshold (Low) value for the trigger to occur.                 </li> </ul>	Options: Greater Than Less Than Inside Range Outside Range							



## Alarm Parameters

Parameter Name	Description	Values/Comments
<b>Alert Threshold (High)</b>	The threshold value for the alert (alarm) condition. <b>Note:</b> This parameter is the greater threshold value when <b>Condition</b> is set to "Inside Range" or "Outside Range."	Same measurement unit as <b>Output Data Unit</b> selection for the specified channel.
<b>Danger Threshold (High)</b>	The threshold value for the danger (shutdown) condition. <b>Note:</b> This parameter is the greater threshold value when <b>Condition</b> is set to "Inside Range" or "Outside Range."	
<b>Alert Threshold (Low)</b>	The lesser threshold value for the alert (alarm) condition. <b>Note:</b> This parameter is not used when <b>Condition</b> is set to "Greater Than" or "Less Than."	
<b>Danger Threshold (Low)</b>	The lesser threshold value for the danger (shutdown) condition. <b>Note:</b> This parameter is not used when <b>Condition</b> is set to "Greater Than" or "Less Than."	
<b>Hysteresis</b>	The amount that the measured value must fall (below the threshold) before the alarm condition is cleared. For example, Alert Threshold = 120 and Hysteresis = 2. The alarm (alert) activates when the measured value is 120 and will not clear until the measured value is 118. <b>Note:</b> The Alert and Danger Thresholds use the same hysteresis value. <b>Note:</b> For the Outside Range condition, the hysteresis value must be less than <b>Alert Threshold (High) – Alert Threshold (Low)</b> .	

**Alarm Parameters**

Parameter Name	Description	Values/Comments
<b>Startup Period</b>	The length of time that the <b>Threshold Multiplier</b> is applied to the threshold. The startup period begins when the setpoint multiplier switch is reopened (push button disengaged or toggle switch flipped to off).	Enter a value from 0 to 1092 minutes, adjustable in increments of 0.1 minutes.
<b>Threshold Multiplier</b>	The action to take when the setpoint multiplier switch is closed (push button engaged or toggle switch flipped to on) and during the startup period once the switch is reopened. The module applies the multiplier to the alarm thresholds during this time to avoid false alarms at resonance frequencies.  <b>Note:</b> The multiplication may have the opposite of the intended effect under certain circumstances. For example, if the <b>Condition</b> is set to "Less Than" and the thresholds are positive, then multiplication of the threshold values increases the likelihood of the measured value being within the alarm range. Therefore, you may want to set <b>Threshold Multiplier</b> to zero to disable the alarm during the startup period.	Enter a floating point value in the range of 0 to 10.  Enter 0 (zero) to disable the alarm during the startup period.

**Relay Parameters**

The Relay parameters control the operation of the relays. The Direct Vibration modules do not have an on-board relay. The relays are added when an Expansion Relay (XM-441) module is connected to the Direct Vibration modules. The XM-160, XM-161, and XM-162 support two Expansion Relay modules for a total of eight relays. Use these parameters to configure which alarm(s) the relay is associated with, as well as the behavior of the relay.

**IMPORTANT**

A relay can be defined, regardless of whether or not it is physically present. A non-physical relay is a virtual relay. When a relay (physical or virtual) activates, the module sends a Change of State (COS) message to its master, which acts on the condition as necessary. An XM-440 Master Relay Module can activate its own relays in response to a relay (physical or virtual) activation at any of its slaves.

**Relay Parameters**

Parameter Name		Description	Options/Comments											
<b>Number (XM Serial Configuration Utility only)</b>		Sets the relay to be configured in the XM Serial Configuration Utility.	The relays are either relays on the Expansion Relay module when it is connected to the XM-160, XM-161, or XM-162 or virtual relays.  Virtual relays are non-physical relays. Use them when you want the effect of the relay (monitor alarms, activation delay, change status) but do not need an actual contact closure. For example, a PLC or controller monitoring the relay status.  <b>Note:</b> The <b>Relay Installed</b> parameter indicates whether a relay is a virtual relay or a physical relay on a module.											
<b>Name (XM Serial Configuration Utility only)</b>		A descriptive name to help identify the relay in the XM Serial Configuration Utility.	Maximum 18 characters											
<b>Enable</b>		Enable/disable the selected relay.  <b>Note:</b> The <b>Relay Current Status</b> is set to "Not Activated" when the relay is disabled. See page 74.	<table border="1"> <thead> <tr> <th>XM Configuration Utility</th> <th>EDS File</th> </tr> </thead> <tbody> <tr> <td>Check to Enable</td> <td>Enabled</td> </tr> <tr> <td>Clear to Disable</td> <td>Disabled</td> </tr> </tbody> </table>		XM Configuration Utility	EDS File	Check to Enable	Enabled	Clear to Disable	Disabled				
XM Configuration Utility	EDS File													
Check to Enable	Enabled													
Clear to Disable	Disabled													
<table border="1"> <thead> <tr> <th>XM Configuration Utility</th> <th>EDS File</th> </tr> </thead> <tbody> <tr> <td><b>Latching</b></td> <td><b>Latching Option</b></td> </tr> </tbody> </table>	XM Configuration Utility	EDS File	<b>Latching</b>	<b>Latching Option</b>	Controls whether the relay must be explicitly reset after the alarm subsides.		<table border="1"> <thead> <tr> <th>XM Configuration Utility</th> <th>EDS File</th> </tr> </thead> <tbody> <tr> <td>Check means latching (relay must be explicitly reset)</td> <td>Latching</td> </tr> <tr> <td>Clear means non-latching (relay is reset once the alarm condition has passed)</td> <td>Nonlatching</td> </tr> </tbody> </table>		XM Configuration Utility	EDS File	Check means latching (relay must be explicitly reset)	Latching	Clear means non-latching (relay is reset once the alarm condition has passed)	Nonlatching
XM Configuration Utility	EDS File													
<b>Latching</b>	<b>Latching Option</b>													
XM Configuration Utility	EDS File													
Check means latching (relay must be explicitly reset)	Latching													
Clear means non-latching (relay is reset once the alarm condition has passed)	Nonlatching													
<b>Activation Delay</b>		Enter the length of time for which the <b>Activation Logic</b> must be true before the relay is activated. This reduces nuisance alarms caused by external noise and/or transient vibration events.	Enter a value from 0 to 25.5 seconds, adjustable in increments of 0.1 seconds.  Default is 1 second											

**Relay Parameters**

Parameter Name		Description	Options/Comments						
<b>XM Configuration Utility</b>	<b>EDS File</b>	Sets the relay activation logic. <ul style="list-style-type: none"> <li>• <b>A or B</b> - Relay is activated when either <b>Alarm A</b> or <b>Alarm B</b> meets or exceeds the selected <b>Alarm Status</b> condition(s).</li> <li>• <b>A and B</b> - Relay is activated when both <b>Alarm A</b> and <b>Alarm B</b> meet or exceed the selected <b>Alarm Status</b> condition(s).</li> <li>• <b>A Only</b> - Relay is activated when <b>Alarm A</b> meets or exceeds the selected <b>Alarm Status</b> condition(s).</li> </ul>	Options: A only A or B A and B						
<b>Activation Logic</b>	<b>Logic</b>								
<b>XM Configuration Utility</b>	<b>EDS File</b>	Sets the alarm(s) that the relay will monitor. The alarm must be from the same device as the relay. When the <b>Activation Logic</b> is set to "A and B" or "A or B," you can select an alarm in both <b>Alarm A</b> and <b>Alarm B</b> . The system monitors both alarms. When the <b>Activation Logic</b> is set to "A Only," you can select an alarm only in <b>Alarm A</b> .	Options: Alarm 1 Alarm 2 Alarm 3 Alarm 4 Alarm 5 Alarm 6  <b>Note:</b> You can only select an alarm that is enabled.						
<b>Alarm A/B</b>	<b>Alarm Identifier A/B</b>								
<b>XM Configuration Utility</b>	<b>EDS File</b>	Sets the alarm conditions that will cause the relay to activate. You can select more than one. <ul style="list-style-type: none"> <li>• <b>Normal</b> - The current measurement is not within excess of any alarm thresholds.</li> <li>• <b>Alert</b> - The current measurement is in excess of the alert level threshold(s) but not in excess of the danger level threshold(s).</li> <li>• <b>Danger</b> - The current measurement is in excess of the danger level threshold(s).</li> <li>• <b>Disarm</b> - The alarm is disabled or the device is in Program mode.</li> <li>• <b>Xdcr Fault</b> - A transducer fault is detected on the associated transducer.</li> <li>• <b>Module Fault</b> - Hardware or firmware failure, or an error has been detected and is preventing proper operation of the device.</li> </ul>	Options: Normal Danger Xdcr Fault Alert Disarm Module Fault  Check to enable. Clear to disable.						
<b>Alarm Status to Activate On</b>	<b>Alarm Levels</b>								
<b>Relay Installed</b>		Indicates whether the relay is a physical relay on a module or a virtual relay. If the relay is a physical relay, then you can set the <b>Failsafe</b> parameter.	<table border="1"> <thead> <tr> <th><b>XM Configuration Utility</b></th> <th><b>EDS File</b></th> </tr> </thead> <tbody> <tr> <td>Check = Physical Relay</td> <td>Installed = Physical Relay</td> </tr> <tr> <td>Clear = Virtual Relay</td> <td>Not Installed = Virtual Relay</td> </tr> </tbody> </table>	<b>XM Configuration Utility</b>	<b>EDS File</b>	Check = Physical Relay	Installed = Physical Relay	Clear = Virtual Relay	Not Installed = Virtual Relay
<b>XM Configuration Utility</b>	<b>EDS File</b>								
Check = Physical Relay	Installed = Physical Relay								
Clear = Virtual Relay	Not Installed = Virtual Relay								
		If the relay is a virtual relay, the <b>Failsafe</b> parameter is not used or it is disabled.							

**Relay Parameters**

Parameter Name		Description	Options/Comments	
<b>XM Configuration Utility</b>	<b>EDS File</b>	<p>Determines whether the relay is failsafe or non-failsafe.</p> <p>Failsafe operation means that when in alarm, the relay contacts are in their "normal," de-energized, or "shelf-state" positions. In other words, normally closed relays are closed in alarm, and normally open relays are open in alarm. With failsafe operation, a power failure equals an alarm.</p> <p>The following are true of a relay in failsafe operation:</p> <ul style="list-style-type: none"> <li>• The relay is energized when power is applied to the module.</li> <li>• The relay in a nonalarmed condition has power applied to the coil.</li> <li>• In alarm condition, power is removed from the relay coil, causing the relay to change state.</li> </ul> <p>For non-failsafe operation, the following are true:</p> <ul style="list-style-type: none"> <li>• Under nonalarm conditions, the relay closes the circuit between the common and the N.C. (normally closed) terminals.</li> <li>• Under alarm conditions, the relay changes state to close the circuit between the common and the N.O. (normally open) terminals.</li> </ul> <p>For failsafe operation, the following are true:</p> <ul style="list-style-type: none"> <li>• Under nonalarm (with power applied to the unit) conditions, the relay closes the circuit between the common and the N.O. terminals.</li> <li>• Under alarm or loss-of-power conditions, the relay changes state to close the circuit between the common and the N.C. terminals.</li> </ul>	<b>XM Configuration Utility</b>	<b>EDS File</b>
<b>Failsafe Relay</b>	<b>Failsafe Option</b>		<p>Check means failsafe</p> <p>Clear means non-failsafe</p>	Failsafe

## 4-20mA Output Parameters (XM-161)

The 4-20mA output parameters define the characteristics of the 4-20mA output signals. The XM-161 supports a total of six 4-20mA outputs. Each output is permanently associated with a corresponding channel. The parameters are the same for each output.

### IMPORTANT

The 4-20mA output parameters are available only in the XM-161 module.

#### 4-20mA Parameters

Parameter Name	Description	Options/Comments	
<b>4-20mA Output (XM Serial Configuration Utility only)</b>	Sets the 4-20mA output to be configured in the XM Serial Configuration Utility.	Each output is associated with a corresponding channel.	
<b>Enable</b>	Enables/disables the 4-20mA output.	<b>XM Configuration Utility</b>	<b>EDS File</b>
		Check to enable	Enabled
		Clear to disable	Disabled
<b>Min Range</b>	The measured value associated with the 4mA.	Same measurement unit as <b>Output Data Unit</b> selection for the specified channel.	
<b>Max Range</b>	The measured value associated with the 20mA.		

### IMPORTANT

Measured values between **Min Range** and **Max Range** are scaled into the range from 4.0 to 20.0 to produce the output value. The **Min Range** value does not have to be less than the **Max Range** value. If the **Min Range** value is greater than the **Max Range** value, then the output signal is effectively inverted from the input signal.

### IMPORTANT

The 4-20mA outputs are either on or off. When they are on, the 4-20mA outputs overshoot the 4 and 20mA limits by 10% when the measurement exceeds the minimum and maximum range. This means the minimum current produced is 3.6mA and the maximum current produced is 22mA.

When the 4-20mA outputs are off, they produce a current approximately 2.9mA. The 4-20mA outputs are off under the following conditions:

- The 4-20mA outputs are set to "Disable" (see **Enable** above).
- The module is in Program mode.
- A transducer fault occurs that affects the corresponding measurement.

## Triggered Trend

The XM-160/161/162 modules can collect a triggered trend. A triggered trend is a time-based trend that is collected when a relay is activated, or the module receives a trigger event.

Once the triggered trend is configured, the XM module continuously monitors the trended measurements. When a trigger occurs, the XM module collects additional data as specified by the **Post Trigger** parameter.

The XM-160/161/162 can only store one triggered trend. Unless the triggered trend is latched, the trend data is overwritten with new data when the next trigger occurs.

The triggered trend parameters define the trend data that is collected by the module. Use these parameters to select the measurements included in the trend records, the interval between trend records, and which relay triggers (activates) the collection of the trend data.

### IMPORTANT

The Triggered Trend parameters are not included in the EDS file and cannot be edited using generic configuration tools such as RSNNetWorx for DeviceNet.

### Triggered Trend Parameters

Parameter Name	Description	Values/Comments
<b>Enable Triggered Trend Measurements</b>	Enables/disables the triggered trend measurements. Select to configure the triggered trend measurements.	Check to enable. Clear to disable.
<b>Select Measurements</b>	Sets the measurements to be collected and stored in the module.	More than one measurement can be selected.
<b>Number of Records</b>	The maximum number of measurement sets that can be collected in the trend buffer. The measurement sets make up the trend data.	The Number of Records is automatically calculated based upon the number of <b>Trended Measurements</b> selected.
<b>Latch Enable</b>	Determines whether the trigger trend is latched or unlatched.  Latched means that subsequent triggers are ignored after the initial trigger. This prevents the trend data from being overwritten with new data until the trigger is manually reset (click Reset Trigger button).  Unlatched means that the trend data is overwritten with new data every time a trigger occurs.	Check means latched Clear means unlatched

**Triggered Trend Parameters**

<b>Parameter Name</b>	<b>Description</b>	<b>Values/Comments</b>
<b>Relay Number</b>	Sets the relay that triggers the trend to be collected.	None means that the trend can only be triggered manually or by a trigger event (for example, XM-440).  Relay Numbers 1 through 8 are either relays on the Expansion Relay module when it's connected to the module or virtual relays.  <b>Note:</b> The relay must be enabled. Refer to Relay Parameters on page 66.
<b>Record Interval</b>	The amount of time between consecutive trend records.  <b>Note:</b> If you enter a Record Interval, the <b>Trend Span</b> is automatically updated.	1 to 3600 seconds
<b>Trend Span</b>	The total amount of time that can be covered by the trend data ( <b>Number of Records x Record Interval</b> ).  <b>Note:</b> If you edit the Trend Span, the <b>Record Interval</b> is automatically updated.	Seconds
<b>Post Trigger</b>	The percentage of records to be collected once the trigger occurs. For example, if you set Post Trigger to 20%, then 80% of the records in the trend are before the trigger occurs, and 20% of the records in the trend are after the trigger occurs.  This allows you to evaluate what happened after the trigger occurred.	0 to 100 Percent
<b>Status</b>	Shows the status of the trend data.	Possible status values: <ul style="list-style-type: none"> <li>• Not collected - No trend data is currently collected.</li> <li>• Collecting - A trigger has occurred and data (including post-trigger data) is being collected.</li> <li>• Collected - A trend has been saved to the buffer and is available to view and upload.</li> </ul>
<b>View Trend Data</b>	Displays a plot of the collected trend data.	
<b>Reset Trigger</b>	Resets the trigger if <b>Latch enabled</b> is selected. This allows the module to overwrite the previous trend data when the next trigger occurs.	
<b>Manual Trigger</b>	Triggers the module to collect the trend data without relay activation.	



## I/O Data Parameters

The I/O data parameters are used to configure the content and size of the DeviceNet I/O Poll response message.

### IMPORTANT

The XM-160/161/162 modules must be free of Poll connections when configuring the **Poll Output (Poll Response Assembly)** and **Poll Size**. Any attempt to download the parameters while a master device has established the Poll connection with the XM module will result in an error.

To close an existing Poll connection with an XM-440, switch the XM-440 from Run mode to Program mode. Refer to Changing Operation Modes on page 83.

To close an existing Poll connection with other master devices, remove the module from the scanlist or turn off the master device.

### I/O Data Parameters

Parameter Name		Description	Values/Comments
<b>COS Size (XM Serial Configuration Utility only)</b>		The size (number of bytes) of the Change of State (COS) message.	The COS Size cannot be changed.
<b>COS Output (XM Serial Configuration Utility only)</b>		The Assembly instance used for the COS message. The COS message is used to produce the Alarm and Relay status for the module.	The COS Output cannot be changed. Refer to COS Message Format on page 88 for more information.
<b>Poll Size</b>		Sets the size (number of bytes) of the Poll response message. Decreasing the maximum size will truncate data from the end of the Assembly structure.  <b>Important:</b> If you set the <b>Poll Output</b> to "Custom Assembly," the poll size is automatically set to the actual size of the customized Poll response.	The minimum size is 4 bytes and the maximum size is 124 bytes.
<b>XM Configuration Utility</b>	<b>EDS File</b>	Sets the Assembly instance used for the Poll response message. Each Assembly instance contains a different arrangement of the Poll data.	Options: Assembly Instance 101 Custom Assembly
<b>Poll Output</b>	<b>Poll Response Assembly</b>	The Poll response message is used by the XM module to produce measured values. It can contain up to 31 REAL values for a total of 124 bytes of data.	Refer to Poll Message Format on page 87 for more information.
<b>Assembly Instance Table (XM Serial Configuration Utility only)</b>		Displays the format of the currently selected COS or Poll Assembly instance.	The highlighted (yellow) Assembly structure bytes are included in the I/O message.
<b>Custom Assembly (XM Serial Configuration Utility only)</b>		Defines a custom data format for the Poll response. The custom assembly can contain any of the measurement parameters included in Assembly instance 101, as well as alarm and relay configuration parameters.	You can select up to 20 parameters.  Refer to Poll Message Format on page 87 for more information.

## Data Parameters

The Data parameters are used to view the measured values of the input channels and to monitor the status of the channels, alarms, and relays.

**TIP**

To view all the data parameters in the XM Serial Configuration Utility, click the **View Data** tab.

## Channel Data Parameters

### Channel Data Parameters

Parameter Name		Description	Values/Comments
<b>Status</b>		States whether a fault exists on the associated channel. If a fault exists, the overall value may not be accurate.	Possible status values: No Fault Fault
<b>XM Configuration Utility</b>	<b>EDS File</b>	Shows the measured overall value for the channel.	
<b>Value</b>	<b>Overall Measured Value</b>		
<b>XM Configuration Utility</b>	<b>EDS File</b>	Shows the measured average DC offset of the transducer signal. This value is compared with <b>Fault High</b> and <b>Fault Low</b> to determine whether the transducer is working properly.	
<b>DC Bias</b>	<b>Measured DC Bias</b>		

## Alarm and Relay Status Parameters

### Alarm and Relay Status Parameters

Parameter Name	Description	Values/Comments
<b>Alarm Status</b>	States the current status of the alarm.	<p>Possible status values:</p> <ul style="list-style-type: none"> <li>• <b>Normal</b> - The alarm is enabled, the device is in Run mode, there is no transducer fault, and the current measurement is not within the <b>Alert</b> or <b>Danger Threshold</b> value(s).</li> <li>• <b>Alert</b> - The alarm is enabled, the device is in Run mode, there is no transducer fault, and the current measurement is in excess of the <b>Alert Threshold</b> value(s) but not in excess of the <b>Danger Threshold</b> value(s).</li> <li>• <b>Danger</b> - The alarm is enabled, the device is in Run mode, there is no transducer fault, and the current measurement is in excess of the <b>Danger Threshold</b> value(s).</li> <li>• <b>Disarm</b>-The alarm is disabled or the device is in Program mode.</li> <li>• <b>Transducer Fault</b> - The alarm is enabled, the device is in Run mode, and a transducer fault is detected on the associated transducer.</li> <li>• <b>Module Fault</b> - Hardware or firmware failure, or an error has been detected and is preventing proper operation of the device.</li> </ul>
<b>Relay Status</b>	States the current status of the relay.	<p>Possible status values: Activated Not Activated</p>

## Device Mode Parameters

The Device Mode parameters are used to control the functions and the behavior of the device.

**IMPORTANT**

The XM Serial Configuration Utility handles these parameters automatically and transparently to the user.

### Device Mode Parameters

Parameter Name	Description	Values/Comments
<b>Device Mode</b>	Sets the current operation mode of the device. Refer to Changing Operation Modes on page 83 for more information.	Options: Run Mode Program Mode
<b>Autobaud</b>	Enables/disables autobaud.  When autobaud is set to "Enabled," the module will listen to other devices on the network to determine the correct baud rate to use for communications. When autobaud is set to "Disabled," the module baud rate must be set manually.	Options: Enabled Disabled



**XM-160/161/162 Direct Vibration Technical Specifications**

<b>Product Feature</b>	<b>Specification</b>
Inputs	
6 Channels	Eddy current transducer signals IEPE Accelerometer signals Voltage signals from any dynamic measurement device, such as a velocity or pressure transducer
Transducer Power	IEPE constant current (2.69mA $\pm$ 20% from +24V dc) None (voltage input) Constant voltage (-24V dc) (XM-162 only): max 20mA per channel
Voltage Range	$\pm$ 24V dc 6.5V peak-to-peak
Sensitivity	User configurable in software
Input Impedance	Greater than 100k
Discrete Switch (XM-161 and XM-162 only)	Relay reset and Setpoint multiplier functions Non-isolated switch input: switch to ground (24V COM) Max nominal sourced current (circuit limited): 5.1mA
Buffered Outputs	
Number	1 active buffer per vibration input channel
Range Configurable in Software	All channels negative (-22V dc to +3V dc) or positive (+0.6V dc to +22V dc)
Output Impedance	500 ohms
Response	-3dB @ 16kHz (down 5% @ 5kHz)
4-20mA Outputs (XM-161 only)	
Number	Two isolated banks of three outputs (one per channel) 600 ohm max load (24V loop power) Outputs proportional to overall value Non-powered (external loop voltage required, 7 to 36V)
Accuracy	Max: $\pm$ 0.5% of full scale Typical: $\pm$ 0.2% of full scale
Response Time (3 tau)	1.5 seconds

**XM-160/161/162 Direct Vibration Technical Specifications**

<b>Product Feature</b>		<b>Specification</b>
Indicators	8 LEDs	Module Status - red/green Network Status - red/green Channel 1 Status - yellow/red Channel 2 Status - yellow/red Channel 3 Status - yellow/red Channel 4 Status - yellow/red Channel 5 Status - yellow/red Channel 6 Status - yellow/red
Vibration Measurement & Signal Conditioning		
	A/D Conversion	12 bits
	Resolution	0.05% of full scale
	Accuracy	Max: $\pm 5\%$ of full scale 3Hz to 1kHz, +5/-10% 1kHz to 5kHz Typical: $\pm 1\%$ of full scale
	Units	volts           g ips               mm/s mils             um psi               Pa
	Range	0 to 2ips RMS (integrated 100mV/g accel @ 1kHz), 0 to 20g RMS (100mV/g accel), 0 to 15.6mils peak (200mV/mil probe)
	Low Pass Filter	1kHz or 5kHz selectable, 2-pole 0.1dB Chebyshev (-0.1dB @ fo)
	High Pass Filter	3.0Hz or 10.0Hz selectable, 2-pole 0.1dB Chebyshev (-0.1dB @ fo)
	Additional Overall Low Pass Filter	Single pole, -3dB @ 10kHz (down 10% @ 5kHz)
	Integrator	Single stage selectable, -0.3dB @ 3Hz
	Overall Level	RMS Peak (true or calculated) Peak to Peak (true or calculated)
DC Bias (Gap) Voltage Measurement		
	Low Pass Filter	Single pole, -3dB @ 335Hz
	Range	-24V dc to +24V dc
	Accuracy	Max: $\pm 5\%$ of full scale (48V dc) Typical: $\pm 1\%$ of full scale
	Resolution	47mV

**XM-160/161/162 Direct Vibration Technical Specifications**

<b>Product Feature</b>		<b>Specification</b>
Trend Buffer	Number of Records	1 to 12 parameters
	Time Interval	1 to 3600 seconds
	Trigger	Relay on the XM-441 Expansion Relay module is activated, or by a trigger event (for example, DeviceNet command from a controller or host).  <i>The data collected in the buffer is user configurable in software.</i>
	Post Trigger	Percent of trend that is to be acquired after the trigger
	Capacity	170 to 2048 records
Alarms	Number	One per channel
	Operators	Greater than Less than Inside range Outside range
	Hysteresis	User configurable in software
	Startup Inhibit	Period: 0 to 1092 minutes, adjustable in 0.1 minute increments Inhibit/multiplication function: Multiply by N (0 to 10, 0 = Disarm) Inhibit/multiplication initiated by: DeviceNet command Front terminal Setpoint Multiplier circuit closure (XM-161 and XM-162 only) Inhibit/multiplication terminated by: Expired timer DeviceNet command Front terminal Setpoint Multiplier circuit open (XM-161 and XM-162 only)



**XM-160/161/162 Direct Vibration Technical Specifications**

<b>Product Feature</b>		<b>Specification</b>
Relays	Number	Up to eight relays when interconnected to one or two XM-441 Expansion Relay modules, or Eight virtual relays whose status can be used by remote control systems
	Failsafe	Normally energized (failsafe), or Normally de-energized (non-fail-safe)
	Latching	Latching, or Non-latching
	Time Delay	0 to 25.5 seconds, adjustable in 100msec increments
	Voting Logic	Single or paired "And" or "Or" logic applied to any alarm
	Reset	Local reset switch on top of module Digital reset command via serial or DeviceNet interface Remote reset switch wired to terminal base (XM-161 and XM-162 only)
	Activation On	Alarm Status: Normal Alert Danger Disarm Transducer fault Module fault
Non-Volatile Configuration		A copy of the module configuration is retained in non-volatile memory from where it is loaded upon power up*. <i>*The configuration stored in non-volatile memory can be deleted only by a module-reset command sent via the serial interface, using the Serial Configuration Utility, or via DeviceNet from any compliant software application.</i>
Power	Supply Voltage	+18 to 32V dc
	XM-160 & XM-162 Module	Maximum current: 190mA @ 24V dc Maximum Power Dissipation: 4.56 Watts @ 24 Volts (4.3 Watts @ 18V dc, 4.9 Watts @32V dc)
	XM-161 Module	Maximum Current: 310mA @ 24V dc Maximum Power Dissipation: 7.44 Watts @ 24 Volts (7 Watts @ 18V dc, 8 Watts @ 32V dc)

**XM-160/161/162 Direct Vibration Technical Specifications**

<b>Product Feature</b>	<b>Specification</b>
Environmental	
Operating Temperature	-20 to +65°C (-4 to +149°F)
Storage Temperature	-40 to +85°C (-40 to +185°F)
Relative Humidity	95% non-condensing
Physical	
Dimensions	Height: 3.8in (97mm) Width: 3.7in (94mm) Depth: 3.7in (94mm)
Terminal Screw Torque	7 pound-inches (0.6Nm)
Approvals (when product or packaging is marked)	<ul style="list-style-type: none"> <li>UL      UL Listed for Ordinary Locations</li> <li>UL      UL Listed for Class I, Division 2 Group A, B, C, and D Hazardous Locations</li> <li>CSA     CSA Certified Process Control Equipment</li> <li>CSA     CSA Certified Process Control Equipment for Class I, Division 2 Group A, B, C, and D Hazardous Locations</li> <li>EEX*    European Union 94/9/EEC ATEX Directive, compliant with EN 50021; Potentially Explosive Atmospheres, Protection "n"</li> <li>CE*     European Union 89/336/EEC EMC Directive</li> <li>C-Tick* Australian Radiocommunications Act, compliant with: AS/NZS 2064, Industrial Emissions</li> </ul> <p><i>*See the Product Certification link at <a href="http://www.rockwellautomation.com">www.rockwellautomation.com</a> for Declarations of Conformity, Certificates and other certification details.</i></p>

## DeviceNet Information

### Electronic Data Sheets

Electronic Data Sheet (EDS) files are simple text files used by network configuration tools such as RSNetWorx (Version 3.0 or later) to help you identify products and easily commission them on a network. The EDS files describe a product's device type, product revision, and configurable parameters on a DeviceNet network.

The EDS files for the XM modules are installed on your computer with the XM configuration software. The latest EDS files can also be obtained at <http://www.ab.com/networks/eds/> or by contacting your local Rockwell Automation representative.

Refer to your DeviceNet documentation for instructions on registering the EDS files.

### Changing Operation Modes

XM modules operate in two modes.

Mode	Description
Run	The XM measurement modules collect measurement data and monitor each measurement device. The XM-440 establishes I/O connections with the XM measurement modules in its scan list and monitors their alarms, and controls its own relay outputs accordingly.
Program	The XM module is idle. The XM measurement modules stop the signal processing/measurement process, and the status of the alarms is set to the disarm state to prevent a false alert or danger status. The XM-440 closes the I/O connections with the XM measurement modules in its scan list and stops monitoring their alarms, relays are deactivated unless they are latched. Configuration parameters can be read, updated and downloaded to the XM module.

To change the operation mode of the XM module, use the Device Mode parameter in the EDS file. Note that the Stop and Start services described on page 85 can also be used to change the operation mode.

#### **IMPORTANT**

The XM Serial Configuration Utility software automatically puts XM modules in Program mode and Run mode without user interaction.

## Transition to Program Mode

Parameter values can only be downloaded to an XM module while the module is in Program mode. Any attempt to download a parameter value while the module is in Run mode will result in a Device State Conflict error.

To transition an XM module from Run mode to Program mode on a DeviceNet network, set the **Device Mode** parameter to "Program mode" and click **Apply**. Note that you cannot change any other parameter until you have downloaded the Program mode parameter.

**TIP**

The Module Status indicator flashes green when the module is in Program mode.

Refer to your DeviceNet documentation for specific instructions on editing EDS device parameters.

**TIP**

You can also use the Stop service described on page 85 to transition XM modules to Program mode.

## Transition to Run Mode

In order to collect data and monitor measurement devices, XM modules must be Run mode. To transition an XM module from Program mode to Run mode on a DeviceNet network, set the **Device Mode** parameter to "Run mode" and click **Apply**.

**TIP**

The Module Status indicator is solid green when the module is in Run mode.

Refer to your DeviceNet documentation for specific instruction on editing EDS device parameters.

**TIP**

You can also use the Start service described on page 85 to transition XM modules to Run mode.

## XM Services


The table below defines services supported by XM modules. The table includes the service codes, class instances, and attributes by their appropriate hexadecimal codes. Use the Class Instance Editor in RSNetWorx to execute these services, all illustrated in the example below.

### XM Services

Action	Service Code (Hex)	Class (Hex)	Instance	Attribute	Data
Transition to Run Mode	Start (06)	Device Mode Object (320)	1	None	None
Transition to Program Mode	Stop (07)	Device Mode Object (320)	1	None	None
Save configuration to non-volatile memory (EEPROM)	Save (16)	Device Mode Object (320)	1	None	None
Delete saved configuration from non-volatile memory (EEPROM)	Delete (09)	Device Mode Object (320)	1	None	None
Reset a specific latched relay	Reset (05)	Relay Object (323)	Relay number 1-C for XM-440, 1-5 for XM-12X, XM-320 and XM-220, 1-8 for XM-36X and XM-16X	None	None
Reset all latched relays	Reset (05)	Relay Object (323)	0	None	None
Reset the Peak Speed (XM-12X only)	Reset (05)	Speed Measurement Object (325)	1, 2 for XM-220	None	None
Close the virtual setpoint multiplier switch to activate the alarm setpoint multipliers (not applicable to all XM modules)	Other (33)	Discrete Input Point Object (08)	1	None	None
Open the virtual setpoint multiplier switch to start the setpoint multiplier timers and eventually cancel alarm setpoint multiplication (not applicable to all XM modules)	Other (32)	Discrete Input Point Object (08)	1	None	None

*Example*

To save the configuration parameters to the non-volatile memory (EEPROM), fill in the Class Instance Editor as shown below.

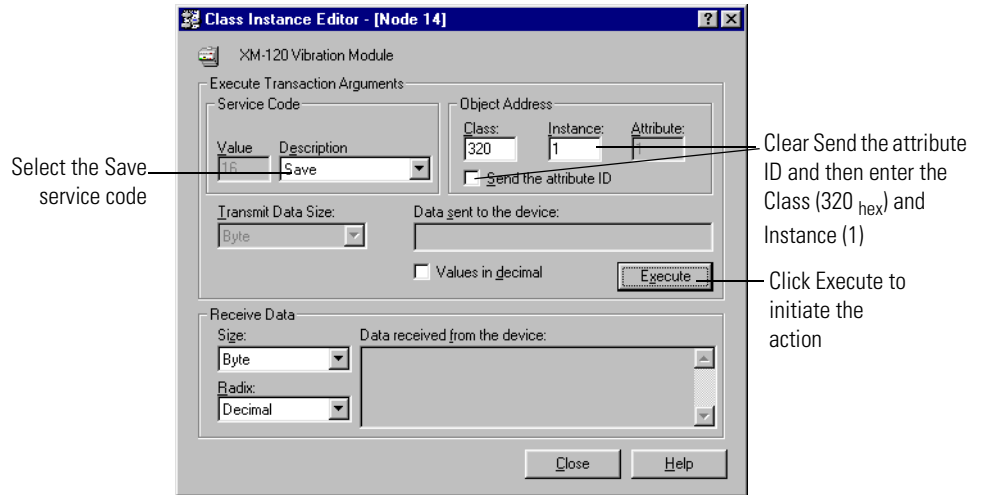

**Invalid Configuration Errors**

A Start or Save service request to an XM module may return an Invalid Device Configuration error when there is a conflict amongst the configuration settings.

The general error code for the Invalid Device Configuration error is D0<sub>hex</sub>. An additional error code is returned with the general error code to specify which configuration settings are invalid. The table below lists the additional error codes associated with the Invalid Device Configuration error.

**Additional Error Codes returned with the Invalid Device Configuration Error (0xD0)**

Error Code (Hex)	Description
01	No specific error information is available.
02	Mismatched transducer, channel, and/or measurement unit.
03	Inverted transducer fault high/low values.
04	Alarm thresholds conflict with the alarm condition.
05	Alarm speed range is invalid.
06	Band minimum frequency is greater than maximum frequency. Or, maximum frequency is greater than FMAX.
07	Relay is associated with an alarm that is not enabled.
08	Tachometer must be enabled for alarm or channel settings.
09	A senseless speed range is enabled on a speed alarm.
0A	Too many alarms associated with a single measurement.

**Additional Error Codes returned with the Invalid Device Configuration Error (0xD0)**

<b>Error Code (Hex)</b>	<b>Description</b>
0B	Invalid node address in the alarm list.
0C	Too many alarms in the alarm list. Or, no alarms in the alarm list.
0D	Alarm levels cannot be zero for alarms that are enabled.
0E	Too many slaves in the scanner's input data table.
0F	The FMAX and Number of Lines do not yield correct vector calculations.
10	Phase (vector) alarms prohibited with synchronous sampling and more than 1 tachometer pulse per revolution.
11	Order-base bands are prohibited on asynchronous channel.
12	Unsupported Sensor Type and Channel ID combination.
13	Invalid Alarm Type for the associated measurement ID.
14	Synchronous sampling is required for alarm on synchronous measurements.
15	Integration is not supported with the Bypass High Pass Filter option.

## **XM-160/161/162 I/O Message Formats**

The Direct Vibration modules support Poll, Change of State (COS), and Bit-Strobe I/O messages. The Poll response message is used by the XM module to produce measured values and the COS message is used to produce the Alarm and Relay Status. The Bit-Strobe message is used by a master device to send a trigger event to all the XM slaves on the network.

### **Poll Message Format**

The XM-160, XM-161, and XM-162 modules Poll request message contains no data. The Poll response message can contain up to 31 REAL values for a total of 124 bytes.

The Direct Vibration modules provide one pre-defined (static) data format of the Poll response, as defined in Assembly instance 101. The modules also provide a dynamic Assembly instance, instance 199, with which you can define a custom data format for the Poll response. The dynamic Assembly instance can contain any of the measurement parameters included in Assembly instance 101, as well as several of the alarm and relay configuration parameters.

The default Assembly instance is 101 and the default size is 48 bytes. You can change the Assembly instance and define the dynamic Assembly using the configuration software. Refer to I/O Data Parameters on page 73.

The Poll response data can also be requested explicitly through Assembly Object (Class ID 0x4), Instance 101 (0x65), Data Attribute (3).

The following table shows the static data format of Assembly instance 101.

#### **XM-160/161/162 Assembly Instance 101 Data Format**

<b>Byte</b>	<b>Definition</b>
0-3	Channel 1 Overall Vibration value
4-7	Channel 2 Overall Vibration value
8-11	Channel 3 Overall Vibration value
12-15	Channel 4 Overall Vibration value
16-19	Channel 5 Overall Vibration value
20-23	Channel 6 Overall Vibration value
24-27	Channel 1 Xdcr DC Bias
28-31	Channel 2 Xdcr DC Bias
32-35	Channel 3 Xdcr DC Bias
36-39	Channel 4 Xdcr DC Bias
40-43	Channel 5 Xdcr DC Bias
44-47	Channel 6 Xdcr DC Bias

### **COS Message Format**

The XM-160, XM-161, and XM-162 COS message contains eight bytes of data as defined in the table below. The COS data can also be requested explicitly through Assembly Object (Class ID 0x4), Instance 100 (0x64), Data Attribute (3).

#### **XM-160/161/162 COS Message Format**

<b>Byte</b>	<b>Bit 7</b>	<b>Bit 6</b>	<b>Bit 5</b>	<b>Bit 4</b>	<b>Bit 3</b>	<b>Bit 2</b>	<b>Bit 1</b>	<b>Bit 0</b>
0	Relay 1 Status	Set Point Multiplier	Alarm 2 Status		Alarm 1 Status			
1	Relay 2 Status	Reserved	Alarm 4 Status		Alarm 3 Status			
2	Relay 3 Status	Reserved	Alarm 6 Status		Alarm 5 Status			
3	Relay 4 Status	Reserved	Reserved		Reserved			
4	Relay 5 Status	Reserved	Reserved		Reserved			



**XM-160/161/162 COS Message Format**

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
5	Relay 6 Status	Reserved	Reserved			Reserved		
6	Relay 7 Status	Reserved	Reserved			Reserved		
7	Relay 8 Status	Reserved	Reserved			Reserved		

*XM Status Values*

The following tables describe the XM Status values that are included in the COS messages.

**Alarm Status Descriptions**

Alarm Status Value	Description
0	Normal
1	Alert
2	Danger
3	Disarm
4	Transducer Fault (Sensor OOR)
5	Module Fault
6	Tachometer Fault
7	Reserved


**Relay Status Descriptions**

Relay Status Value	Description
0	Not Activated
1	Activated

**Bit-Strobe Message Format**

The Bit-Strobe command sends one bit of output data to each XM slave whose node address appears in the master's scanlist.

The Bit-Strobe command message contains a bit string of 64 bits (8 bytes) of output data, one output bit per node address on the network. One bit is assigned to each node address supported on the network (0...63) as shown in Figure B.1.

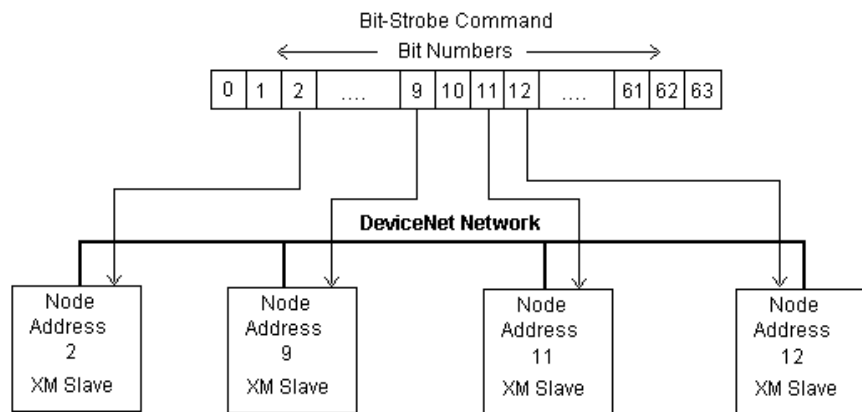**Figure B.1 Bit-Strobe Command**

The XM modules use the bit received in a Bit-Strobe connection as a trigger event. When the bit number corresponding to the XM module's node address is set, the XM module will collect the triggered trend data.

Note that the XM modules do not send data in the Bit-Strobe response.

## ADR for XM Modules

Automatic Device Replacement (ADR) is a feature of an Allen-Bradley DeviceNet scanner. It provides a means for replacing a failed device with a new unit, and having the device configuration data set automatically. Upon replacing a failed device with a new unit, the ADR scanner automatically downloads the configuration data and sets the node address.

### **IMPORTANT**

It is recommended that ADR not be used in safety related applications. If the failure of the ADR server, and a subsequent power cycle, would result in the loss of protection for a machine, then ADR should not be implemented.

ADR can be used with XM modules but keep the following in mind when setting up the XM modules.

- The ADR scanner can not download the configuration data to an XM module if the module has a saved configuration in its non-volatile memory. This happens because the saved configuration is restored and the module enters Run mode when the power is cycled. (Configuration parameters cannot be downloaded while an XM module is in Run mode.) XM modules must be in Program mode for the ADR configuration to be downloaded and this occurs only when there is no saved configuration.

**TIP**

To delete a saved configuration from non-volatile memory, use the Delete service in RSNetWorx for DeviceNet or perform the following steps in the XM Serial Configuration Utility.

1. Save the current configuration to a file. From the **File** menu, click **Save As** and enter a file name for the configuration.
  2. Reset the module to factory defaults. Click the **Module** tab and click the **Reset** button.
  3. Reload the saved configuration. From the **File** menu, click **Open** and select the configuration file.
  4. Make certain to disable auto save. From the **Device** menu, clear the **Auto Save Configuration** check mark.
- An XM module will enter Run mode automatically after the ADR scanner restores the module's configuration only if the module is in Run mode at the time the configuration is saved to the scanner. If the module is in Program mode when the configuration is saved, then the module will remain in Program mode after the configuration is downloaded by the ADR scanner.
  - The ADR scanner saves and restores only the configuration parameters contained in the module's EDS file. Some XM parameters are not included in the EDS file because they are not supported by either the EDS specification or the tools that read the EDS files, for example RSNetWorx for DeviceNet. These configuration parameters will not be restored with ADR.

Below is a list of the configuration parameters that are not included in the EDS file and can not be saved or restored with ADR.

- Channel Name
- Tachometer Name
- Alarm Name
- Relay Name
- All Triggered Trend related parameters (see page 71)

- All SU/CD Trend related parameters
- Custom Assembly structure (see page 73)
- The ADR and trigger group functions cannot be used together. A module can have only one primary master so a module cannot be both configured for ADR and included in a trigger group. The ADR scanner must be the primary master for the modules configured for ADR. The XM-440 Master Relay module must be the primary master for modules included in a trigger group.

## DeviceNet Objects

Appendix C provides information on the DeviceNet objects supported by the Direct Vibration modules.

<b>For information about</b>	<b>See page</b>
Identity Object (Class ID 01H)	94
DeviceNet Object (Class ID 03H)	95
Assembly Object (Class ID 04H)	97
Connection Object (Class ID 05H)	101
Discrete Input Point Object (Class ID 08H)	104
Parameter Object (Class ID 0FH)	104
Acknowledge Handler Object (Class ID 2BH)	110
Alarm Object (Class ID 31DH)	111
Channel Object (Class ID 31FH)	113
Device Mode Object (Class ID 320H)	115
Overall Measurement Object (Class ID 322H)	116
Relay Object (Class ID 323H)	118
Transducer Object (Class ID 328H)	120
4-20mA Output Object (Class ID 32AH)	122

**TIP**

Refer to the DeviceNet specification for more information about DeviceNet objects. Information about the DeviceNet specification is available on the ODVA web site (<http://www.odva.org>).

## Identity Object (Class ID 01<sub>H</sub>)

The Identity Object provides identification and general information about the device.

### Class Attributes

The Identity Object provides no class attributes.

### Instance Attributes

**Table C.1 Identity Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Default Value
1	Get	Vendor ID	UINT	668 = Entek
2	Get	Device Type	UINT	109 (Specialty I/O)
3	Get	Product Code	UINT	39 (0x27) XM-160 40 (0x28) XM-161 41 (0x29) XM-162
4	Get	Revision: Major Minor	STRUCT OF USINT USINT	Value varies with each firmware revision. Value varies with each firmware revision.
5	Get	Status	WORD	
6	Get	Serial Number	UDINT	
7	Get	Product Name	SHORT_ STRING	"XM-160 Overall Vibration Module" "XM-161 Overall Vibration Module" "XM-162 Overall Vibration Module"

### Status

The **Status** is a 16 bit value. The following bits are implemented.

**Table C.2 Identity Object Status**

Bit	Name	Description
0	Owned	TRUE indicates that the module has an owner. More specifically, the Predefined Master/Slave Connection Set has been allocated to a master.
1		Reserved, set to 0
2	Configured	This bit is set whenever a saved configuration is successfully loaded from non-volatile memory. This bit is cleared whenever the default configuration is restored or loaded.

**Table C.2 Identity Object Status**

Bit	Name	Description
3		Reserved, set to 0
4	Boot Program	Vendor-specific, indicates that the boot program is running. The Main Application must be corrupt or missing.
5 - 7		Vendor-specific, not implemented
8	Minor Recoverable Fault	Set whenever there is a transducer or tachometer fault.
9	Minor Unrecoverable Fault	Not implemented
10	Major Recoverable Fault	Set when the module detects a major problem that the user may be able to recover from. The Module Status LED will flash red. An example of this condition is when the boot program is running.
11	Major Unrecoverable Fault	Set when there is a module status fault (Module Status LED is solid red).
12 - 15		Reserved, set to 0

## Services

**Table C.3 Identity Object Services**

Service Code	Class/Instance Usage	Name
01 <sub>h</sub>	Instance	Get_Attributes_All
05 <sub>h</sub>	Instance	Reset
0E <sub>h</sub>	Instance	Get_Attribute_Single
10 <sub>h</sub>	Instance	Set_Attribute_Single <sup>1</sup>

<sup>1</sup> Attributes can only be set while the device is in Program mode. See the description of the Device Mode Object for more information.

## DeviceNet Object (Class ID 03<sub>H</sub>)

The DeviceNet Object is used to provide the configuration and status of a physical attachment to DeviceNet.

## Class Attributes

**Table C.4 DeviceNet Object Class Attributes**

Attr ID	Access Rule	Name	Data Type	Default Value
1	Get	Revision	UINT	2

## Instance Attributes

**Table C.5 DeviceNet Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Default Value
1	Get/Set	MAC ID <sup>1</sup>	USINT	63
2	Get/Set	Baud Rate <sup>2</sup>	USINT	0
3	Get	Bus-Off Interrupt	BOOL	0
4	Get/Set	Bus-Off Counter	USINT	0
5	Get	Allocation Information	STRUCT of BYTE USINT	0 255
100	Get/Set	Autobaud Disable	BOOL	0 (Ignore attribute 2 and always autobaud)

- 1 Setting the MAC ID causes the device to reset automatically, after which it will go online with the new MAC ID.
- 2 The Baud Rate setting can not be set while **Autobaud Disable** is equal to 0. The new baud rate will not take effect until the module is reset.

The **MAC ID**, **Baud Rate**, and **Autobaud Disable** settings are stored in non-volatile memory so they do not reset to the default with each power cycle. The **Baud Rate** attribute supports the following settings:

- 0 = 125 kbps
- 1 = 250 kbps
- 2 = 500 kbps

The **Baud Rate** setting is used only when automatic baud rate detection is disabled (**Autobaud Disable** = 1). When **Autobaud Disable** is set to zero (0), the module ignores its **Baud Rate** setting and performs automatic baud rate detection instead. This means that the module will determine the network baud rate by listening for network traffic before attempting to go online.



## Assembly Object (Class ID 04<sub>H</sub>)

The Assembly Object binds attributes of multiple objects to allow data to or from each object to be sent or received in a single message.

The XM-160, XM-161, and XM-162 modules provide both static and dynamic assemblies.

### Class Attribute

**Table C.6 Assembly Object Class Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
1	Get	Revision	UINT	Revision of the implemented object.	2

### Instances

**Table C.7 Assembly Object Instances**

Instance	Name	Type	Description
100	Default COS Message	Input	Alarm and Relay Status values
101	Default Poll Response Message	Input	Measurement values
199	Alternate Dynamic Poll Response Message	Input	User configurable measurement values and configuration parameters

### Instance Attributes

**Table C.8 Assembly Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Value
1	Get	Number of Members in list	UINT	Only supported for Dynamic Assembly instance

**Table C.8 Assembly Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Value
2	Set	Member List	Array of STRUCT:	Only supported for Dynamic Assembly instance
		Member Data Description	UINT	Size of member data value in bits
		Member Path Size	UINT	
		Member Path	Packed EPATH	
3	Get	Data	Defined in tables on the following pages.	

### Assembly Instance Attribute Data Format

#### *Instance 100 - Alarm and Relay Status*

This assembly is sent using COS messaging when any of the Alarm or Relay Status values change.

**Table C.9 Instance 100 Data Format (Alarm and Relay Status Values Assembly)**

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	Relay 1 Status	Set Point Multiplier	Alarm 2 Status		Alarm 1 Status			
1	Relay 2 Status	0	Alarm 4 Status)		Alarm 3 Status			
2	Relay 3 Status	0	Alarm 6 Status		Alarm 5 Status			
3	Relay 4 Status	0	0		0			
4	Relay 5 Status	0	0		0			
5	Relay 6 Status	0	0		0			
6	Relay 7 Status	0	0		0			
7	Relay 8 Status	0	0		0			

### Instance 101 - Measurement Values

This is the default assembly that is sent within the I/O Poll Response message when an I/O Poll Request is received from a DeviceNet Master.

**Table C.10 Instance 101 Data Format (Measurement Values Assembly)**

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0 - 3	Channel 1 Overall Vibration value							
4 - 7	Channel 2 Overall Vibration value							
8 - 11	Channel 3 Overall Vibration value							
12 - 15	Channel 4 Overall Vibration value							
16 - 19	Channel 5 Overall Vibration value							
20 - 23	Channel 6 Overall Vibration value							
24 - 27	Channel 1 Xdcr DC Bias							
28 - 31	Channel 2 Xdcr DC Bias							
32 - 35	Channel 3 Xdcr DC Bias							
36 - 39	Channel 4 Xdcr DC Bias							
40 - 43	Channel 5 Xdcr DC Bias							
44 - 47	Channel 6 Xdcr DC Bias							

### Instance 199 - Dynamic Assembly

This Assembly instance can be created and configured with the XM Serial Configuration Utility or RSMACC Enterprise Online Configuration Utility. Using the configuration software, you determine the format of the data. This assembly instance can be selected to be sent in response to an I/O Poll request from a Master.

The dynamic Assembly can include all of the measurement values included in Assembly instance 101. In addition, the dynamic Assembly can include the following configuration parameters.

**Table C.11 Instance 199 Component Mapping**

EPATH (where ii = instance number)	Class Name	Class Number	Instance Number	Attribute Name	Attribute Number	Data Type
21 1D 03 24 ii 30 04	Alarm	31D <sub>h</sub>	1 - 6	Alarm Enable	4	BOOL
21 1D 03 24 ii 30 07	Alarm	31D <sub>h</sub>	1 - 6	Condition	7	USINT
21 1D 03 24 ii 30 08	Alarm	31D <sub>h</sub>	1 - 6	Alert Threshold (High)	8	REAL
21 1D 03 24 ii 30 09	Alarm	31D <sub>h</sub>	1 - 6	Danger Threshold (High)	9	REAL
21 1D 03 24 ii 30 0A	Alarm	31D <sub>h</sub>	1 - 6	Alert Threshold Low	10	REAL
21 1D 03 24 ii 30 0B	Alarm	31D <sub>h</sub>	1 - 6	Danger Threshold Low	11	REAL

**Table C.11 Instance 199 Component Mapping**

<b>EPATH (where ii = instance number)</b>	<b>Class Name</b>	<b>Class Number</b>	<b>Instance Number</b>	<b>Attribute Name</b>	<b>Attribute Number</b>	<b>Data Type</b>
21 1D 03 24 ii 30 0C	Alarm	31D <sub>h</sub>	1 - 6	Hysteresis	12	REAL
21 1D 03 24 ii 30 0D	Alarm	31D <sub>h</sub>	1 - 6	Threshold (Set Point) Multiplier	13	REAL
21 1D 03 24 ii 30 0E	Alarm	31D <sub>h</sub>	1 - 6	Startup Period	14	UINT
21 23 03 24 ii 30 04	Relay	323 <sub>h</sub>	1 - 8	Relay Enable	4	BOOL
21 23 03 24 ii 30 05	Relay	323 <sub>h</sub>	1 - 8	Latch Enable	5	BOOL
21 23 03 24 ii 30 06	Relay	323 <sub>h</sub>	1 - 8	Failsafe Enable	6	BOOL
21 23 03 24 ii 30 07	Relay	323 <sub>h</sub>	1 - 8	Delay	7	UINT
21 23 03 24 ii 30 09	Relay	323 <sub>h</sub>	1 - 8	Alarm Level	9	BYTE
21 0F 00 24 ii 30 01	Param	0F <sub>h</sub>	13 - 20	Parameter Value (Alarm Identifier A)	1	USINT
21 0F 00 24 ii 30 01	Param	0F <sub>h</sub>	21 - 28	Parameter Value (Alarm Identifier B)	1	USINT
21 23 03 24 ii 30 0C	Relay	323 <sub>h</sub>	1 - 8	Logic	12	USINT
21 23 03 24 ii 30 0E	Relay	323 <sub>h</sub>	1 - 8	Relay Installed	14	BOOL

The dynamic Assembly instance must be instantiated with a call to the class level Create service. Then the structure can be defined with the Set\_Attribute\_Single service for the Member List attribute. Only one dynamic Attribute instance is supported so subsequent calls to the Create service will return a Resource Unavailable (0x02) error. The Delete service can be used to destroy the dynamic Assembly instance so that it can be re-created.

## Services

**Table C.12 Assembly Object Services**

Service Code	Class/Instance Usage	Name
0E <sub>h</sub>	Class/Instance	Get_Attribute_Single
10 <sub>h</sub>	Instance	Set_Attribute_Single
08 <sub>h</sub>	Class	Create
09 <sub>h</sub>	Instance	Delete

## Connection Object (Class ID 05<sub>H</sub>)

The Connection Object allocates and manages the internal resources associated with both I/O and Explicit Messaging Connections.

### Class Attributes

The Connection Object provides no class attributes.

### Instances

**Table C.13 Connection Object Instances**

Instance	Description
1	Explicit Message Connection for pre-defined connection set
2	I/O Poll Connection
3	I/O Strobe Connection
4	I/O COS (change of state) Connection
11 - 17	Explicit Message Connection

## Instance Attributes

**Table C.14 Connection Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description
1	Get	State	USINT	State of the object.
2	Get	Instance Type	USINT	Indicates either I/O or Messaging Connection.
3	Get	Transport Class Trigger	BYTE	Defines behavior of the Connection.
4	Get	Produced Connection ID	UINT	Placed in CAN Identifier Field when the Connection transmits.
5	Get	Consumed Connection ID	UINT	CAN Identifier Field value that denotes message to be received.
6	Get	Initial Comm Characteristics	BYTE	Defines the Message Group(s) across which productions and consumptions associated with this Connection occur.
7	Get	Produced Connection Size	UINT	Maximum number of bytes transmitted across this Connection.
8	Get	Consumed Connection Size	UINT	Maximum number of bytes received across this Connection.
9	Get/Set	Expected Packet Rate	UINT	Defines timing associated with this Connection.
12	Get/Set	Watchdog Time-out Action	USINT	Defines how to handle Inactivity/Watchdog timeouts.
13	Get	Produced Connection Path Length	UINT	Number of bytes in the production_connection_path attribute.
14	Get	Produced Connection Path	Array of USINT	Specifies the Application Object(s) whose data is to be produced by this Connection Object. See DeviceNet Specification Volume 1 Appendix I.
15	Get	Consumed Connection Path Length	UINT	Number of bytes in the consumed_connection_path attribute.
16	Get	Consumed Connection Path	Array of USINT	Specifies the Application Object(s) that are to receive the data consumed by this Connection Object. See DeviceNet Specification Volume 1 Appendix I.
17	Get	Production Inhibit Time	UINT	Defines minimum time between new data production.

## Services

**Table C.15 Connection Object Services**

Service Code	Class/Instance Usage	Name
05 <sub>h</sub>	Instance	Reset
0E <sub>h</sub>	Instance	Get_Attribute_Single
10 <sub>h</sub>	Instance	Set_Attribute_Single

## Discrete Input Point Object (Class ID 08<sub>H</sub>)

The Discrete Input Point Object stores information about the value of the Setpoint Multiplier signal.

## Class Attributes

**Table C.16 Discrete Input Object Class Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
1	Get	Revision	UINT	Revision of the implemented object.	2

## Instance Attributes

**Table C.17 Discrete Input Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
3	Get	Value	BOOL	Setpoint Multiplier	0 = Off 1 = On
199	Set	Backdoor Service	USINT	Setting this attribute is equivalent to requesting the specified service.	Set to one of the following values to perform the specified service: 0x32 = Open 0x33 = Close

## Services

**Table C.18 Discrete Input Object Services**

Service Code	Class/Instance Usage	Name	Description
0E <sub>h</sub>	Class/Instance	Get_Attribute_Single	Returns the contents of the specified attribute.
10 <sub>h</sub>	Instance	Set_Attribute_Single	Sets the contents of the specified attribute.
32 <sub>h</sub>	Instance	Open	Opens the virtual Setpoint Multiplier switch.
33 <sub>h</sub>	Instance	Close	Closes the virtual Setpoint Multiplier switch.

## Parameter Object (Class ID 0F<sub>H</sub>)

The Parameter Object provides the interface to the Direct Vibration configuration data. There are 30 Parameter Object instances implemented in the Direct Vibration modules.

Parameter Object instances 1-28 are implemented to provide an alternate method of setting the configuration parameters with EPATH or ENGUNIT data types. And Parameter Object instances 29 and 30 provide an alternate method of setting the Produced Connection Size and Produced Connection Path attributes for the Poll Connection because these attributes can be difficult to get/set directly through the Connection Object.

## Class Attributes

**Table C.19 Parameter Object Class Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
2	Get	Max Instance	UINT	Maximum instance number of an object in this class.	Total number of parameter object instances.
8	Get	Parameter Class Descriptor	WORD	Bits that describe the parameter.	Bit 0 Supports Parameter Instances Bit 1 Supports Full Attrib. Bit 2 Must do non-volatile store Bit 3 Params in non-volatile
9	Get	Config. Assembly Instance	UINT		Set to 0



## Instances

There are 30 instances of this object.

**Table C.20 Parameter Object Instances**

Instance	Read Only	Name	Data Type	Valid Values	Default Value
1	No	Transducer 1 Sensitivity Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
2	No	Transducer 2 Sensitivity Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
3	No	Transducer 3 Sensitivity Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
4	No	Transducer 4 Sensitivity Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
5	No	Transducer 5 Sensitivity Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0

**Table C.20 Parameter Object Instances**

<b>Instance</b>	<b>Read Only</b>	<b>Name</b>	<b>Data Type</b>	<b>Valid Values</b>	<b>Default Value</b>
6	No	Transducer 6 Sensitivity Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
7	No	Channel 1 Measurement Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
8	No	Channel 2 Measurement Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
9	No	Channel 3 Measurement Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
10	No	Channel 4 Measurement Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
11	No	Channel 5 Measurement Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0

Table C.20 Parameter Object Instances

Instance	Read Only	Name	Data Type	Valid Values	Default Value
12	No	Channel 6 Measurement Units	USINT	0 = mils 1 = ips 2 = g 3 = psi 4 = volts 5 = mm/s 6 = $\mu\text{m}$ 7 = Pa	0
13	No	Relay 1 Alarm Identifier A	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
14	No	Relay 2 Alarm Identifier A	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
15	No	Relay 3 Alarm Identifier A	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
16	No	Relay 4 Alarm Identifier A	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
17	No	Relay 5 Alarm Identifier A	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
18	No	Relay 6 Alarm Identifier A	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
19	No	Relay 7 Alarm Identifier A	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0

**Table C.20 Parameter Object Instances**

<b>Instance</b>	<b>Read Only</b>	<b>Name</b>	<b>Data Type</b>	<b>Valid Values</b>	<b>Default Value</b>
20	No	Relay 8 Alarm Identifier A	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
21	No	Relay 1 Alarm Identifier B	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
22	No	Relay 2 Alarm Identifier B	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
23	No	Relay 3 Alarm Identifier B	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
24	No	Relay 4 Alarm Identifier B	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
25	No	Relay 5 Alarm Identifier B	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
26	No	Relay 6 Alarm Identifier B	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
27	No	Relay 7 Alarm Identifier B	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0

**Table C.20 Parameter Object Instances**

Instance	Read Only	Name	Data Type	Valid Values	Default Value
28	No	Relay 8 Alarm Identifier B	USINT	0 = Alarm 1 (Ch1 value) 1 = Alarm 2 (Ch2 value) 2 = Alarm 3 (Ch3 value) 3 = Alarm 4 (Ch4 value) 4 = Alarm 5 (Ch5 value) 5 = Alarm 6 (Ch6 value)	0
29	No	Poll Connection Produced Connection <sup>1</sup>	USINT	101, 199 (Assembly Object instance number)	101
30	No	Poll Connection Produced Connection Size <sup>1</sup>	USINT	4-124	124

<sup>1</sup> The Poll Connection Produced Connection Path and Size parameters cannot be set while the Poll connection is already established with a master/scanner. Attempting to do so will result in an "Object State Conflict" error (error code 0xC). These Parameter instances are a little more flexible than the actual Connection Object attributes because they can be set while the connection is in the NON\_EXISTENT state (before the master/scanner allocates the connection).

## Instance Attributes

**Table C.21 Parameter Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
1	Set	Parameter Value		Actual value of parameter	See Table C.20 for a list of valid values for each instance.
2	Get	Link Path Size	USINT	Size of Link Path	0 (These Parameter instances do not link directly to another object attribute.)
3	Get	Link Path	ARRAY of DeviceNet path	DeviceNet path to the object for the Parameter value.	
		Segment Type/Port	BYTE	See DeviceNet Specification Volume 1 Appendix I for format.	
		Segment Address		See DeviceNet Specification Volume 1 Appendix I for format.	

**Table C.21 Parameter Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
4	Get	Descriptor	WORD	Description of Parameter	Bit 0 = Settable Path support Bit 1 = Enum Strings support Bit 2 = Scaling support Bit 3 = Scaling Links support Bit 4 = Read Only Bit 5 = Monitor Bit 6 = Ext. Prec. scaling
5	Get	Data Type	EPATH	Data Type Code	See DeviceNet Specification Volume 1 Appendix J, Section J-6.
6	Get	Data Size	USINT	Number of Bytes in Parameter value.	

## Services

**Table C.22 Parameter Object Services**

Service Code	Class/Instance Usage	Name	Description
0E <sub>h</sub>	Class/Instance	Get_Attribute_Single	Returns the contents of the specified attribute.
10 <sub>h</sub>	Class	Set_Attribute_Single	Sets the contents of the specified attribute. <sup>1</sup>

<sup>1</sup> Attributes can only be set while the device is in Program mode. See the description of the Device Mode Object for more information.

## Acknowledge Handler Object (Class ID 2B<sub>H</sub>)

The Acknowledge Handler Object is used to manage the reception of message acknowledgments. This object communicates with a message producing Application Object within a device. The Acknowledge Handler Object notifies the producing application of acknowledge reception, acknowledge timeouts, and production retry limit errors.

### Class Attributes

The Acknowledge Handler Object provides no class attributes.

## Instances

A module provides only a single instance (instance 1) of the Acknowledge Handler Object. This instance is associated with instance 4 of the Connection Object, the slave COS connection to a higher level master.

## Instance Attributes

**Table C.23 Acknowledge Handler Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Default Value
1	Get/Set	Acknowledge Timer	UINT	16ms
2	Get/Set	Retry Limit	USINT	1
3	Get	COS Producing Connection Instance	UINT	4

## Services

**Table C.24 Acknowledge Handler Object Services**

Service Code	Class/Instance Usage	Name
0E <sub>h</sub>	Instance	Get_Attribute_Single
10 <sub>h</sub>	Instance	Set_Attribute_Single

## Alarm Object (Class ID 31D<sub>H</sub>)

The Alarm Object models a two-stage (alert and danger levels) alarm.

## Class Attributes

**Table C.25 Alarm Object Class Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
1	Get	Revision	USINT	Revision of the implemented object.	2 (indicates that <b>Threshold Multiplier</b> is a REAL instead of USINT)

## Instances

There are 6 instances of this object.

## Instance Attributes

**Table C.26 Alarm Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
3	Get	Alarm Status	3 BITS	The current status of the alarm.	0 = Normal 1 = Alert (alarm) 2 = Danger (shutdown) 3 = Disarm 4 = Xdcr Fault 5 = Module Fault
4	Get/Set	Alarm Enable	BOOL	Indicates whether this alarm object is enabled.	0 = Disabled 1 = Enabled
6	Get	Threshold Units	USINT	Indicates whether the threshold and hysteresis value are specified in units of measure. Not applicable to vector alarms.	Set to 1 1 = Measurement units
7	Get/Set	Condition	USINT	Indicates on which side of the threshold values the alarm and danger conditions exist.	0 = Greater than 1 = Less than 2 = Inside range 3 = Outside range
8	Get/Set	Alert Threshold (High)	REAL	The threshold value for the alert (alarm) condition (greater threshold for range types).	
9	Get/Set	Danger Threshold (High)	REAL	The threshold value for the danger (shutdown) condition (greater threshold for range types).	
10	Get/Set	Alert Threshold Low	REAL	The lesser threshold value for the alert (alarm) condition for the range condition types.	
11	Get/Set	Danger Threshold Low	REAL	The lesser threshold value for the danger (shutdown) condition for the range condition types.	
12	Get/Set	Hysteresis	REAL	The amount on the safe side of a threshold by which the value must recover to clear the alarm.	



**Table C.26 Alarm Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
13	Get/Set	Threshold (Setpoint Multiplier)	REAL	Indicates how the thresholds should be adjusted when the setpoint multiplication function is invoked.	0 = Disable alarm > 0 = Multiply the thresholds by the value
14	Get/Set	Startup Period	UINT	The amount of time that the Threshold (Setpoint) Multiplier is applied after the startup signal is received.	Seconds
18	Get/Set	Name	STRING2	A name to help identify this alarm.	

## Services

**Table C.27 Alarm Object Services**

Service Code	Class/Instance Usage	Name	Description
0E <sub>h</sub>	Instance	Get_Attribute_Single	Returns a single attribute.
10 <sub>h</sub>	Instance	Set_Attribute_Single	Sets a single attribute. <sup>1</sup>

<sup>1</sup> Attributes can only be set while the device is in Program mode. See the description of the Device Mode Object for more information.

## Channel Object (Class ID 31F<sub>H</sub>)

The Channel Object models "front-end" processing performed on an input signal before specific measurements are performed. This processing typically includes gain, filtering, and/or integration.

### Class Attributes

The Channel Object provides no class attributes.

### Instances

There are 6 instances of this object for the Direct Vibration modules.

## Instance Attributes

**Table C.28 Channel Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
3	Get/Set	Output Data Units	ENGUNIT	The data units of the signal resulting from the signal processing performed in the channel.	<p>See DeviceNet Specification Volume 1 Appendix K. Also see Parameter Object Instances 7 to 12.</p> <p>Valid values:  g = 1504 hex  in/sec = 2B07 hex  mils = 0800 hex  psi = 1300 hex  volt = 2D00 hex  mm/s = 0900 hex  µm = 2204 hex  Pa = 1309 hex</p> <p>This setting is directly related to the <b>Sensitivity Units</b> of the associated transducer and the <b>Level of Integration</b> performed in the channel.</p>
4	Get	Integration Level of Integration	USINT	The level of integration to perform on the signal.	0 = None 1 = Single
5	Get/Set	Low Cutoff Frequency	USINT	The effective high pass filter (low frequency corner) selection.	0 = Very low 1 = Low
9	Get/Set	Name	STRING2	A name to help identify this channel.	
10	Get/Set	Full Scale	REAL	The maximum signal expected to be processed by the channel.	<p><b>Output Data Units</b> + Overall Base Measurement Class (RMS, Pk, Pk-Pk)</p> <p>Setting the Full Scale to a greater value allows the channel to handle greater input signals without saturating or clipping. Setting the Full Scale to a lesser value allows the signal to be measured with greater resolution.</p>
100	Get	Very Low HPF Corner Frequency	REAL	The frequency, in Hz, of the "Very low" <b>Low Cutoff Frequency</b> option for attribute 5.	Hz
101	Get	Low HPF Corner Frequency	REAL	The frequency, in Hz, of the "Low" <b>Low Cutoff Frequency</b> option for attribute 5.	Hz

## Services

**Table C.29 Channel Object Services**

Service Code	Class/Instance Usage	Name	Description
0E <sub>h</sub>	Instance	Get_Attribute_Single	Returns a single attribute.
10 <sub>h</sub>	Instance	Set_Attribute_Single	Sets a single attribute. <sup>1</sup>

<sup>1</sup> Attributes can only be set while the device is in Program mode. See the description of the Device Mode Object for more information.

## Device Mode Object (Class ID 320<sub>H</sub>)

The Device Mode Object is used to control access to the configuration parameters in the module. The object's Device Mode attribute must be in PROGRAM mode to allow the module's configuration parameters to be "Set" (see Services). Attempts to set the configuration parameters while the Device Mode is in RUN mode will return an error. Note that the module collects measurements while in RUN mode but not while it is in PROGRAM mode.

### Class Attributes

The Device Mode Object provides no class attributes.

### Instance Attributes

**Table C.30 Device Mode Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
3	Get	Device Mode	UINT	The operating mode of the module.	0 = Power Up 1 = RUN 2 = PROGRAM
199	Set	Backdoor Service	USINT	Setting this attribute is equivalent to requesting the specified service.	Set to one of the following values to perform the specified service: 0x05 = Reset 0x09 = Delete 0x15 = Restore 0x16 = Save

Setting the **Device Mode** attribute to "1" (RUN) is equivalent to executing the **Start** service. Setting the **Device Mode** attribute to "2" (PROGRAM) is equivalent to executing the **Stop** service.

## Service

**Table C.31 Device Mode Object Services**

Service Code	Class/Instance Usage	Name	Description
0E <sub>h</sub>	Instance	Get_Attribute_Single	Return the value of a single attribute.
10 <sub>h</sub>	Instance	Set_Attribute_Single	Set the value of a single attribute.
07 <sub>h</sub>	Instance	Stop	Transitions from Run to the Program state.
06 <sub>h</sub>	Instance	Start	Validate the device configuration settings and transition to the Run state if OK.
05 <sub>h</sub>	Instance	Reset	Transition to the Power Up state. Load the non-volatile configuration and transition to the Run state if saved configuration restored.
16 <sub>h</sub>	Instance	Save	Validate the device configuration settings if necessary and save them to non-volatile memory.
09 <sub>h</sub>	Instance	Delete	Delete the saved configuration from non-volatile memory.
15 <sub>h</sub>	Instance	Restore	Load the saved configuration or the factory default configuration from non-volatile memory.

### Overall Measurement Object (Class ID 322<sub>H</sub>)

The Overall Measurement Object models the measurement of the amplitude of a signal including a wide frequency range.

## Class Attributes

**Table C.32 Overall Object Class Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
100	Get/Set	Measurement	WORD	The measurement (or calculation) performed to produce the <b>Overall Value</b> .	0 = RMS 1 = RMS peak 2 = RMS pk-to-pk 3 = peak 4 = peak-to-peak 5 = 255 reserved

## Instances

There are 6 instances of this object

## Instance Attributes

**Table C.33 Overall Measurement Object Class Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
3	Get	Overall Value	REAL	Measured value	The output value of the measurement performed by Overall Measurement Object on the input signal. The result of the measurement process specified by <b>Measurement</b> is converted to the units specified by <b>Data Units</b> to produce the Overall Value.
4	Get	Status	BOOL	Indicates if a fault or alarm has occurred.	0 = Operating without alarms or faults. 1 = Alarm of fault condition exists. The <b>Overall Value</b> attribute may not represent the actual field value.
5	Get	Data Units	ENGUNIT	The units context of the <b>Overall Value</b> attribute.	This setting is determined by the Channel Object's <b>Output Data Units</b> attribute (see page 114).
7	Get/Set	Time Constant	REAL	The detection time constant associated with the output smoothing filter (for the RMS and DC meters), or the decay rate of the peak meters.	Must be greater than zero.

## Services

**Table C.34 Overall Measurement Object Services**

Service Code	Class/Instance Usage	Name	Description
0E <sub>h</sub>	Class/Instance	Get_Attribute_Single	Returns a single attribute
10 <sub>h</sub>	Class/Instance	Set_Attribute_Single	Sets a single attribute. <sup>1</sup>

<sup>1</sup> Attributes can only be set while the device is in Program mode. See the description of the Device Mode Object for more information.

## Relay Object (Class ID 323<sub>H</sub>)

The Relay Object models a relay (actual or virtual). A relay can be activated or deactivated based on the status of one or more alarms. Note that the Direct Vibration modules do not have an on-board relay. The relays are added by connecting up to two XM-441 Expansion Relay modules, for a total of eight relays.

## Class Attributes

**Table C.35 Relay Object Class Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
1	Get	Revision	USINT	Revision of the implemented object.	2 (indicates that <b>Delay</b> is a UINT in milliseconds instead of USINT in tenths of seconds)
3	Get	Number of Instances	UINT	Number of Instances in this class.	8
100	Set	Reset All	USINT	Setting this attribute is equivalent to executing the Class Reset service.	Reset All is an attribute that provides a way to perform a Class level Reset service via the Set_Attribute_Single service. Setting this attribute to any value is equivalent to performing the Class level Reset service. Reading the Reset All attribute always returns zero.

## Instances

There are 8 instances of this object.

## Instance Attributes

**Table C.36 Relay Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
3	Get	Relay Status	BOOL	The current status of the relay.	0 = Off 1 = On
4	Get/Set	Relay Enable	BOOL	Indicates whether this relay object is enabled.	0 = Disabled 1 = Enabled
5	Get/Set	Latch Enable	BOOL	Indicates whether this relay latches (requires a reset command to deactivate).	0 = Nonlatching 1 = Latching
6	Get/Set	Failsafe Enable	BOOL	Indicates whether this relay is normally energized (activated during power loss).	0 = Non-failsafe (not normally energized) 1 = Failsafe (normally energized)
7	Get/Set	Delay	UINT	The time period that the voting logic must be true before the relay is activated.	milliseconds
8	Get/Set	Name	STRING2	A name to help identify the relay.	18 characters maximum
9	Get/Set	Alarm Level	BYTE	Specifies what alarm status values will cause the relay to activate.	0 = Normal 1 = Alert 2 = Danger 3 = Disarm 4 = Xdcr Fault 5 = Module Fault
10	Get/Set	Alarm Identifier A	EPATH	Identifies the first alarm status the relay monitors.	See Parameter Object instances 13 to 20.

**Table C.36 Relay Object Instance Attributes**

11	Get/Set	Alarm Identifier B	EPATH	Identifies the second alarm status the relay monitors.	See Parameter Object instances 21 to 28.
12	Get/Set	Logic	USINT	Indicates the number of associated alarms that must have a status value specified by <b>Alarm Level</b> in order to activate the relay.	0 = Ignore <b>Alarm Identifier B</b> and activate the relay based on the status of <b>Alarm Identifier A</b> . 1 = Activate the relay if the status of either <b>Alarm Identifier A</b> or <b>B</b> matches any of the statuses specified by <b>Alarm Level</b> . 2 = Activate the relay if the status of both <b>Alarm Identifier A</b> and <b>B</b> match any of the statuses specified by <b>Alarm Level</b> .
14	Get	Relay Installed	BOOL	Indicates whether an actual relay is associated with this instance.	0 = Not installed 1 = Installed

## Services

**Table C.37 Relay Object Services**

Service Code	Class/Instance Usage	Name	Description
05h	Class/Instance	Reset	Resets latched relay.
0E <sub>h</sub>	Class/Instance	Get_Attribute_Single	Returns a single attribute
10 <sub>h</sub>	Class/Instance	Set_Attribute_Single	Sets a single attribute. <sup>1</sup>

<sup>1</sup> Attributes can only be set while the device is in Program mode. See the description of the Device Mode Object for more information.

## Transducer Object (Class ID 328<sub>H</sub>)

The Transducer Objective provides no class attributes.



## Class Attributes

Attr ID	Access Rule	Name	Data Type	Description	Semantics
100	Get/Set	Transducer Power Type (Ch1 & Ch2)	USINT	The type of power supplied to the Ch1 and Ch2 transducers.	0 = No power supplied 1 = Constant current (IEPE)
101	Get/Set	Buffer Power Mode	USINT	Indicates whether the buffer power setting is determined automatically or manually.	0 = Manual mode 1 = Auto mode
102	Get/Set	Buffer Power Manual Mode Setting	USINT	Determines the manual setting of the buffer power.	0 = Negative voltage 1 = Positive voltage
103	Get	Buffer Power Status	USINT	The actual buffer power setting.	0 = Negative voltage 1 = Positive voltage
104	Get/Set	IEPE Voltage Boost	USINT	Determines whether to use the IEPE voltage boost feature.	0 = No boost 1 = Boost enabled, auto 2 = Boost enable, constant
105	Get/Set	Transducer Power Type (Ch3 & Ch4)	USINT	The type of power supplied to the Ch3 & Ch4 transducers.	0 = No power supplied 1 = Constant current (IEPE)
106	Get/Set	Transducer Power Type (Ch5 & Ch6)	USINT	The type of power supplied to the Ch5 & Ch6 transducers.	0 = No power supplied 1 = Constant current (IEPE)

## Instances

There are 6 instances of this object.

**Table C.38 Transducer Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
3	Get	DC Bias	REAL	The measured average DC bias of the transducer signal in volts.	Volts
4	Get	Status	BOOL	Indicates whether a transducer fault exists (the measured <b>DC Bias</b> is outside the range specified by <b>Fault High</b> and <b>Low</b> ).	0 = No fault 1 = Transducer fault exists
5	Get/Set	Sensitivity Value	REAL	Value of the sensitivity of the transducer in millivolts per <b>Sensitivity Units</b> .	

**Table C.38 Transducer Object Instance Attributes**

6	Get/Set	Sensitivity Units	ENGUNIT	Units of the denominator of the <b>Sensitivity Value</b> .	See DeviceNet Specification Volume 1 Appendix K.  Valid values: g = 1504 hex in/sec = 2B07 hex mils = 0800 hex psi = 1300 hex volt = 2D00 hex mm/s = 0900 hex µm = 2204 hex Pa = 1309 hex
7	Get/Set	Fault High	REAL	The maximum expected DC Bias voltage from the transducer in volts.	Volts
8	Get/Set	Fault Low	REAL	The minimum expected DC Bias voltage from the transducer in volts	Volts
13	Get/Set	DC Bias Time Constant	REAL	The time constant used for exponential averaging of the <b>DC Bias</b> value (a low pass filter/output smoothing filter).	Seconds

## Services

**Table C.39 Transducer Object Services**

Service Code	Class/Instance Usage	Name	Description
0E <sub>h</sub>	Class/Instance	Get_Attribute_Single	Returns a single attribute.
10 <sub>h</sub>	Class/Instance	Set_Attribute_Single	Sets a single attribute. <sup>1</sup>

<sup>1</sup> Attributes can only be set while the device in Program mode. See the description of the Device Mode Object for more information.

## 4-20mA Output Object (Class ID 32A<sub>H</sub>)

The 4-20mA Output Object models the configuration of a 4-20mA output signal.

### Class Attributes

The 4-20mA Output Object provides no class attributes.

## Instances

There are 6 instances of this object.

## Instance Attributes

**Table C.40 4-20mA Output Object Instance Attributes**

Attr ID	Access Rule	Name	Data Type	Description	Semantics
3	Get	Value	REAL	The current output value.	mA
4	Get/Set	Enable	BOOL	Indicates whether this 4-20mA output is enabled.	0 = Disabled 1 = Enabled
5	Get/Set	Max Range	REAL	The measured value associated with 20mA.	
6	Get/Set	Min Range	REAL	The measured value associated with 4mA.	

## Services

**Table C.41 4-20mA Output Object Services**

Service Code	Class/Instance Usage	Name	Description
0E <sub>h</sub>	Instance	Get_Attribute_Single	Returns a single attribute.
10 <sub>h</sub>	Instance	Set_Attribute_Single	Sets a single attribute. <sup>1</sup>

<sup>1</sup> Attributes can only be set while the device is in Program mode. See the description of the Device Mode Object for more information.



## alarm

An alarm alerts you to a change in a measurement. For example, an alarm can notify you when the measured vibration level for a machine exceeds a pre-defined value.

## Automatic Device Replacement (ADR)

A means for replacing a malfunctioning device with a new unit, and having the device configuration data set automatically. The ADR scanner uploads and stores a device's configuration. Upon replacing a malfunctioning device with a new unit (MAC ID 63), the ADR scanner automatically downloads the configuration data and sets the MAC ID (node address).

## band

A frequency range, such as the frequency range between 1,800 and 3,200Hz.

## baud rate

The baud rate is the speed at which data is transferred on the DeviceNet network. The available data rates depend on the type of cable and total cable length used on the network:

Cable	Maximum Cable Length		
	125K	250K	500K
Thick Trunk Line	500m (1,640ft.)	250m (820ft.)	100m (328ft.)
Thin Trunk Line	100m (328ft.)	100m (328ft.)	100m (328ft.)
Maximum Drop Length	6m (2 ft.)	6m (20ft.)	6m (20ft.)
Cumulative Drop Length	156m (512ft.)	78m (256ft.)	39m (128ft.)

The XM measurement modules' baud rate is automatically set by the bus master. You must set the XM-440 Master Relay module's baud rate. You set the XM-440 to 125kb, 250kb, 500kb, or Autobaud if another device on the network has set the baud rate.

## Bit-Strobe

A multicast transfer of data sent by a master device to all the XM slaves on the network. The bit-strobe command message contains a bit string of 64-bits (8 bytes) of output data, one output bit per node address on the network.

## bus off

A bus off condition occurs when an abnormal rate of error is detected on the Control Area Network (CAN) bus in a device. The bus-off device cannot receive or transmit messages on the network. This condition is often caused by corruption of the network data signals due to noise or baud rate mismatch.

### **Change of State (COS)**

DeviceNet communications method in which the XM module sends data based on detection of any changed value within the input data (alarm or relay status).

### **current configuration**

The current configuration is the most recently loaded set of configuration parameters in the XM module's memory. When power is cycled, the current configuration is loaded with either the saved configuration (in EEPROM) or the factory defaults (if there is no saved configuration). In addition, the current configuration contains any configuration changes that have been downloaded to the module since power was applied.

### **DeviceNet network**

A DeviceNet network uses a producer/consumer Controller Area Network (CAN) to connect devices (for example, XM modules). A DeviceNet network can support a maximum of 64-devices. Each device is assigned a unique node address (MAC ID) and transmits data on the network at the same baud rate.

A cable is used to connect devices on the network. It contains both the signal and power wires. General information about DeviceNet and the DeviceNet specification are maintained by the Open DeviceNet Vendor's Association (ODVA), ODVA is online at <http://www.odva.org>.

### **disarm state**

See Program mode.

### **EEPROM**

See NVS (Non-Volatile Storage).

### **Electronic Data Sheet (EDS) Files**

EDS files are simple text files that are used by network configuration tools such as RSNetWorx for DeviceNet to describe products so that you can easily commission them on a network. EDS files describe a product device type, revision, and configurable parameters.

### **Help window**

A window that contains help topics that describe the operation of a program. These topics may include

- An explanation of a command.
- A description of the controls in a dialog box or property page.

- Instructions for a task.
- Definition of a term.

**high pass filter**

A filter that excludes all frequencies below a defined frequency. It allows, or passes, frequencies above the defined frequency. It is useful for removing low frequency signal components that would dominate the signal.

**low pass filter**

A low pass filter excludes frequencies above a defined frequency. It allows, or passes, frequencies below the defined frequency. It is useful as an anti-aliasing filter.

**MAC ID**

See node address.

**master device**

A device which controls one or more slave devices. The XM-440 Master Relay module is a master device.

**node address**

A DeviceNet network can have as many as 64 devices connected to it. Each device on the network must have a unique node address between 0 and 63. Node address 63 is the default used by uncommissioned devices. Node address is sometimes called "MAC ID."

**NVS (Non-Volatile Storage)**

NVS is the permanent memory of an XM module. Modules store parameters and other information in NVS so that they are not lost when the module loses power (unless Auto Save is disabled). NVS is sometimes called "EEPROM."

**online help**

Online help allows you to get help for your program on the computer screen by pressing **F1**. The help that appears in the Help window is context sensitive, which means that the help is related to what you are currently doing in the program.

**orders**

Multiples of the operating speed of a piece of equipment. The first order is the operating speed. The second order is two times the operating speed, and so on.

**Polled**

DeviceNet communications method in which module sends data in response to a poll request from a master device.

**Program mode**

The XM module is idle. Typically this occurs when the module configuration settings are being updated with the XM Configuration program. In Program mode, the signal processing/measurement process is stopped. The status of the alarms is set to the disarm state to prevent a false alert or danger status.

**Run mode**

In Run mode, the module collects measurement data and monitors each measurement device.

**settling time**

The amount of time it takes a measurement to reach 90% of the final value given a step change in the input signal.

**signal detection**

Defines the method of conditioning or measuring a dynamic input signal. Peak (0 to the peak voltage), Peak-Peak (minimum peak to maximum peak), and RMS (square root of the mean of the square of the values) are the most common methods of signal detection.

**slave device**

A device that receives and responds to messages from a Master device but does not initiate communication. Slave devices include the XM measurement modules, such as the XM-120 Dynamic Measurement module and the XM-320 Position module.

**Strobe**

See Bit-Strobe.

**transducer**

A transducer is a device for making measurements. These include accelerometers, velocity pickups, displacement probes, and temperature sensors.

**trend**

A set of records of one or more measurement parameter(s) collected at regular intervals based on time or speed.



**trigger**

An event that prompts the collection of trend data.

**triggered trend**

A time-based trend that is collected in an XM module when a relay on the XM module is activated, or when the module receives a trigger event.

**virtual relay**

A virtual relay is a non-physical relay. It has the same capabilities (monitor alarms, activation delay, change status) as a physical relay only without any physical or electrical output. The virtual relay provides additional relay status inputs to a controller, PLC, or an XM-440 Master Relay module (firmware revision 5.0 and later).

**XM configuration**

XM configuration is a collection of user-defined parameters for XM modules.

**XM Serial Configuration Utility software**

XM Serial Configuration Utility software is a tool for monitoring and configuring XM modules. It can be run on computers running Windows 2000 service pack 2, Windows NT 4.0 service pack 6, or Windows XP operating systems.



## Numerics

**24V common grounding requirements** 12

**4-20mA Output Object** 122

**4-20mA output parameters** 70

4-20mA Output 70

Enable 70

Max Range 70

Min Range 70

**4-20mA outputs, wiring** 21

## A

**Acknowledge Handler Object** 110

**Alarm Object** 111

**alarm parameters** 64

Alarm Number 64

Alert Threshold (High) 65

Alert Threshold (Low) 65

Condition 64

Danger Threshold (High) 65

Danger Threshold (Low) 65

Enable 64

Hysteresis 65

Name 64

Startup Period 66

Threshold Multiplier 66

**Assembly Object** 97

**Automatic Device Replacement (ADR)** 90

## B

**baud rate** 52

**bit-strobe message format** 89

**buffered outputs, wiring** 21

## C

**Channel Object** 113

**Channel Status indicator** 55

**channel transducer parameters** 60

Channel Name 60

DC Bias Time Constant 61

Eng. Units 61

Fault High 61

Fault Low 61

Sensitivity 60

**Class Instance Editor** 85

**components**

XM-160 Direct Vibration module 3

XM-161 Direct Vibration module 3

XM-162 Direct Vibration module 3

XM-441 Expansion Relay module 3

XM-947 terminal base 2

**configuration parameters** 57

4-20mA output parameters 70

alarm parameters 64

channel transducer parameters 60

data parameters 74

device mode parameters 76

I/O data parameters 73

overall measurement parameter 63

relay parameters 66

signal processing parameters 62

triggered trend parameters 71

**connecting wiring** 17

4-20mA outputs 21

buffered outputs 21

DeviceNet 51

power supply 20

remote relay reset signal 23

serial port 50

setpoint multiplication switch 25

terminal base XM-947 17

transducers 26

**Connection Object** 101

**COS message format** 88

## D

**data parameters** 74

Alarm Status 75

DC Bias 74

Measured DC Bias 74

Measurement Value 74

Relay Status 75

Status 74

**description**

configuration parameters 57

XM-160 module 3

XM-161 module 3

XM-162 module 3

XM-441 module 3

XM-947 terminal base 2

**Device Mode Object** 115

**Device Mode parameter** 76, 83

**Device Mode parameters**

Autobaud 76

Device Mode 76

**DeviceNet connection**

- baud rate 52
- node address 52
- wiring 51

**DeviceNet grounding requirements** 12**DeviceNet information**

- automatic device replacement (ADR) 90
- EDS files 83
- I/O message formats 87
- invalid device configuration errors 86
- setting the Device Mode parameter 83
- XM services 85

**DeviceNet Object** 95**DeviceNet objects**

- 4-20mA Output 122
- Acknowledge Handler 110
- Alarm 111
- Assembly 97
- Channel 113
- Connection 101
- Device Mode 115
- DeviceNet 95
- Discrete Input Point 103
- Identity 94
- Overall Measurement 116
- Parameter 104
- Relay 118
- Transducer 120

**DIN Rail Grounding Block** 9**DIN rail grounding requirements** 8**Discrete Input Point Object** 103**document conventions** 4**E****Electronic Data Sheet (EDS) files** 83**G****grounding requirements** 8

- 24V common 12
- DeviceNet 12
- DIN rail 8
- panel/wall mount 10
- transducers 12

**I****I/O data parameters** 73

- Assembly Instance Table 73
- COS Output 73

COS Size 73

Custom Assembly 73

Poll Output 73

Poll Response Assembly 73

Poll Size 73

**I/O message formats** 87

- bit-strobe messages 89
- change of state (COS) messages 88
- poll messages 87
- XM status values 89

**Identity Object** 94**IEPE buffer power and signal detection parameters**

- Auto Buffer Power 59
- Buff Pwr Manual Setting 60
- Buffer Power Mode 59
- Buffer Power Type 60
- Buffer Pwr Status 60
- Enable IEPE Power 58
- Enable IEPE Voltage Boost 59
- Signal Detection 58

**indicators** 54

- Channel Status 55
- Module Status 54
- Network Status 55

**installation requirements**

- grounding 8
- power 6
- wiring 6

**interconnecting terminal base units** 15**introduction** 1**invalid device configuration errors** 86**K****keyswitch** 53**M****mini-connector** 50**Module Status (MS) indicator** 54**mounting**

- terminal base unit on DIN rail 14
- terminal base unit on panel/wall 16
- XM-160 module on terminal base 53
- XM-161 module on terminal base 53
- XM-162 module on terminal base 53

**N****Network Status (NS) indicator** 55**node address** 52

**O****operating mode**

- program mode 55, 83
- run mode 55, 83

**Overall Measurement Object** 116**overall measurement parameter** 63

- Overall Time Constant 63

**P****panel/wall mount grounding requirements** 10**Parameter Object** 104**poll message format** 87

- Assembly instance 101 88

**power requirements** 6**power supply, wiring** 20**program mode** 55, 83**R****Relay Object** 118**relay parameters** 66

- Activation Delay 67
- Activation Logic 68
- Alarm A 68
- Alarm B 68
- Alarm Identifier A 68
- Alarm Identifier B 68
- Alarm Levels 68
- Alarm Status to Activate On (Alarm Levels) 68
- Enable 67
- Failsafe 69
- Latching 67
- Name 67
- Number 67
- Relay Installed 68

**relays**

- resetting 23, 56

**remote relay reset signal, wiring** 23**reset switch** 56**run mode** 55, 83**S****self-test, status** 55**serial port connection**

- mini-connector 50

**setpoint multiplication switch, wiring** 25**signal processing parameters** 62

- Full Scale 62
- High LPF Frequency 63
- High Pass Filter 63
- Low HPF Frequency 63
- Low LPF Frequency 63
- Low Pass Filter 63
- Output Data Unit 62
- Very Low HPF Frequency 63

**specifications** 77**T****terminal base**

- interconnecting units 15
- mounting on DIN rail 14
- mounting on panel/wall 16

**terminal block assignment** 17**transducer grounding requirements** 12**Transducer Object** 120**transducer wiring** 26

- accelerometer & non-contact sensor 49
- IEPE accelerometer 26
- non-contact sensor to XM-160 33
- non-contact sensor to XM-161 33
- non-contact sensor to XM-162 30
- passive transducer 39
- powered sensor 43

**transition to program mode, DeviceNet** 84**transition to run mode, DeviceNet** 84**triggered trend parameters** 71

- Enable Triggered Trend Measurements 71
- Latch Enable 71
- Manual Trigger 72
- Number of Records 71
- Post Trigger 72
- Record Interval 72
- Relay Number 72
- Reset Trigger 72
- Select Measurements 71
- Status 72
- Trend Span 72
- View Trend Data 72

**W****wiring**

- to separate power connections 6
- to terminal base 17

**wiring connections**

- 4-20mA outputs 21
- buffered outputs 21
- DeviceNet 51
- power supply 20
- remote relay reset signal 23
- serial port 50
- setpoint multiplication switch 25
- transducers 26

**wiring requirements** 6

**X**

**XM Services** 85

**XM status values** 89

**XM-160/161/162 Direct Vibration Module**

- components 2
- configuration parameters 57
- grounding requirements 8
- I/O message formats 87
- indicators 54
- introduction 1
- mounting 53
- power requirements 6
- reset switch 56
- self-test 55
- specifications 77
- wiring requirements 6

**XM-441 Expansion Relay Module** 3, 56, 66

**XM-947 terminal base**

- description 2
- mounting 13
- wiring 17

# Rockwell Automation Support

Rockwell Automation provides technical information on the Web to assist you in using its products. At <http://support.rockwellautomation.com>, you can find technical manuals, a knowledge base of FAQs, technical and application notes, sample code and links to software service packs, and a MySupport feature that you can customize to make the best use of these tools.

For an additional level of technical phone support for installation, configuration, and troubleshooting, we offer TechConnect support programs. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://support.rockwellautomation.com>.

## Installation Assistance

If you experience a problem within the first 24 hours of installation, please review the information that's contained in this manual. You can also contact a special Customer Support number for initial help in getting your product up and running.

United States	1.440.646.3434 Monday – Friday, 8am – 5pm EST
Outside United States	Please contact your local Rockwell Automation representative for any technical support issues.

## New Product Satisfaction Return

Rockwell Automation tests all of its products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned, follow these procedures.

United States	Contact your distributor. You must provide a Customer Support case number (call the phone number above to obtain one) to your distributor in order to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for the return procedure.

[www.rockwellautomation.com](http://www.rockwellautomation.com)

### Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication GMS110-UM025C-EN-P - August 2010

Supersedes Publication GMS110-UM025B-EN-E - May 2010

Copyright © 2010 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.