Model Number

NBB5-18GM60-A2-V1-3D

Features
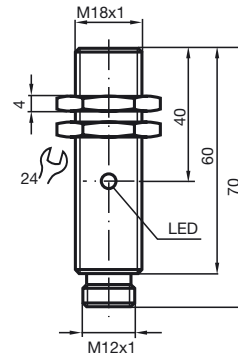
- **Basic series**
- **5 mm embeddable**

Connection

A2
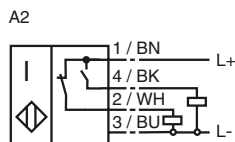
Accessories

BF 18
Mounting flange

EXG-18
Mounting aid

Dimensions

Technical Data

General specifications

Switching element function		PNP Antivalent
Rated operating distance	s_n	5 mm
Installation		embeddable
Output polarity		DC
Assured operating distance	s_a	0 ... 4.05 mm
Reduction factor r_{Al}		0.25
Reduction factor r_{Cu}		0.15
Reduction factor r_{V2A}		0.66

Nominal ratings

Operating voltage	U_B	10 ... 30 V
Switching frequency	f	0 ... 800 Hz
Reverse polarity protection		protected against reverse polarity
Short-circuit protection		pulsing
Voltage drop	U_d	≤ 3 V
Operating current	I_L	0 ... 200 mA
Off-state current	I_r	0 ... 0.5 mA typ. 0.1 µA at 25 °C
No-load supply current	I_0	≤ 20 mA
Indication of the switching state		LED, yellow

Standard conformity

Standards	IEC / EN 60947-5-2:2004

Ambient conditions

Ambient temperature	-25 ... 70 °C (248 ... 343 K)

Mechanical specifications

Connection type	V1-connector
Housing material	brass, nickel-plated
Sensing face	PBT
Protection degree	IP67

General information

Use in the hazardous area	see instruction manuals
Category	3D

PEPPERL+FUCHS
SENSING YOUR NEEDS

ATEX 3D

Instruction	**Manual electrical apparatus for hazardous areas**
Device category 3D	for use in hazardous areas with non-conducting combustible dust
Directive conformity	94/9/EG
Standard conformity	EN 50281-1-1
	Protection via housing
	Use is restricted to the following stated conditions
CE symbol	$C \epsilon$
Ex-identification	⟨Ex⟩ II 3D IP67 T 95 °C X The Ex-significant identification is on the enclosed adhesive label
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual.
	The data stated in the data sheet are restricted by this operating instruction! The special conditions must be adhered to!
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed.
	The adhesive label provided must be affixed in the immediate vicinity of the sensor! The surface to which the label is applied must be clean, flat and free from grease!
	The affixed adhesive label must be readable and durable, taking account of the possibility of chemical corrosion!
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas.
	Repairs to these apparatus are not possible.
[Fett]Special conditions	
Maximum operating current I_L	The maximum permissible load current must be restricted to the values given in the following list.
	High load currents and load short-circuits are not permitted.
Maximum operating voltage UBmax	The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Tolerances are not permitted.
Maximum heating (Temperature rise)	dependant of the load current I_L and the max. operating voltage U_{Bmax}.
	Information can be taken from the following list. The maximum surface temperature at maximum ambient temperature is given in the Ex identification of the apparatus.
at U_{Bmax}=30 V, I_L=200 mA	25 °C
at U_{Bmax}=30 V, I_L=100 mA	21 °C
at U_{Bmax}=30 V, I_L=50 mA	20 °C
at U_{Bmax}=30 V, I_L=25 mA	19 °C
Plug connector	The plug connector must not be disconnected under voltage. The proximity switch is marked as follows: "DO NOT DISCONNECT UNDER VOLTAGE!" When the plug connector is disconnected the ingress of dirt into the inner areas (i.e. the areas, which are not accessible in the plugged-in condition) must be prevented.
	The plug connection can only be separated using a tool. This is achieved by using the locking protection V1-Clip (Mounting accessory from Pepperl + Fuchs).
Protection from mechanical danger	The sensor must not be mechanically damaged.
Electrostatic charging	Electrostatic charges on the metal housing components must be avoided. Dangerous electrostatic charges on the metal housing components can be avoided by incorporating these components in the equipotential bonding.

PEPPERL+FUCHS
SENSING YOUR NEEDS