

36 M

LED

Temperature probe Coded plug

# Release date: 2013-02-26 15:42 Date of issue: 2013-02-26 034020\_eng.xml

0.0

0.

0.2 0.3 Distance [m]

Subject to reasonable modifications due to technical advances.

2

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

1

Copyright Pepperl+Fuchs, Printed in Germany

1


114

23

27.5

# **Electrical Connection**

Standard symbol/Connection: (version IU)

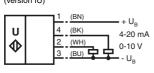

Core colours in accordance with EN 60947-5-2.

## Pinout



# Accessories

BF 30 Mounting flange, 30 mm

BF 30-F Mounting flange with dead stop, 30 mm

**BF 5-30** Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

OMH-04 Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

UVW90-M30 Ultrasonic -deflector

UVW90-K30 Ultrasonic -deflector

UC-30GM-PROG

DA5-IU-2K-V Process control and indication equipment

V1-G-2M-PVC Cable socket, M12, 4-pin, PVC cable

V1-W-2M-PVC Cable socket, M12, 4-pin, PVC cable

# Description of the sensor functions

This ultrasonic sensor features a four-pole temperature/TEACH-IN plug, that can be connected in four different positions. These have the following significance.

Plug position	Meaning
A1	TEACH-IN evaluation limit A1
A2	TEACH-IN evaluation limit A2
E2/E3	Switching: falling/rising ramp
Т	Temperature compensation

### **Description of the TEACH-IN procedure**

- Remove temperature plug

- Cut and restore supply voltage (e.g. by removing and replacing unit plug)

# TEACH-IN of evaluation limits A1 or A2

- Set object to desired evaluation limit
- Connect TEACH-IN plug in pos. A1 or A2
- Green LED flashes when object detected, red LED flashes when no object detected
- Pull the plug (the current object position is taught and stored when the plug is removed !!)

# **TEACH-IN** of output function

2

- Connect TEACH-IN plug in pos. E2/E3
- The yellow LED indicates the output function E2: falling ramp

Subject to reasonable modifications due to technical advances.

Copyright Pepperl+Fuchs, Printed in Germany


Date of issue: 2013-02-26 034020\_eng.xml

Release date: 2013-02-26 15:42

Pepperl+Fuchs Group • Tel.: Germany +49 621 776-0 • USA +1 330 4253555 • Singapore +65 67799091 • Internet http://www.pepperl-fuchs.com

# **Additional Information**

# Programmed analogue output function

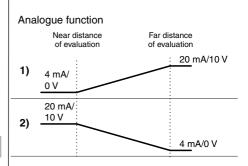

E3: rising ramp

- Pull the plug when the desired function is activated, otherwise reconnect the TEACH-IN plug in pos. E2/E3

- Pull plug

### Completing the TEACH-IN procedure

- Connect TEACH-IN plug in pos. T. Temperature compensation is now activated.

If the temperature plug has not been plugged in within 5 minutes, the sensor will return to normal mode without temperature compensation.

### **Default setting**

A1:	unusable area		
A2:	nominal sensing range		
Mode of operation:	rising ramp		


### **LED Displays**

Displays depending on position of temperature/ TEACH-IN plug	Green dual LED	Red dual LED	Yellow LED A1/ ~\_	Yellow LED A2/ _/ <sup>-</sup>
TEACH-IN evaluation limit A1 Object detected No object detected	flashes off	off flashes	flashes flashes	off off
TEACH-IN evaluation limit A2 Object detected No object detected	flashes off	off flashes	off off	flashes flashes
TEACH-IN mode of operation rising ramp falling ramp	on on	off off	flashes off	off flashes
Normal operation temperature compensated Plug pulled or shorted	on off	off on	on/off <sup>1)</sup>	on/off <sup>2)</sup>
Interference (e.g. compressed air)	off	flashes	previous state	previous state

<sup>1)</sup> on, when object in evaluation range

<sup>2)</sup> on, when object in detection range



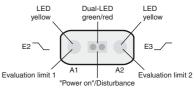

Copyright Pepperl+Fuchs, Printed in Germany