



Model Number


VAA-4EA-KF2-ZE/E2

Cabinet module
4 inputs (PNP) and 4 electronic outputs


Features

- Housing with removable, coded terminals
- AS-Interface connection via Power Rail
- Communication monitoring, turn-off
- Outputs loadable up to 8 A (per module)
- Inputs for 2- and 3-wire sensors
- Addressing jack
- Power supply of outputs from the external auxiliary voltage
- Power supply of inputs from the module
- Function display for bus, ext. auxiliary voltage, inputs and outputs


Dimensions

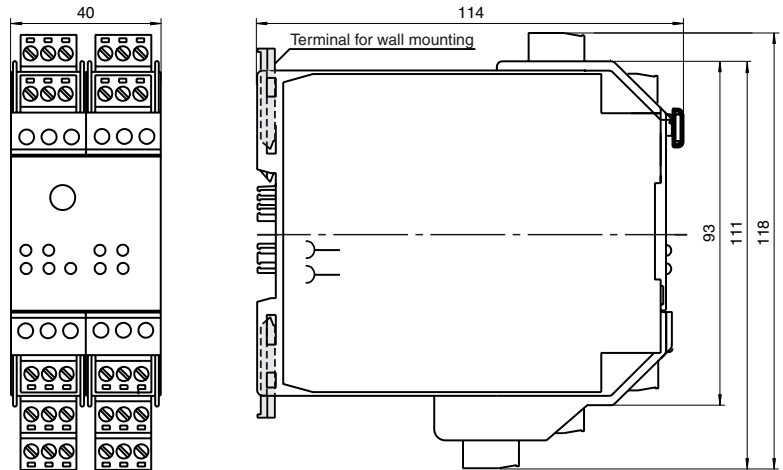

Electrical connection

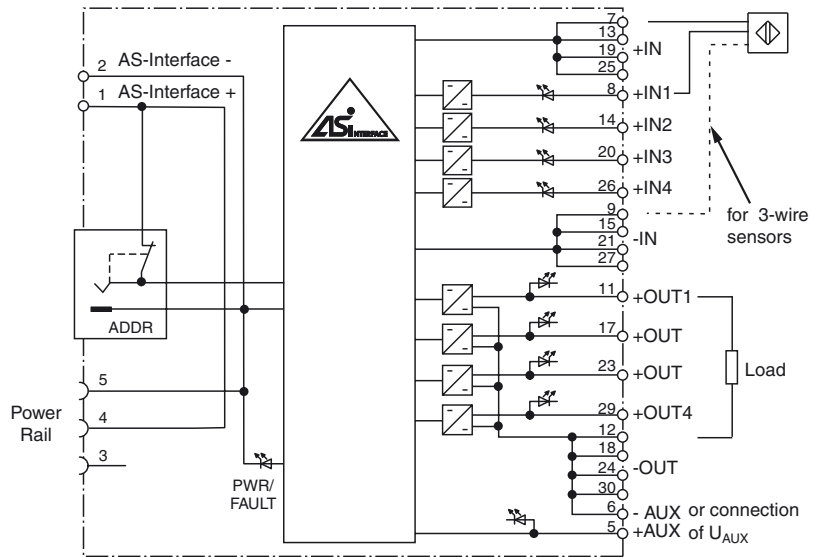

Indicating / Operating means

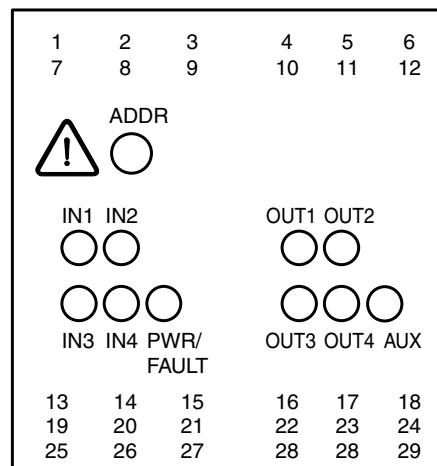

Release date: 2008-08-07 15:51 Date of issue: 2008-08-07 087526_ENG.xml

Technical data**General specifications**

| | |
|-------------------------------|----------------|
| Slave type | Standard slave |
| AS-Interface specification | V2.0 |
| Required master specification | ≥ V2.0 |
| UL File Number | E106378 |

Indicators/operating means

| | |
|---------------|--|
| LED PWR/FAULT | dual LED green/red green: AS-Interface voltage red: communication error or address 0 green/red flashing: overload sensor supply |
| LED AUX | ext. auxiliary voltage U_{AUX} ; LED green |
| LED IN | switching state (input); 4 LED yellow |
| LED OUT | Switching state (output); 4 LED yellow |

Electrical specifications

| | | |
|----------------------------|-----------|---|
| Auxiliary voltage (output) | U_{AUX} | 20 ... 30 V DC PELV |
| Protection class | | III |
| Rated operational voltage | U_e | 26.5 ... 31.6 V from AS-Interface |
| Rated operational current | I_e | ≤ 50 mA (without sensors) / max. 200 mA |

Input

| | |
|--------------------------|---|
| Number/Type | 4 inputs for 2- or 3-wire sensors (PNP), DC |
| Supply | from AS-Interface |
| Voltage | 21 ... 31 V DC |
| Current loading capacity | ≤ 150 mA, short-circuit protected |
| Switching point | |
| 0 (unattenuated) | ≤ 2 mA |
| 1 (attenuated) | ≥ 4 mA |

Output

| | |
|-------------|---|
| Number/Type | 4 electronic outputs, PNP |
| Supply | from external auxiliary voltage U_{AUX} |
| Current | 2 A per output, 8 A per module |
| Voltage | ≥ ($U_{AUX} - 0,5$ V) |

Programming instructions

| | |
|---------|-------|
| Profile | S-7.F |
| IO code | 7 |
| ID code | F |

| Data bits (function via AS-Interface) | input | output |
|---------------------------------------|-------|--------|
| D0 | IN1 | OUT1 |
| D1 | IN2 | OUT2 |
| D2 | IN3 | OUT3 |
| D3 | IN4 | OUT4 |

Parameter bits (programmable via AS-i) function

| | |
|----|--|
| P0 | communication monitoring P0 = 1 (basic setting), monitoring = ON, i.e. if communication fails, the outputs are de-energised P0 = 0, monitoring = OFF, if communication fails, the outputs maintain their condition |
| P1 | not used |
| P2 | not used |
| P3 | not used |

Ambient conditions

| | |
|---------------------|-------------------------------|
| Ambient temperature | -25 ... 70 °C (248 ... 343 K) |
| Storage temperature | -25 ... 85 °C (248 ... 358 K) |

Mechanical specifications

| | |
|-------------------|---------------------------------------|
| Protection degree | IP20 |
| Connection | removable coded terminals, Power Rail |
| Mass | 170 g |
| Mounting | DIN rail |

Compliance with standards and directives

| | |
|------------------------|---|
| Directive conformity | observe notices on the certificate of conformity. |
| Standard conformity | |
| Interference rejection | EN 61000-6-2:2001 |
| Emitted interference | EN 61000-6-4:2001 |
| AS-Interface | EN 50295:1999-10 |
| Input | EN 61131-2 |
| Protection degree | EN 60529 |

Function

The VAA-4EA-KF2-ZE/E2 AS-Interface coupling module is a cabinet module with 4 inputs and 4 electronic outputs. The VAA-4EA-KF2-ZE/E2 is installed by snapping it onto the 35 mm DIN Rail per EN 50022, with the integrated Power Rail.

When an AS-Interface master/gateway is used in the cabinet housing, the AS-Interface signal is automatically transmitted via the Power Rail. The connection of the module to the AS-Interface cable is accomplished by simply snapping it onto the DIN Rail.

The plug-in coded terminals of the inputs and outputs allow "online" maintenance, i. e. while the system is under power. The terminals are coded to prevent incorrect connections.

If a master/gateway other than the one in the cabinet housing is used, the connection to the AS-Interface cable is established via the same terminals. Once the AS-Interface cable has been connected to the terminals, the AS-Interface signal is automatically transferred to the Power Rail.

Power to the module and to the inputs is supplied by the AS-Interface cable and the outputs are powered externally (see connection diagram). A programming jack is available for address configuration.

Note:

The outputs are de-energised by means of an integrated watchdog, whenever communication on the AS-Interface cable is interrupted for more than 80 ms. The watchdog can be disabled by the parameter bit P0.

If a short circuit occurs in the sensor supply, the AS-Interface master will indicate an error and the module will disconnect from the AS-Interface.

Accessories**VBP-HH1-V3.0**

AS-Interface Handheld

VAZ-PK-1,5M-V1-G

Connection cable module/hand-held programming device

UPR-05

Universal Power Rail

UPR-E

End cap