



Comfort series

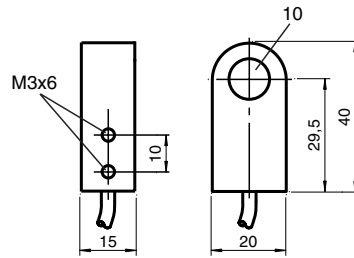

CE 0102

<b>General specifications</b>	
Switching element function	NAMUR NC
Inside diameter	10 mm
Installation	
Measuring cone	Ø 1/8", material SS18
<b>Nominal ratings</b>	
Nominal voltage $U_o$	8 V
Operating voltage $U_B$	5 ... 25 V
Switching frequency $f$	0 ... 2000 Hz
Current consumption	
Measuring plate not detected	$\geq 3$ mA
Measuring plate detected	$\leq 1$ mA
<b>Standard conformity</b>	
EMC in accordance with	IEC / EN 60947-5-2:2004
Standards	DIN EN 60947-5-6 (NAMUR)
<b>Ambient conditions</b>	
Ambient temperature	10 ... 40 °C (283 ... 313 K)
<b>Mechanical specifications</b>	
Connection type	2 m, PVC cable
Core cross-section	0.14 mm <sup>2</sup>
Housing material	PBT
Protection degree	IP67
<b>General information</b>	
Use in the hazardous area	see instruction manuals
Category	2G

Connection type:

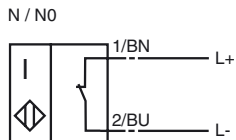

## ATEX 2G

Instruction

## Device category 2G

Directive conformity

Standard conformity

CE symbol

Ex-identification

EC-Type Examination Certificate

Appropriate type

Effective internal capacitance  $C_i$

Effective internal inductance  $L_i$

General

Highest permissible ambient temperature

Installation, Commissioning

Maintenance

[Fett]Special conditions

## Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist

94/9/EG

EN 50014:1997, EN 50020:1994

Ignition protection "Intrinsic safety"

Use is restricted to the following stated conditions

CE 0102

II 2G EEx ia IIC T6

PTB 99 ATEX 2128 X

RJ10-N...

$\leq 30$  nF ; a cable length of 10 m is considered.

$\leq 20$   $\mu$ H ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EU prototype test certificate must be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EU prototype test certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.