

CE


Model Number

NBN8-18GM60-A2-V1-3D

Features


- **Basic series** •
- 8 mm not embeddable





Accessories

BF 18 Mounting flange **Dimensions**

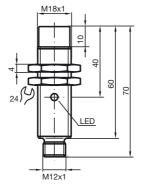

Technical Data

General specifications		
Switching element function		PNP Antivalent
Rated operating distance	s _n	8 mm
Installation		not embeddable
Output polarity		DC
Assured operating distance	sa	0 6.48 mm
Reduction factor r _{Al}		0.45
Reduction factor r _{Cu}		0.4
Reduction factor r _{V2A}		0.75
Reduction factor r _{St37}		
Nominal ratings		
Operating voltage	UB	10 30 V
Switching frequency	f	0 700 Hz
Reverse polarity protection		protected against reverse polarity
Short-circuit protection		pulsing
Voltage drop	Ud	≤ 3 V
Operating current	۱ _L	0 200 mA
Off-state current	l _r	0 0.5 mA typ.
No-load supply current	I ₀	≤ 20 mA
Indication of the switching state		LED, yellow
Standard conformity		
Standards		IEC / EN 60947-5-2:2004
Ambient conditions		
Ambient temperature		-25 70 °C (248 343 K)
Mechanical specifications		
Connection type		V1-connector
Housing material		brass, nickel-plated
Sensing face		PBT
Protection degree		IP67
General information		
Use in the hazardous area		see instruction manuals
Category		3D

Release date: 2008-10-10 12:22 Date of issue: 2008-10-10 127790_ENG.xml

Subject to modifications without notice Pepperl+Fuchs Group

www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



ATEX 3D	
Instruction	Manual electrical apparatus for hazardous areas
Device category 3D	for use in hazardous areas with non-conducting combustible dust
Directive conformity	94/9/EG
Standard conformity	EN 50281-1-1 Protection via housing Use is restricted to the following stated conditions
CE symbol	CE
Ex-identification	🐼 II 3D IP67 T 96 °C X The Ex-significant identification is on the enclosed adhesive label
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction! The special conditions must be adhered to!
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The adhesive label provided must be affixed in the immediate vicinity of the sensor! The surface to which the label is applied must be clean, flat and free from grease! The affixed adhesive label must be readable and durable, taking account of the possibility of chemical corrosion!
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
[Fett]Special conditions	
Maximum operating current I_L	The maximum permissible load current must be restricted to the values given in the following list. High load currents and load short-circuits are not permitted.
Maximum operating voltage UBmax	The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Toleran- ces are not permitted.
Maximum heating (Temperature rise)	dependant of the load current I _L and the max. operating voltage U _{Bmax.} Information can be taken from the following list. The maximum surface temperature at maximum ambient temperature is given in the Ex identification of the apparatus.
at U _{Bmax} =30 V, I _L =200 mA	26 °C
at U _{Bmax} =30 V, I _L =100 mA	22 °C
at U _{Bmax} =30 V, I _L =50 mA	21 °C
at U _{Bmax} =30 V, I _L =25 mA	20 °C
Plug connector	The plug connector must not be disconnected under voltage. The proximity switch is marked as follows: "DO NOT DIS- CONNECT UNDER VOLTAGE!" When the plug connector is disconnected the ingress of dirt into the inner areas (i.e. the areas, which are not accessible in the plugged-in condition) must be prevented. The plug connection can only be separated using a tool. This is achieved by using the locking protection V1-Clip (Moun- ting accessory from Pepperl + Fuchs).
Protection from mechanical danger	The sensor must not be mechanically damaged.
Electrostatic charging	Electrostatic charges on the metal housing components must be avoided. Dangerous electrostatic charges on the metal housing components can be avoided by incorporating these components in the equipotential bonding.

